 


ProctorSilex®

COMMERCIAL

Tested.Proven.

- GB** 40/60-Cup (9/14 L) Rice Cooker
Operation Manual – Original (2)
- FR** Cuisieur pour le riz de 40/60 tasses (9/14 L)
Manuel d'utilisation (6)
- ES** Arrocera para 40/60 tazas (9/14 L)
Manual de Operación (10)
- PT** Panela de Cozer Arroz para 40/60 Copos (9/14 L)
Manual do Utilizador (14)
- IT** Cuociriso da 40/60 tazze (9/14 L)
Manuale per il funzionamento (18)
- DE** Reiskocher (40/60 Messbecher bzw. 9/14 l)
Bedienungsanleitung (22)
- NL** 40/60-kop (9/14 L) Rijstkoker
Gebruiksaanwijzing (26)
- DK** Riskoger til 9,5/14,2 l ris
Betjeningsvejledning (30)
- SE** 40/60-koppars (9,5/14,2 liter) riskokare
Bruksanvisning (34)
- NO** Riskoker for 40/60 kopper (9,5/14,2 liter)
Brukerhåndbok (38)
- GR** Βραστήρας ρυζιού για 40/60 μερίδες (9-14 λίτρα)
Εγχειρίδιο χειρισμού (42)
- RU** Рисаварка на 40-60 чашек (9-14 л.)
Руководство по эксплуатации (46)
- TU** 9/14 Litre Pilav Makinesi
Çalıştırma Kılavuzu (50)
- CN** 40/60 杯 (9/14 L) 容量的电饭煲
操作手册 (54)
- KR** 40/60 컵 (9/14 L) 밥솥
사용 설명서 (58)
- SA** جهاز طهي الأرز بكوب (9/14 لتر)
دليل التشغيل (65)

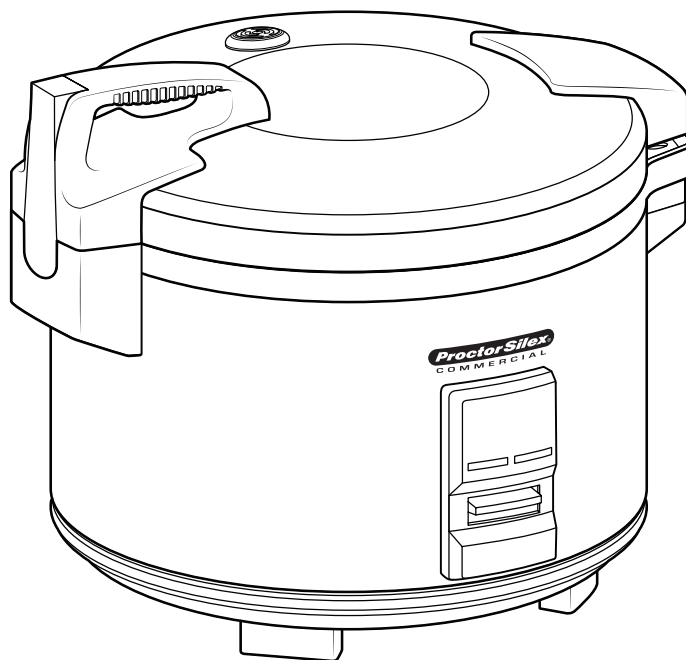

37540-CE (TYPE GR04),
37560R-CE (TYPE GR05) Series

840241300
8/14

For more Good Thinking® visit www.commercial.hamiltonbeach.com

 
IMPORTANT SAFETY INSTRUCTIONS

WARNING – When using electrical appliances, basic safety precautions should be followed, including the following:

- Read the Operation Manual before using rice cooker. Keep Operation Manual handy.
- Before first use, wash cooking pot and removable lid in hot, soapy water. Do NOT place in dishwasher.
- Plug into a grounded outlet.
- Do not remove ground.
- Do not use an adapter.
- Do not use an extension cord.
- Disconnect power before cleaning or servicing.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- Do not touch hot surfaces. Use handles or knobs. Use pot holders when removing hot containers.
- To reduce risk of personal injury, unplug cord from outlet when not in use, and before putting on or taking off parts.
- Unplug the rice cooker and inspect the power cord insulation for cracks on a weekly basis. Refer to "Technical Services" for repair or replacement.
- To protect against electrical shock, do not immerse cord, plug, or base in water or any other liquid.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot food, water, or other hot liquids. Do not use lid handle to carry cooker when contents are hot.
- To disconnect, make sure the cook switch is pushed up to the "up" position; then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Lift and open cover carefully to avoid scalding, and allow water to drip into the cooker.
- **WARNING!** Risk of electric shock. Cook only in removable container.
- Do not place the unit directly under cabinets when operating as this product produces large amounts of steam. Avoid reaching over the product when operating.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. If the supply cord of this appliance is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person. Refer to "Technical Services" for instructions on examination, repair, or electrical or mechanical adjustment.
- **UK ONLY:** If fitted with a non-rewirable U.K. plug, the 13 amp fuse approved by ASTA to be B.S. 1362 must be used. If you need a replacement fuse carrier, it must be replaced with the same colour coded carrier with the same markings. Fuse covers and carriers can be obtained from approved service agents.

– SAVE THESE INSTRUCTIONS –

This appliance is intended for professional use and should be used by trained and qualified personnel only.

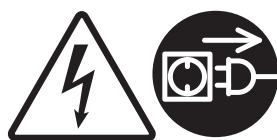

Electrical Shock Hazard
Disconnect power before cleaning base.
Failure to follow these instructions can result in death or electrical shock.



Burn Hazard
Never use lid handle to carry cooker when contents are hot.
Failure to follow these instructions can result in burns or serious injury.



Electrical Shock Hazard
Plug into a grounded outlet.
Do not remove ground.
Do not use an adapter.
Do not use an extension cord.
Failure to follow these instructions can result in death, fire, or electrical shock.



Electrical Shock Hazard
Cook only in removable cooking pot.
Never place water or food directly into base.
Failure to follow these instructions can result in death, fire, or electrical shock.

Sanitizing

The sanitizing solution should consist of 1 Tablespoon (15 ml) of bleach per 1 gallon (3.8 liters) of clean, cool water (60°F/16°C) mixed according to the instructions on the bleach.

1. Immerse cooking pot, removable lid, rice paddle, and measuring cup in sanitizing solution for 2 minutes.
2. Allow to air dry.
3. Wipe down all areas of inner lid with a clean paper towel and sanitizing solution.
4. Rinse with clean water before using.



The EC declaration of conformity for this appliance is available in the Technical Support section of our website www.commercial.hamiltonbeach.com.

FOR COMMERCIAL USE ONLY

Technical Services

 
 
 
For assistance or replacement parts, call our
Technical Services number:
866-285-1087 or +910-693-4277
www.commercial.hamiltonbeach.com



Recycling the Product at the End of Its Service Life


 




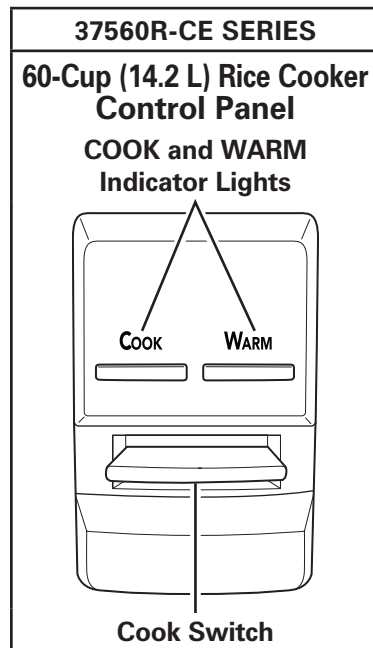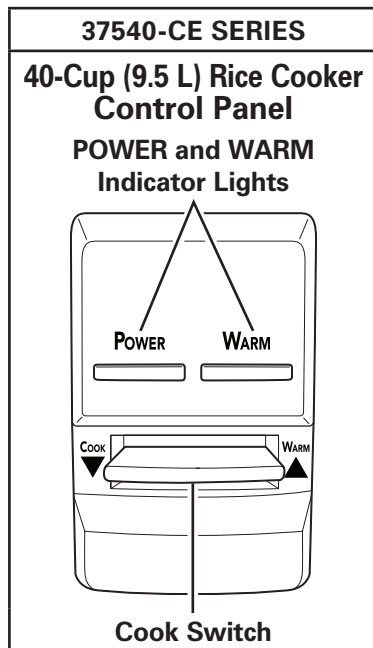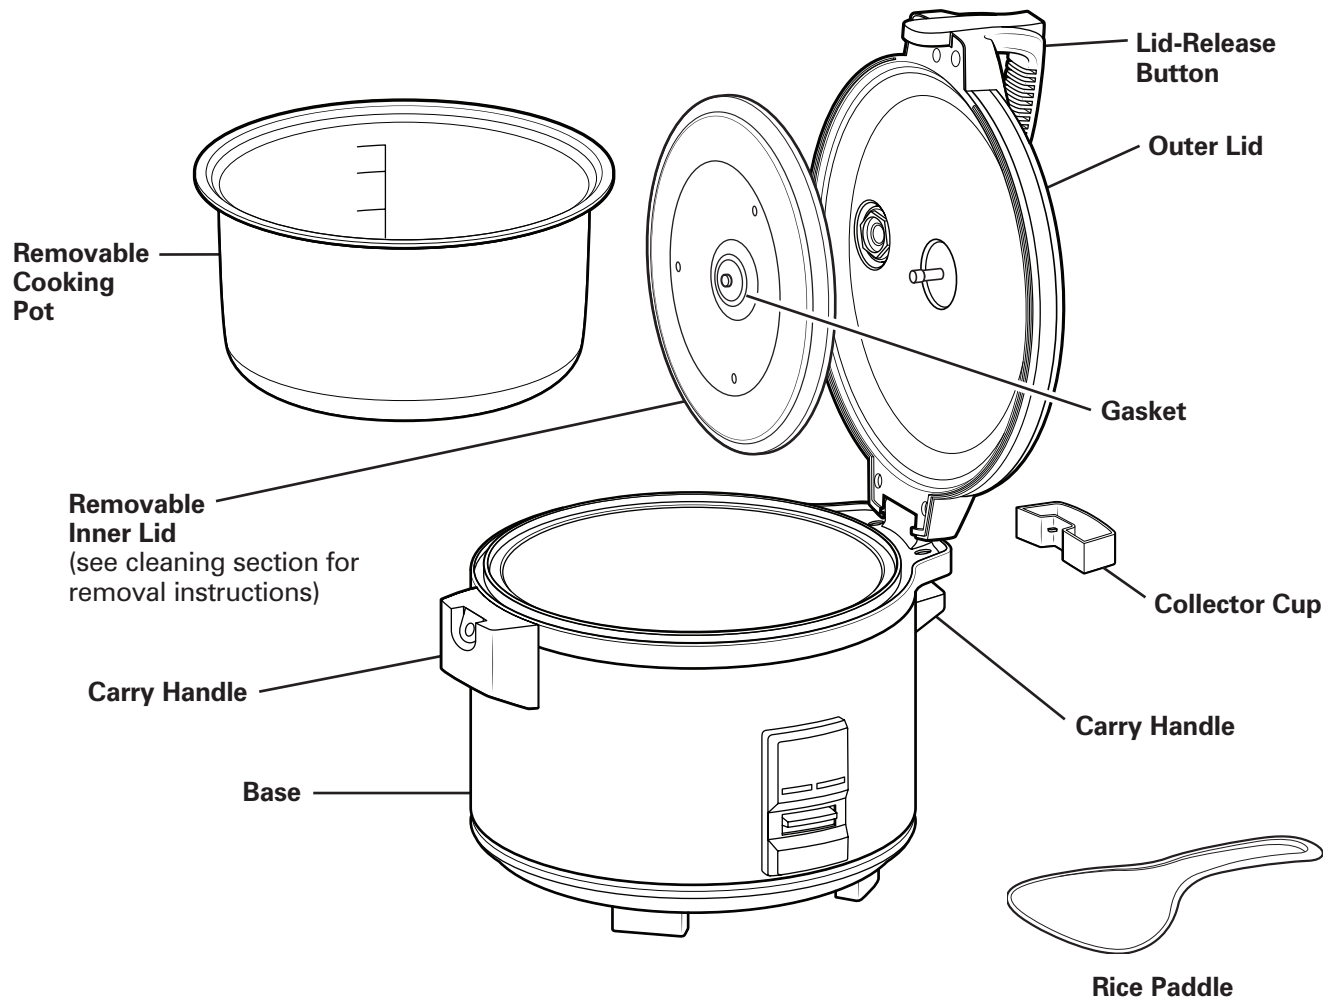



The wheeled bin symbol marked on this appliance signifies that this appliance should be taken over by a selective collection system conforming to the Guideline 2002/96/EC (WEEE) so that it can be either recycled or dismantled in order to reduce any impact to the environment. The user is responsible for returning the product to the appropriate collection facility, as specified by your local code. For additional information regarding applicable local laws, please contact the municipal facility and/or local distributor.

Parts and Features





NOTE: Clean rice cooker after each use to prevent the accumulation of dirt and debris. Sanitize daily.

37540-CE SERIES 40-CUP (9.5 L)	37560R-CE SERIES 60-CUP (14.2 L)	 STEP 1 UNCOOKED WHITE RICE	 STEP 2 FILL WATER TO LINE ON COOKING POT		YIELD (Standard 8-oz Dry Measure Cup)	 APPROXIMATE COOK TIME 40-CUP (9.5 L)	 APPROXIMATE COOK TIME 60-CUP (14.2 L)
			40-CUP (9.5 L)	60-CUP (14.2 L)			
X			5	NA	10 Cups (2.4 L)	20–25 Minutes	NA
X	X		10	10	20 Cups (4.7 L)	25–30 Minutes	25–30 Minutes
X	X		15	15	30 Cups (7.1 L)	30–35 Minutes	25–30 Minutes
X	X		20	20	40 Cups (9.5 L)	35–40 Minutes	30–35 Minutes
	X		NA	25	50 Cups (11.8 L)	NA	40–45 Minutes
	X		NA	30	60 Cups (14.2 L)	NA	45–50 Minutes

TIPS:

- Cook times and water levels will vary with other varieties of rice.
- The most important detail when cooking rice is the ratio of rice to water. Please refer to rice package directions.
- To prevent overflow and/or overheating, do not exceed the Max Fill line when both rice and water are added to cooking pot.
- When cooking oatmeal, grits, polenta, or macaroni, do not fill more than halfway since contents will expand and could boil over.
- Brown rice takes more water to cook and cooking time is longer.

Troubleshooting Guide

Problem . . .	Solution . . .
Cooker doesn't turn on.	• Cooker is not plugged in. Make sure rice cooker is plugged into a properly operating electrical outlet.
Rice is not cooked.	• Not enough water/cooking liquid. See Rice Cooking Chart for more information. • Carefully place cooking pot straight down in base. Make sure cooking pot is securely seated by rotating the pot left and right. NOTE: If cooking pot is bent or warped, it will not seat properly in base and, therefore, will not cook rice correctly. To replace cooking pot, call the toll-free customer assistance number listed on page 3 of this guide.
Rice is mushy.	• Too much liquid added to cooking pot. Reduce liquid.