


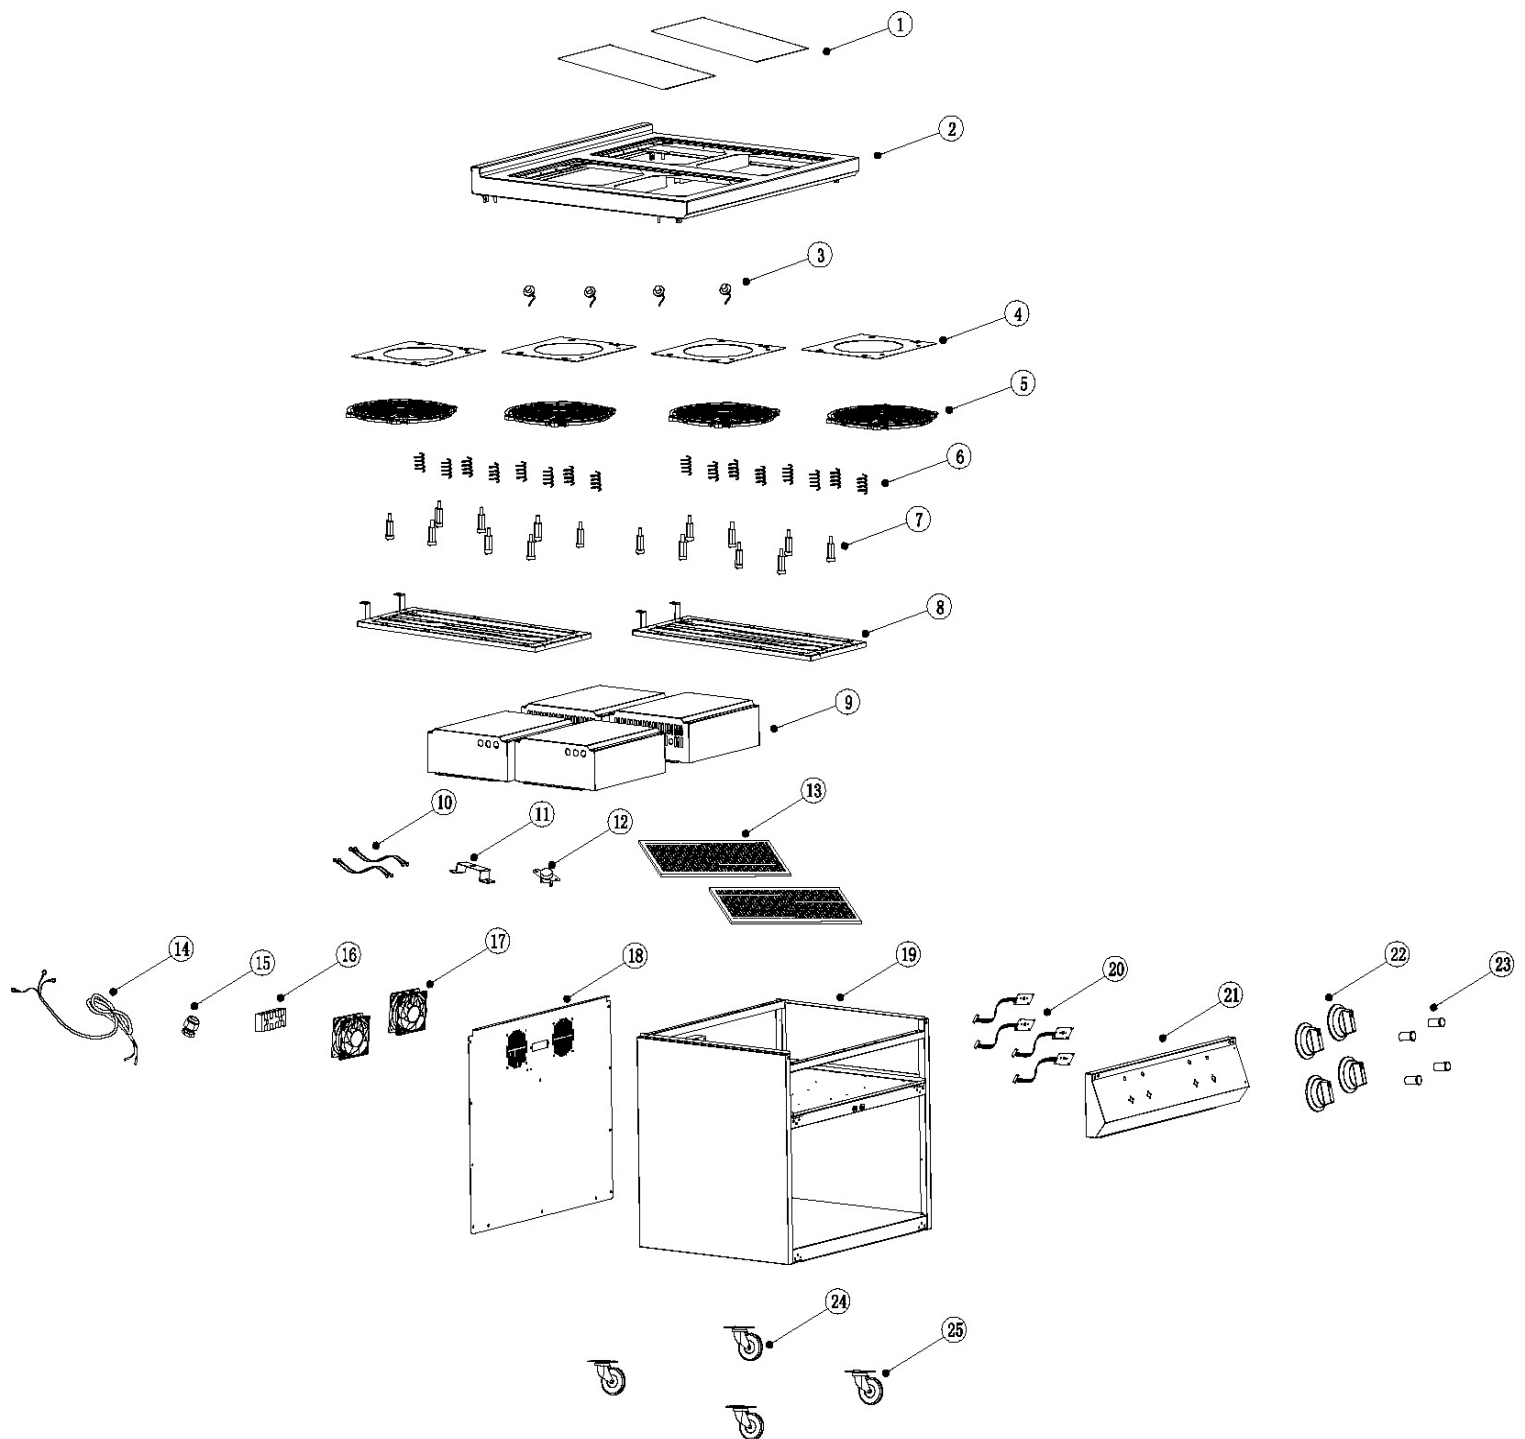

Machine	Explode	Code	Description
Buffalo Freestanding Induction Cooker Four Zones	1	AN876	Ceramic Glass
Buffalo Freestanding Induction Cooker Four Zones	2		Stainless Steel Top Cover
Buffalo Freestanding Induction Cooker Four Zones	3	AN877	Sensor 7X-A-A
Buffalo Freestanding Induction Cooker Four Zones	3	AT086	Sensor 8B-A
Buffalo Freestanding Induction Cooker Four Zones	4		Alu Sheet for Coil
Buffalo Freestanding Induction Cooker Four Zones	5	AN878	Coil
Buffalo Freestanding Induction Cooker Four Zones	6	AN879	Spring
Buffalo Freestanding Induction Cooker Four Zones	7	AN880	Heating Coil Bracket
Buffalo Freestanding Induction Cooker Four Zones	8	AN881	Iron Support for Heating Coil
Buffalo Freestanding Induction Cooker Four Zones	9	AN882	PCB Box
Buffalo Freestanding Induction Cooker Four Zones	10	AN883	Connecting Cable
Buffalo Freestanding Induction Cooker Four Zones	11	AN884	Metal Bracket
Buffalo Freestanding Induction Cooker Four Zones	12	AN885	Kick Thermostat
Buffalo Freestanding Induction Cooker Four Zones	13	AN886	Air Filter
Buffalo Freestanding Induction Cooker Four Zones	14	AT274	UK Power Cord
Buffalo Freestanding Induction Cooker Four Zones	15		Fit for Power Cord
Buffalo Freestanding Induction Cooker Four Zones	16		Patch Board for Power Cord
Buffalo Freestanding Induction Cooker Four Zones	17	AN887	Fan
Buffalo Freestanding Induction Cooker Four Zones	18		Iron Back Plate
Buffalo Freestanding Induction Cooker Four Zones	19		Stainless Steel Housing
Buffalo Freestanding Induction Cooker Four Zones	20	AP777	Control Panel
Buffalo Freestanding Induction Cooker Four Zones	21		Control Panel Metal Box
Buffalo Freestanding Induction Cooker Four Zones	22	AN888	Knob
Buffalo Freestanding Induction Cooker Four Zones	23	AN889	Indicator Light
Buffalo Freestanding Induction Cooker Four Zones	24	AN890	Rear Castor
Buffalo Freestanding Induction Cooker Four Zones	25		Front Castor (With Brake)