



Chefmaster Coffee Percolator Instruction Manual

Model

HEF571 – 15ltr Manual Fill Coffee Percolator Double Walled

Thank you for purchasing your Chefmaster Coffee Percolator. To make full use of the product please read this manual carefully before using the product and keep it safe for future reference.

Safety Tips

- If you find any damage when the product is unpacked, contact your Chefmaster supplier within 24 hours of receipt of goods
- Always position on a flat stable surface
- Repairs should always be carried out by a qualified technician
- Do not overfill this product, keep water below the MAX level
- Do not switch this product on when is it empty
- Do not move this product when it contains hot liquid
- Do not use this product outside
- Do not carry when hot
- Do not touch the urn or remove the lid when liquid inside is still hot
- Always switch off and unplug the unit before cleaning
- Move by holding the handles
- Always store flat and do no store products on top of it
- If the power cord becomes damaged it must be replaced by a qualified technician
- This product is not designed to be used by persons with reduced physical or mental capabilities, lack of experience or knowledge, unless they are given suitable supervision, this includes children.

Pack Contents

- 1 x Chefmaster Coffee Percolator
- 1 x Filter Basket, Basket Tray, Basket Cover & Percolator Tube

1. Cover
2. Urn
3. Gauge
4. Tap
5. Power button
6. Indicator
7. Drip tray
8. Basket cover
9. Filter basket
10. Basket tray
11. Percolator tube



Before Using For The First Time

- Clean the interior of Coffee Percolator & Accessories with warm soapy water and rinse thoroughly

Operation

- Remove all packaging including all protective plastic, from your Chefmaster Coffee Percolator
- Position on a flat surface
- Fill the urn with cool water until at least half way
- Fill the Filter basket with medium or percolator ground coffee. Suggest to use 350g – 500g coffee for 10 litres of water. Adjust the amount of coffee use according to your own preference
- Slide the Basket tray onto the Percolator tube & place the foot of the tube centrally into the well inside the urn, then slide the Filter basket with cover onto the Percolator tube
- Replace the lid
- Plug the unit into mains and turn it on
- The brewing process is completed when green light comes on. The percolator will start to keep warm automatically
- The coffee is now ready to be served by pulling the tap towards you. Move the tap to the closed position to stop.
- Prevent boil dry & always switch off the product when about 5 cups of coffee are left

Cleaning & Maintenance

- Before cleaning disconnect the Coffee Percolator from the electricity supply
- Clean the interior of Coffee Percolator & Accessories with warm soapy water and rinse thoroughly. The exterior of urn should only be cleaned with damp cloth
- DO NOT submerge the Coffee Percolator in water or use water sprays to clean it
- Always clean your Chefmaster Coffee Percolator daily

De-scaling

In hard water area's lime scale can build up, to de-scale the unit -

- Add de-scaler and water to the Coffee Percolator as the per the instructions on the de-scaler
- Clean the interior carefully with a soft brush
- Remove the water and de-scaler solution from the Coffee Percolator

- Fill with clean water and flush the interior of urn thoroughly to remove and residue
- The percolator is now ready to use again
- Chefmaster recommend that the boiler is de-scaled every 3 months

FAILURE TO DE-SCALE THIS BOILER MAY CAUSE DAMAGE, THIS IS NOT COVERED BY THE WARRANTY

Troubleshooting

Fault	Possible Cause	Solution
The power light or indicator light is not on	The unit is not switched on The plug or lead are damaged The fuse has blown	Check the unit is plugged in and switched on Contact your Chefmaster distributor Replace the fuse
There is leak from the tap	Loose tap	Tighten the tap handle
The boiler switched off automatically with orange light on	Overheat protection is triggered	The boiler will switch on again automatically once cooled down
The unit is on, water is not heating or does not reach selected temperature	Thermostat is too low The thermostat or heating element has failed	Adjust thermostat Contact your Chefmaster distributor

Transportation and Storage

Please handle your Coffee Percolator with care to prevent any damage to the unit and internal parts. The Coffee Percolator should be stored somewhere which is ventilation and non-corrosive gas.

Do not store any flammable objects near the equipment.

Technical Information

HEF571 – 15ltr Manual Fill Coffee Percolator

Voltage 220-240v 50/60Hz

Power 1.5kW

Weight 7.5kg

Dimensions 386 x 393 x 641 mm

- Chefmaster Coffee Percolators are supplied with a 3 pin plug and lead with a 13 amp fuse
- Appliance must be earthed
- If in doubt contact a qualified electrician or your Chefmaster distributor

Disposal



Under WEEE regulations this product must not be disposed of as household waste. To prevent damage to the environment and humans this product must be disposed of in an approved and environmentally friendly recycling process. For more information on how to dispose of this correctly please contact your Chefmaster distributor or local authority responsible for waste disposal.

Compliance



All Chefmaster parts and products have undergone a stringent testing process to ensure that they comply with all European standards and specifications. All Chefmaster products carry the CE approval symbol.