



INSTRUCTIONS REF :IN111
ISSUE NUMBER : 1
DATE 21/02/06
PAGE 1 OF 5

TELEPHONE: SERVICE (44) 01332 875665
FAX: SERVICE (44) 01332 875536

- **INSTALLATION INSTRUCTIONS**
- **SAFETY INSTRUCTIONS**
- **USER INSTRUCTIONS**

CABINETS & PLATE WARMERS

MODEL: 1832/1863/1869/1868/1888/9214



INSTRUCTIONS REF :IN111
ISSUE NUMBER : 1
DATE 21/02/06

PAGE 2 OF 5

TELEPHONE: SERVICE (44) 01332 875665
FAX: SERVICE (44) 01332 875536

IMPORTANT

Please read these instructions before you attempt to use the equipment. Keep these instructions for future reference.

WARNING

To avoid scratching the highly polished exterior surface of this equipment whilst in transit, the protective film on the exterior surfaces has NOT been removed.

It is IMPORTANT that this protective film is peeled off before the equipment is used.

WARNING

1. All electrical appliances/parts must be earthed.
2. No user-serviceable parts.
3. Isolate power supply before carrying out any installation work.

INSTALLATION

1. Choose a suitable site for your machine taking into consideration its, use, and any heat that may be generated whilst in service.
2. Remove all protect film and packing material, and inspect for any damage which may effect the machine's electrical safety.
3. All appliances with an electrical loading above 3 kilowatts must be connected to a suitable supply by qualified electrician, who should ensure that
 - a) Precaution is taken during installation regarding leakage current,
 - b) The means of isolation has a contact separation of at least 3mm on all poles, and
 - c) It is installed in accordance with Health and Safety at Work Act, BS Codes of Practice, IEE Wiring Regulations and Building and Local Authority Standards.



INSTRUCTIONS REF :IN111
ISSUE NUMBER : 1
DATE 21/02/06

PAGE 3 OF 5

TELEPHONE: SERVICE (44) 01332 875665
FAX: SERVICE (44) 01332 875536

ENSURE THAT ALL THE SHELVES ARE FIRMLY IN PLACE

OPERATING

1. Switch on power supply, the red lamp will indicate the power is ON
2. Turn the temperature dial to the required heat setting, the green lamp will show indicated power to the element and will extinguish when the desired temperature is reached.

This procedure will be repeated automatically as the thermostat maintains a constant temperature.

For the best results from your new plate warmer, pre-heat the machine by turning the thermostat to maximum (80°C) for approximately 20minutes. We recommend that you load each shelf with a maximum of 20 or 40 plates, depending on the width of the machine, giving a total machine load of 80 or 160 plates. Anything above our advised limits may reduce the efficiency of this machine

Fitting a Different Plug

Should you need to replace the plug connect the wires as follows:

Green/Yellow wire	To EARTH terminal (⊥)
Brown Wire	To LIVE (L) terminal of new plug
Blue Wire	To NEUTRAL (N) terminal of the new plug

Always fit the same value fuses as that originally supplied with your appliance. Only use BS1362 approved fuses. As a guide only, appliances under 700w can have a 3 amp fuse (red) and all others should have a 13 amp fuse (brown).

When disposing of an old plug (particularly the moulded type which has been cut from the mains cord) always remove the fuse as the plug could be dangerous if ever inserted into a live socket.



INSTRUCTIONS REF :IN111
ISSUE NUMBER : 1
DATE 21/02/06

PAGE 4 OF 5

TELEPHONE: SERVICE (44) 01332 875665
FAX: SERVICE (44) 01332 875536

Cables

Appliances exceeding 3kw which are connected to a single phase supply should be wired using 6mm² twin-and-earth flat cable, code designation 6242Y.

To connect a 3 phase and neutral supply, 5 wire 1.5mm² cable should be used with the code designation HO5RRF. All flexible cables must comply to BS6500.

Access to the supply terminals at appliances exceeding 3kw is gained by the removal of the panel at the rear of the appliance by four self-tapping screws. Pass the mains cable through the hole in the panel and connect to the terminal block: see diagram on the reverse of panel for the method which applies to your supply. After connection, ensure the back panel is firmly secured back into position and the nylon cable is fitted.

Details of the machine current requirements are given on the rating label on the rear, and it must be ensured that the correct type and rating or circuit breaker is used as protection for your appliance.

Do Not Plug In Or Switch On Yet

Read the operating instructions for your appliance to make yourself familiar with its use. Also, make sure whoever is operating the appliance is fully conversant with its working and aware of the dangers of incorrect operation, or cleaning, especially the risk of burns and scalds from the cooking medium, hot water or cooking plates.

We advise that these appliances should not be left unattended when switched on.



INSTRUCTIONS REF :IN111
ISSUE NUMBER : 1
DATE 21/02/06

TELEPHONE: SERVICE (44) 01332 875665
FAX: SERVICE (44) 01332 875536

Page 5 of 5

Declaration of conformity CE

- This product has been designed, constructed and marketed in compliance with:
 - safety requirements of EEC Directive “Gas” 90/396;
 - safety requirements of EEC Directive “Low voltage” 73/23;
 - protection requirements of EEC Directive 93/68.
- This product is suitable for contact with foodstuffs, and complies with EEC Directive 89/109.
- This product has been designed to be used only for cooking. Any other use (such as heating a room) is improper and dangerous.
- This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).
By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- A symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



INSTRUCTIONS REF :IN111
ISSUE NUMBER : 1
DATE 21/02/06

TELEPHONE: SERVICE (44) 01332 875665
FAX: SERVICE (44) 01332 875536

Parry Catering recognises our obligations to the EU DIRECTIVE covering the waste disposal of electrical and electronic equipment (WEEE), Parry Catering are committed to this policy in order to help conserve the environment.

At the end of this unit's life you **MUST** dispose of it in an approved manner. You **MUST** not discard the unit or place it in the refuse bin.

You have several options:

- a) Take the unit to an approved WEEE scheme company, there will be one in your area.
- b) Take the unit to an approved waste disposal site; many sites are managed by your local authority.
- c) Contact the unit's manufacturer, importer or their agent the contact details will be on the unit.

There will probably be a charge for this service which will depend on the physical location of the unit and size you will be given a collection price for a curb side collection based on commercial rates prevailing at the time.

It should be noted that the unit to be collected should be suitably packed and sealed to prevent dangerous gases and fluids from escaping. The condition of the unit must also be clean to comply with health and safety regulations.