



Chefmaster Bain Marie Instruction Manual

Models

**HEF575 1/1 GN NO TAP WITH OPEN WELL
HEF576 1/1 GN NO TAP WITH CONTAINERS
HEA758 1/1 GN WITH TAP –NO CONTAINERS
HEF577 1/1 GN WITH TAP WITH CONTAINERS**

Thank you for purchasing your Chefmaster Bain Marie. To make full use of the product please read this manual carefully before using the product and keep it safe for future reference.

Safety Tips

- If you find any damage when the product is unpacked, contact your Chefmaster supplier within 24 hours of receipt of goods
- Always position on a flat stable surface
- Repairs should always be carried out by a qualified technician
- Do not overfill this product, keep water below the MAX level
- Do not allow water level to drop below the MIN level
- Do not move this product when it contains hot liquid
- Do not use this product outside
- Do not carry when hot
- Always switch off and unplug the unit before cleaning
- Move by holding the product by the base
- Always store flat and do not store products on top of it
- If the power cord becomes damaged it must be replaced by a qualified technician
- This product is not designed to be used by persons with reduced physical or mental capabilities, lack of experience or knowledge, unless they are given suitable supervision, this includes children.


Pack Contents

- HEA758: 1 x Chefmaster Bain Marie with Drain Tap
- HEF575: 1 x Chefmaster Bain Marie
- HEF576/77: 1 x Chefmaster Bain Marie
2 x 1/3 150mm GN pan with lid
2 x 1/6 150mm GN pan with lid
2 x Adaptive bar

Before Use

- Remove all packaging including all protective plastic, from your Chefmaster Bain Marie
- Position on a flat surface
- Fill with water to below the MAX level
- Plug your Chefmaster Bain Marie into the mains
- The bain marie will now be ready to turn on
- For HEF576/77, clean the lids & pans with warm soapy water before use

Operation

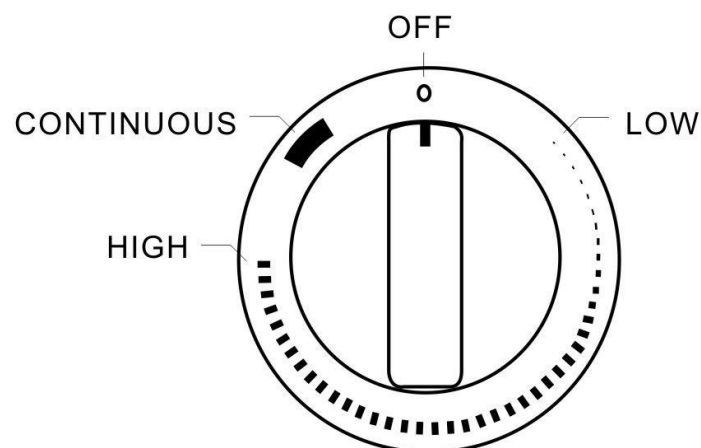

- Ensure the bain marie is plugged in and the power is on
- Select the setting you require
- Drain water with the exterior tap after use.
For models come without taps - unplug the unit & cool down, then remove the pans & place it by the edge of the sink and tilt the base of the unit towards the sink until fully drained.

Note: This unit has a re-set button on the base. If the temperature of the unit is too high, it will cut out. Please wait for the unit to cool down, press the re-set button and the unit will function as normal.

Cleaning & Maintenance

- Before cleaning disconnect the bain marie from the electricity supply.
- The bain marie should be cleaned with a warm, damp cloth
- DO NOT submerge the bain marie in water or use water sprays to clean it
- Always clean your Chefmaster Bain Marie daily
- It is recommended that fresh water is used every day

Troubleshooting

Fault	Possible Cause	Solution
The power indicator light is not on	The unit is not switched on The plug or lead are damaged The fuse has blown	Check the unit is plugged in and switched on Contact your Chefmaster distributor Replace the fuse
The unit is on, water is not heating	Thermostat is too low Check water level The heating element has failed	Adjust thermostat Add more water if necessary Contact your Chefmaster distributor

Transportation and Storage

Please handle your bain marie with care to prevent any damage to the unit and internal parts. The bain marie should be stored somewhere which is ventilation and non-corrosive gas.

Do not store any flammable objects near the equipment.

Technical Information

HEA758 – 1/1 GN Bain Marie with Drain Tap

Voltage 220~240v 50/60Hz

Power 1.2Kw

Weight 8kg

1/1 GN Open well with drain tap

Dimensions 355 x 555 x 255

HEF575 – 1/1 GN Bain Marie

Voltage 220~240v 50/60Hz

Power 1.2Kw

Weight 8kg

1/1 GN Open well

Dimensions 355 x 555 x 255

HEF576 – 1/1 GN Bain Marie with Pans

Voltage 220~240v 50/60Hz

Power 1.2Kw

Weight 8kg / 10.5kg with pans

1/1 GN Open well

Dimensions 355 x 555 x 255

HEF577 – 1/1 GN Bain Marie with Pans & Drain Tap

Voltage 220~240v 50/60Hz

Power 1.2Kw

Weight 8kg / 10.5kg with pans

1/1 GN Open well

Dimensions 355 x 555 x 255

- Chefmaster Bain Marie is supplied with a 3 pin plug and lead with a 13 amp fuse
- Appliance must be earthed
- If in doubt contact a qualified electrician or your Chefmaster distributor

Disposal



Under WEEE regulations this product must not be disposed of as household waste. To prevent damage to the environment and humans this product must be disposed of in an approved and environmentally friendly recycling process. For more information on how to dispose of this correctly please contact your Chefmaster distributor or local authority responsible for waste disposal.

Compliance



All Chefmaster parts and products have undergone a stringent testing process to ensure that comply with all European standards and specifications.

All Chefmaster products carry the CE approval symbol.