

This is an attended appliance

Troubleshooting Guide - With the appliance unplugged.	
Unit not working / dead	Check/replace the plug fuse.
	Check socket and ring main are working and switched on.
	Check the cord and plug for condition
	Check the safety control button is depressed before starting
Units cuts out during operation	Release the trigger, unplug the blender body and allow unit to cool for
	5-10 minutes. Plug in and restart
Unit is noisy	Check the shaft is correctly fitted to the motor base
	Blade is fitted incorrectly / damaged

If unit is under warranty, please contact your distributor