

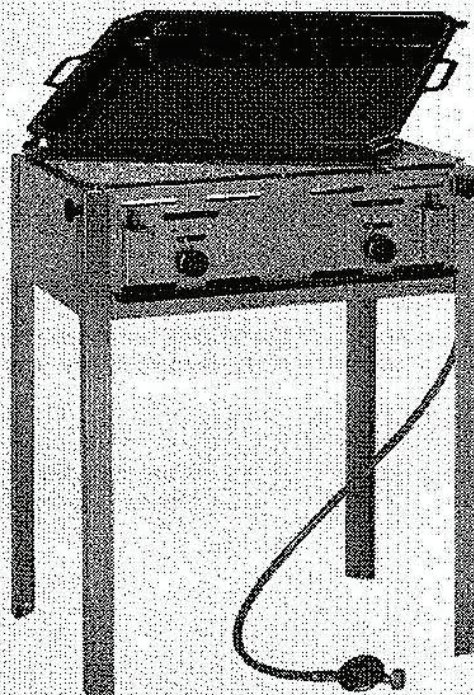
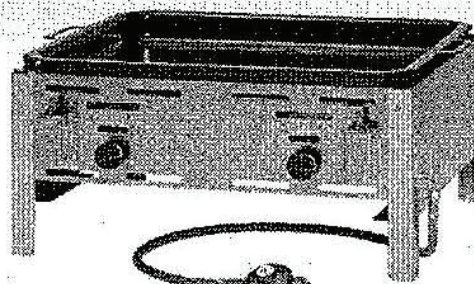
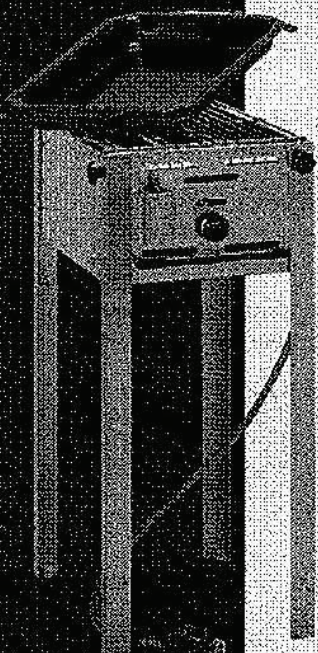


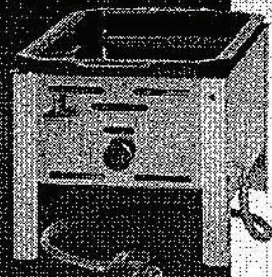

# Bake Master Grill Master Roast Master

GEBRUIKSAANWIJZING  
USER INSTRUCTIONS  
GEBRAUCHSANWEISUNG  
MODE D'EMPLOI  
INSTRUKCJA OBSŁUGI

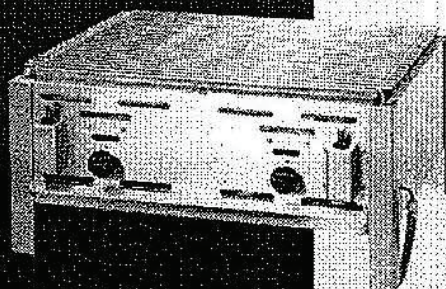

Gasbarbecue  
Gas grill  
Gasgrill  
Grill à gaz  
Grill gazowe


*Avant de l'appareil en gebruik te nemen dient u deze gebruiksaanwijzing aandachtig te lezen.  
You should read these user instructions carefully before using the appliance.  
Bevor Sie das Gerät in Betrieb nehmen, sollten Sie diese Gebrauchsanweisung aufmerksam lesen.  
Lisez attentivement ce mode d'emploi avant d'utiliser l'appareil.  
Przed uruchomieniem urządzenia należy koniecznie dokładnie przeczytać niniejszą instrukcję obsługi.*

### General instructions

- Use only the supplied pressure regulator.
- This appliance is only suited for propane gas.
- Check that there are no kinks in the gas hose.
- Only use this appliance in the open air.
- Keep the griddle away from (easily) flammable material.
- Do not move the gas griddle during use.
- Always close the tap on the gas cylinder if the griddle is no longer being used.
- The user must not change parts of the appliance that are sealed by the manufacturer.
- Install the griddle as level as possible.

**WARNING:** Some parts of the appliance can become hot.  
Keep children away from the gas griddle.

### Connecting the gas bottle

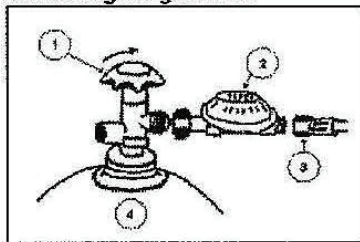

- 1 = main tap  
2 = pressure regulator  
3 = gas hose  
4 = gas bottle

Attach the pressure regulator to the gas bottle using the large brass nut. Tighten the nut well. Note that the nut has a left hand thread.

### Igniting the gas griddle

- Place the grill grid.
- Turn the knob to the "normal" position. Keep the knob pressed and press the ignition button a few times until the burner is burning completely. Keep the knob pressed in for approximately a further 10 seconds. The burner will continue to burn.

### Turning off the gas griddle

- Turn the knob completely to the right. The burner will go out.

**Note!** After turning off the burners, wait approximately 10 minutes before reigniting the burners.  
*After turning off the burners, always turn off the main tap on the gas cylinder!*

### Maintenance

- After every use:
- Clean the griddle.
  - Clean the grease holder.

Fault	Possible cause	Fault	Possible cause
Burner will not ignite.	Defective igniter	Burner does not burn fully.	Gas cylinder is (almost) empty
	Defective thermocouple		Kink in gas hose
	Dirty sparking plug		The main gas tap on the gas cylinder is not fully open
	Defective pressure regulator		Main jet clogged
	Empty gas cylinder		Defective gas tap
	Kink in gas hose		
	Clogged jet		

#### Comment


- It is to be recommended to replace the gas hose after 3 or 4 years by one delivered by the manufacturer (see date shown on hose). The gas hose becomes porous after a time.
- Only replace the pressure regulator by one delivered by the manufacturer.
- Consult the local regulations, these may differ.
- Always store gas bottles upright, even when empty.


#### Accessories

Description	Article no.
Backing tray Grill/Bakemaster Mini	154687
Backing tray Grill/Bakemaster Maxi	154656
Upper grid Grillmaster Mini	154663
Upper grid Grillmaster Maxi	154632
Lower grid Grillmaster Mini	154670
Lower grid Grillmaster Maxi	154649
Grease holder Grillmaster Mini	154748
Grease holder Grillmaster Maxi	154755
Leg Grillmaster Mini / Maxi	154694
Gas tap Grill/Bakemaster Mini / Maxi	154724
Burner Grill/Bakemaster Mini / Maxi	154731

#### **Important !**

When you are using the backing tray for the Grillmaster Mini / Maxi, you must remove the upper & lower griddle and the grease holder. When you don't do this, there will be such an amount of heat inside the appliance that this heat will cause damage.

<b>Grill/Bakemaster Mini</b>	 0063			
Country	BE / ES / PT / FR / IT / GR	NL / DE / AT / LU	GB / IE	SE / DK / FI / IS / NO
Output	[Hi] 4,6 kW	[Hi] 4,6 kW	[Hi] 4,6 kW	[Hi] 4,6 kW
Category	I <sub>3P</sub>	I <sub>3P</sub>	I <sub>3P</sub>	I <sub>3BP</sub>
Consumption	357 g/h	357 g/h	357 g/h	362/357 g/h
Set up for	G31 – 37 mbar	G31 – 50 mbar	G31 – 37 mbar	G30/31 – 30 mbar
Pin no.	0063AR3273	0063AR3273	0063AR3273	0063AR3273

<b>Grill/Bakemaster Maxi</b>	 0063			
Country	BE / ES / PT / FR / IT / GR	NL / DE / AT / LU	GB / IE	SE / DK / FI / IS / NO
Output	[Hi] 9,2 kW	[Hi] 9,2 kW	[Hi] 9,2 kW	[Hi] 9,2 kW
Category	I <sub>3P</sub>	I <sub>3P</sub>	I <sub>3P</sub>	I <sub>3BP</sub>
Consumption	714 g/h	714 g/h	714 g/h	725/714 g/h
Set up for	G31 – 37 mbar	G31 – 50 mbar	G31 – 37 mbar	G30/31 – 30 mbar
Pin no.	0063AR3273	0063AR3273	0063AR3273	0063AR3273

#### Guarantee

Any defect affecting the functionality of the appliance which becomes apparent within one year of its purchase will be corrected by free repair or replacement provided that it has been used and maintained in accordance with the instructions and has not been abused or misused in any way. Your statutory rights are not affected. If it's under guarantee, state where and when it was bought, and include proof of purchase (e.g. till receipt).

In line with our policy of continuous product development we reserve the right to change product, packaging and documentation specifications without notice.

#### Discard

At the end of the life of the appliance, please cast of the appliance according to the on that moment applying regulations and guidelines.