

Thank you for purchasing your Chefmaster Rice Cooker. To make full use of the product please read this manual carefully before using the product and keep it safe for future reference.

Safety Tips

- Read all instruction carefully.
- Do not use any appliance with a damaged cord or plug. If the cord is damaged it should be replaced with the same type and size or bring the unit to the nearest authorized service center.
- Hold plug firmly when disconnecting from power point. Do not plug into multi-sockets with other appliances.
- The appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by the person responsible for their safety.
- Do not place cooker near inflammable or combustible materials.
- Do not place cooker on or near gas stove or electric stove.
- Use the rice cooker only with the supplied inner pot. Do not use the inner pot for other purpose than cooking or warming rice.
- Do not use the Inner pot on direct heat.
- Be cautious of high temperature during cooking. Do not touch the steam valve while cooking. Ensure that the valve is always unobstructed.
- Do not allow cord to touch hot surface of the Rice Cooker.
- Do not loop the cord around the Rice Cooker after use.
- Keep the Rice Cooker in a dry and cool place.



Rice Cooker 5.4 Liter Instruction Manual

Model

HEB640

Pack Contents

- 1 x Chefmaster Rice Cooker
- 1 x Measuring Cup
- 1 x Spatula

Description of Parts



Operation

1. Measure the desired amount of rice using the measuring cup supplied
2. Rinse rice thoroughly in a dish other than the pan of the cooker
3. Pour the rice into the inner pan. To ensure evenly cooked rice, spread evenly around the pan. Add the correct amount of water by using the waterline inside the pan.
Measurement Guide for water and rice
 - One cup of rice measure 0.18L (150g).
 - Use waterline inside the pot as cooking guide. The right line corresponds to liters of water, and the left line corresponds to cups of rice.
 - **Never** add water higher than maximum waterline.
4. Place the inner pot inside the cooker and ensure the pot is properly fit into the heater plate. Level the rice.
Note: Ensure there is no rice or moisture on the outside of the inner pan
5. Close the lid until it locks
6. Connect the rice cooker to the power.

7. Press down the switch knob. The “cook” light will turn ON and rice will start to cook.
 - If the switch knob fails to stay down, the “warm” light will turn ON, the rice will not be cooked.
8. When cooking is finished the switch knob will be automatically moves to “warm” position. Keep the lid closed for about 15 minutes for best results.
9. Carefully open the lid, allowing any steam and condensation to run back into the rice cooker.
10. Stir the rice and serve as soon as possible.
11. Disconnect the appliance from the power supply

Tips to Keep Cook Rice Warm and Tasty


1. To ensure the best outcome, wash rice thoroughly before cooking.
2. To prevent dry, discolored and unpleasant effect of the cooked rice, keep lid perfectly closed.
3. Do not leave the rice spatula or anything inside the inner pot during keep warm cycle.

How to Remove the Condensation Collector

TO REMOVE – hold the sides and pull

TO ATTACH – align and push

Condensation
Collector

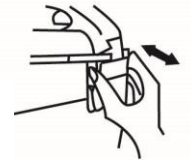

Cleaning and Maintenance

1. Always switch off and disconnect from the power supply before cleaning.
2. Allow the unit to cool before cleaning.
3. Condensation collector, inner lid, spatula, and inner pot are washable with soap and water.
4. Clean the exterior of the rice cooker with a damp cloth.
5. Do not immerse the unit in water or in any other liquid.
6. Always keep the bottom of the inner pot and the heater’s plate clean.
7. The inner pot of the rice cooker is TEFLEX coated. To avoid scratches do not use abrasive cleaners and use only the supplied spatula.

Technical Information

HEB640 – Rice Cooker

Voltage 230VAC, 50/60Hz

Power 1950watt

Weight 9kg, Dimensions 480 x 440 x 335 mm

- Chefmaster Rice Cooker is supplied with a 3 pin plug and lead with a 13 amp fuse
- Appliance must be earthed
- If in doubt contact a qualified electrician or your Chefmaster distributor

Disposal



Under WEEE regulations this product must not be disposed of as household waste. To prevent damage to the environment and humans this product must be disposed of in an approved and environmentally friendly recycling process. For more information on how to dispose of this correctly please contact your Chefmaster distributor or local authority responsible for waste disposal.

Compliance



All Chefmaster parts and products have under gone a stringent testing process to ensure that comply with all European standards and specifications.

All Chefmaster products carry the CE approval symbol.