


Machine	Explode	Code	Description	
Waring Xtreme X-Prep Blender	1	AF769	Jar Lid Cover	
Waring Xtreme X-Prep Blender	2	AF768	Jar Lid	
Waring Xtreme X-Prep Blender	2	<b>~</b>	Jar only (64 oz. stackable Raptor)	
Waring Xtreme X-Prep Blender	3		Jar with Blending Assembly (64 oz. stackable Raptor)	
Waring Xtreme X-Prep Blender	4	2	Blade assembly	
Waring Xtreme X-Prep Blender	5	<b>~</b>	Bearing holder O ring	
Waring Xtreme X-Prep Blender	6	<b>~</b>	Nut gasket	
Waring Xtreme X-Prep Blender	7	<b>2</b>	Bearing holder nut	
Waring Xtreme X-Prep Blender	8	AC930	Drive Clutch	
Waring Xtreme X-Prep Blender	9	<b>~</b>	Jar Pad	
Waring Xtreme X-Prep Blender	10	<b>~</b>	Motor	
Waring Xtreme X-Prep Blender	11	<b>*</b>	Dampening Plate Gasket	
Waring Xtreme X-Prep Blender	12	<b>*</b>	MX Housings, Ferrite Core & Cord (units after January	
			2014)	
Waring Xtreme X-Prep Blender		<b>~</b>	Black Top Housing	
Waring Xtreme X-Prep Blender	13	<b>2</b>	Motor Foam (2 required)	
Waring Xtreme X-Prep Blender	14	<b>~</b>	Dampening Plate Bushing (4 required)	
Waring Xtreme X-Prep Blender	15	<b>~</b>	Dampening Plate Sleeve (4 required)	
Waring Xtreme X-Prep Blender	16	<b>~</b>	Washer (2 required)	
Waring Xtreme X-Prep Blender	17	<b>~</b>	Screw (4 required)	
Waring Xtreme X-Prep Blender	18	AC940	Soft Start Control Panel (units before January 2013)	
Waring Xtreme X-Prep Blender	19	<b>~</b>	Housing Foam Rear Baffle	
Waring Xtreme X-Prep Blender	20	<b>~</b>	Housing Foam Front Baffle	
Waring Xtreme X-Prep Blender	21	<b>~</b>	MX Housings, Ferrite Core & Cord (part of #12 above)	
Waring Xtreme X-Prep Blender	2.1	<b>~</b>	Motor Housing (older units)	
Waring Xtreme X-Prep Blender	22	<b>~</b>	Washer (3 required)	
Waring Xtreme X-Prep Blender	23	<b>~</b>	Bottom Housing Foam Baffle	
Waring Xtreme X-Prep Blender	24	<b>2</b>	Foam Baffle	
Waring Xtreme X-Prep Blender	25	<b>2</b>	MX Housings, Ferrite Core & Cord (part of #12 above)	
Waring Xtreme X-Prep Blender	23	AC934	Cord Set (older units)	
Waring Xtreme X-Prep Blender	26	<b>~</b>	Strain relief	
Waring Xtreme X-Prep Blender	27	<b>~</b>	Cable tie(3 required)	
Waring Xtreme X-Prep Blender	28		MX Housings, Ferrite Core & Cord (part of #12 above)	
Waring Xtreme X-Prep Blender	<b>A</b>		Black Bottom Housing (older units)	
Waring Xtreme X-Prep Blender	29	<b>~</b>	Screw (4 required)	
Waring Xtreme X-Prep Blender	30	2	Corner Post (4 required)	
Waring Xtreme X-Prep Blender	31	<b>*</b>	Screw (4 required)	

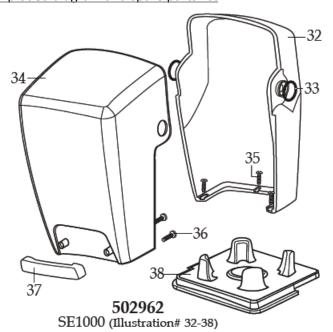

Waring Xtreme X-Prep Blender	32	WA329	64 oz. Inner Sound Enclosure
Waring Xtreme X-Prep Blender	33	<b>*</b>	O Ring (2 required)
Waring Xtreme X-Prep Blender	34	<b>*</b>	64 oz. Outer Sound Enclosure
Waring Xtreme X-Prep Blender	35	AC937	Screw (3 required)
Waring Xtreme X-Prep Blender	36	<b>**</b>	Screw (2 required)
Waring Xtreme X-Prep Blender	37	<b>*</b>	Sound Enclosure Handle
Waring Xtreme X-Prep Blender	38	<b>*</b>	Sound enclosure jar pad
Waring Xtreme X-Prep Blender	503351	<b>*</b>	MX Coupling Wrench
Waring Xtreme X-Prep Blender	032761	<b>*</b>	MX Jar Wrench
Waring Xtreme X-Prep Blender	033484	033484	Brush/ Spring
Waring Xtreme X-Prep Blender	502962	<b>*</b>	Sound Enclosure SE1000
Waring Xtreme X-Prep Blender	030889	<b>**</b>	Blending Ass'y kit
Waring Xtreme X-Prep Blender	031060	AE166	Blending Ass'y kit
Waring Xtreme X-Prep Blender	Not shown	AC929	48oz Jar with Blending Assembly & lid
Waring Xtreme X-Prep Blender	Not shown	DM876	64oz Jar with Blending Assembly & lid