

## Water boiler

### Instruction Manual



**RO-WB10L/ RO-WB16L/ RO-WB255L**

#### USAGE PARAMETERS:

Item	Volume	Power	Voltage
RO-WB10L	10L	1500W	240V~ 50Hz
RO-WB16L	16L	1800W	240V~ 50Hz
RO-WB255L	25.5L	2500W	240V~ 50Hz

#### IMPORTANT SAFEGUARDS

1. Read all instructions carefully.
2. Before using the Water Boiler, check that the voltage indicated corresponds with the electric outlet.
3. Do not use two-way socket with other appliance.
4. Do not use the Water Boiler if the lead or plug is damaged, it should be replaced before using.
5. Do not use the Water boiler, when the water tank is empty.
6. Do not place the Water Boiler near gas stove, electric hob or heated oven.
7. Put the Water Boiler on a flat stable surface and keep it away from the edge of counter to avoid accidents.
8. Do not allow lead to touch hot surface of the Water Boiler.
9. To protect against electric shock, ensure hands are dry before using the appliance and do not immerse the Water Boiler in water.
10. Plug the water boiler into an earthed socket before switching on.
11. Disconnect the unit from the electric outlet and allow to cool before putting on or taking off any parts, or before cleaning.
12. After use switch OFF and pull the plug from the electric socket.
13. Do not use the Water Boiler for outdoors.

**Before using the water boiler, please read all the instructions carefully.**

## PARTS OF THE WATER BOILER



## HOW TO USE

1. Open the lid and pour in water. Do not fill the Water Boiler above the max water level indicator.
2. Plug in to the electrical socket.
3. On the switch button, “I” means “ON”, ”O” means “OFF”. Press to “I”, the “Heating” Pilot light will light up and the water will start to heat up. Once the water has boiled, the “Keep warm” Pilot light shows. Press the switch button to “O”. to turn the boiler off.
4. Use the spout to dispense water.

## WARNING:

- The outside of the appliance gets very hot during use. Do not touch the boiler.
- Do not remove the top cover while boiling.
- If the appliance is overfilled, boiling water may spill out.

## Prevent Dry Boiling:

If there’s no water in the tank, the dry-boiling prevention function will be activated. The power supply will be automatically cut off to prevent overheating which may damage the boiler. When the temperature of the appliance drops, it will automatically power on again. In the process, it may generate odour and the colour of internal tank may change under dry-boiling. Do not power until more water has been poured into the tank.

## CLEANING AND MAINTENANCE

1. Unplug the boiler, discard any remaining water, and allow to cool before cleaning.
2. DISCOULORING OF THE WATER TANK  
This is caused by oxidizing of iron content in tap water. It can be removed using nylon brush and following these simple steps:
  - a. Cut a lemon into four, wrap the lemon in cloth and place in the inner pot.
  - b. Pour water up to the full water indicator level.
  - c. Boil the water and let the mixture remain in the boiler for about 1 hour.
  - d. Pour out the water and use a nylon brush to clean the inner pot.
  - e. To remove the smell of the lemon, boil water again, and dispose the water.
3. Lid and tank are washable with soap and water.
4. Body can be cleaned using a damp cloth and the must be wiped dry. To avoid scratches, do not use abrasive materials.
5. Do not use baking soda to clean the appliance as it can discolour and damage the parts.

## KEEP THIS INSTRUCTION FOR FUTURE REFERENCE.

