 




Party Cooler

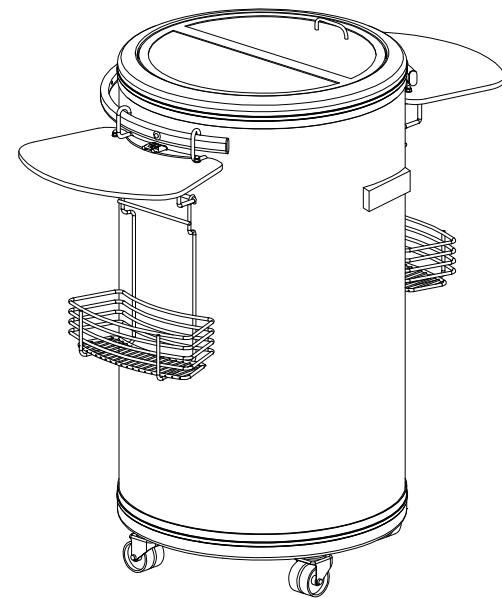

PC-50E / LFS904

Owner's Manual

LIFESTYLE APPLIANCES LTD

Please read these instructions carefully before operating this appliance.
When using this appliance, always exercise basic safety precautions.

This easy-to-use manual will guide you in getting the best use of your Party Cooler.

Please complete the following information for future reference. You will need it to obtain warranty service.

Model Number
PC-50E / LFS904

Serial Number*: _____

Date of Purchase: _____

Place of Purchase: _____

*The Serial number is located on the back of the unit. Retain this Owner's Manual with your sales receipt as a permanent record of your purchase.

TABLE OF CONTENTS

	PAGE
Table of Contents	2
Important Safeguards	3
Package Contents	4
Parts and Feature.....	5
Installing Before Use	6
How to Operate Party Cooler	6
Proper Party Cooler Care and Cleaning	7
Technical Specifications	8
Electrical Diagram.....	9
Warranty Information.....	10
Contact Information	10

Thank you for purchasing the PC-50E / LFS904 Party Cooler. This unit is designed to improve your comfort. With its whisper quiet operation and attractive design, you will enjoy the convenience and comfort that this unit provides for many years to come.

IMPORTANT SAFEGUARDS

Before you use your Party Cooler, please read this owner's manual carefully.

This appliance is for HOUSEHOLD use only. It is not designed for commercial or rental purposes.

This device must be properly installed in accordance with the installation instructions before it is used.

The appliance must be positioned so that the plug is accessible.

Never unplug your Party Cooler by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.

- 1) This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 2) Repair or replace immediately, all electric service cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length, the plug or the connector end.
- 3) Unplug your Party Cooler before cleaning or before making any repairs. **NOTE:** *If for any reason this product requires service, we strongly recommend that a certified technician perform the service.*
- 4) Do not operate your Party Cooler in the presence of explosive fumes.
- 5) The power supply must be properly earthed.

The wires in this mains lead are colored in accordance with the following code:

Green and yellow:	Earth
Blue:	Neutral
Brown:	Live

- 6) We do not recommend the use of an extension cord, as it may overheat and become a risk of fire. If it is necessary to use an extension cord, be sure to use No.0.75mm² minimum size, similar

VDE listed and as short as possible and rated no less than 16A/250V~ with a plug.

- 7) Do not use the unit in the immediate surroundings of a bath, shower or swimming pool.
- 8) Before discarding or storing, we recommend that you remove the door and leave the shelves in place. This will reduce the possibility of danger to children.
- 9) Do not expose this appliance directly under the sun or rain. Do not use the unit at outdoor for a prolonged time. Store the unit indoor when not in use.
- 10) This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.
- 11) Please do not place heavy objects near the center of the serving table to avoid unbalancing.
- 12) WARNING – Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction
- 13) WARNING – Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer
- 14) WARNING – Do not damage the refrigerant circuit
- 15) WARNING – Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer


IMPORTANT: *If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.*

Please according to local regulations regarding disposal of the appliance for its flammable blowing gas.

PACKAGE CONTAINS:

Mobile Party Cooler
Transparent Bi Fold Lid
Two Interior Baskets
Two Side Caddies
Two serving tables
Owner's Manual

PARTS AND FEATURES

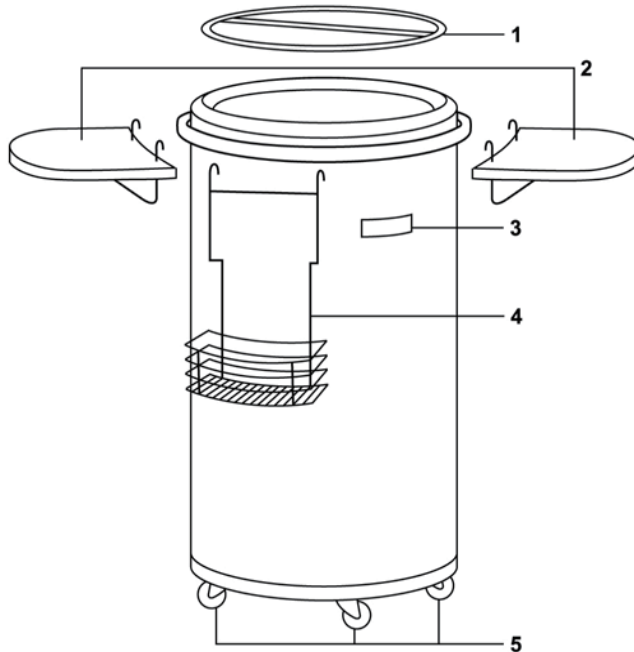

1. Transparent Lift-Off Lid

2. Detachable Polymer Serving Tables
3. Digital Temperature Control
4. Hanging, Detachable Bottle Caddy (includes 2)
5. Castors

INSTALLATION BEFORE USE

It is advisable to clean the inside of the Party Cooler with lukewarm water using a mild detergent, and then to dry it thoroughly prior to use.

The temperature in the fridge will depend on:

- ☐ The temperature in the surrounding area
- ☐ The frequency and duration when the lid is open.
- ☐ Contents of the fridge

Therefore length of the time may vary for the unit to reach the desired temperature set by a user.

The refrigeration system of the cabinet is designed to operate with the cabinet located on a flat surface. Avoid tilting the cabinet side.

If the cabinet must be tilted on an angle for handling or moving purposes, allow it to sit in an upright position 20 to 30 minutes prior to plugging it in and starting the cooling of the storage compartment.

When the units is installed make sure one castor is locked to ensure the unit is stable. Otherwise it will move freely and damage to your unit may occur.

Connecting your party cooler

*** Improper use of the earthed plug can result in the risk of electrical shock.**

1. This unit should be properly earthed for your safety. The power cord of this appliance is equipped with an earthed plug which must be connected with a standard earthed wall outlet to minimize the possibility of electric shock.

2. Plug your appliance into an exclusive, properly installed, earthed wall outlet. Do not under any circumstances, damage the earthing integrity of the plug. Any questions concerning power and/or earthing should be directed toward a certified electrician.
3. This appliance requires a standard 220-240Volt, 50Hz electrical outlet with good earthing means.

HOW TO OPERATE PARTY COOLER

5

1. Insert power plug into an EARTHED wall outlet
2. Press power button on front (right of digital display) to turn on Cooler
3. Press the thermostat button on front (left of digital display) to adjust the desired temperature for the Fridge. The display will flash during the adjustment. The thermostat setting ranges from 2 - 16 Degrees during normal use, the display will show the average temperature inside of fridge.

The following resolutions can increase the cooling function of this product:

- 1) When you begin to use the unit for the first time, allow the unit to operate continuously for 12-18 hours.
- 2) Alternate the racks within the cooler in the amount of 6 hours intervals to improve cooling.
- 3) Increase the amount of space between the items placed in the cooler in order for the items to properly cool.(Do not overload)

Proper Party Fridge Care and Cleaning

Warning: To avoid electric shock always unplug you party cooler before cleaning and moving. Ignoring this warning may result in injury.

General:

- 6 Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. SOME of these chemicals may dissolve, damage and/or discolor your party fridge.

- 1) Remove the contents of the appliance
- 2) Wipe the inside and outside with surfaces with a damp cloth. The addition of vinegar to the water is good for the prevention of mold and fungus.
- 3) Take the lid apart as shown on the drawing and clean it.
- 4) Clean the detachable bottom and the lid parts with lukewarm water and detergent.
- 5) Wipe all parts thoroughly after the cleaning.
- 6) Turn the slits in the sealing ring and in the hinge rubber strip downward when assembling the lid.


IMPORTANT:

When the Party Cooler is not in use it must be completely dry inside to avoid mold growth (if possible have the lid open).

TECHNICAL SPECIFICATIONS

Model	PC-50E/LFS904
Climate Type	SN、N、ST
Protection Type	I
Net Capacity	50L
Power	220-240V~/50Hz
Rated electric current	0.30A
Refrigerant Name	R600a
Vesicant	C ₅ H ₁₀
Charging Amount	27g
Net Weight	24.5kg

Electrical Diagram

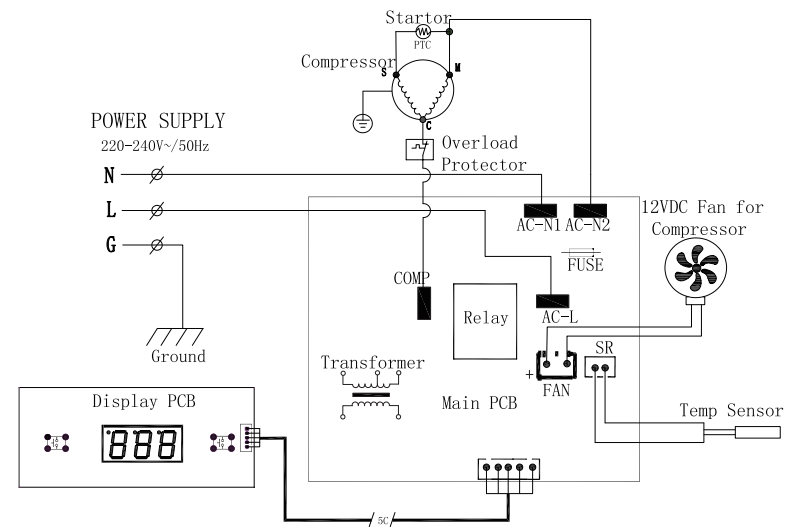

Warranty Information

- **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **WARNING:** Do not damage the refrigerant circuit.

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service center. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories

- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances

Contact Information:

***Lifestyle Appliances Ltd
Unit 66 Enfield Ind Est
Redditch
Worcestershire
B97 6DE***

Tel : 01527 65126

Fax : 01527 584523

email : sales@lifestyleappliances.co.uk

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.