



Chefmaster Stick Blender 550W Instruction Manual

Model

HEG578 – 550w Stick Blender/250mm shaft
HEG579 – 550w Stick Blender/300mm shaft

Thank you for purchasing your Chefmaster Stick Blender. To make full use of the product please read this manual carefully before using the product and keep it safe for future reference.

Safety Tips


- If you find any damage when the product is unpacked, contact your Chefmaster supplier within 24 hours of receipt of goods
- Repairs should always be carried out by a qualified technician
- Do not remove food debris from the product until the blade has come to a complete stop
- Do not use this product outside
- Do not apply extra devices / accessories that are not supplied along with the appliance.
- Always keep the motor away from food. Do not immerse the shaft / whisk completely into the food stuffs
- Always switch off and unplug the unit before cleaning
- If the power cord becomes damaged it must be replaced by a qualified technician
- This product is not designed to be used by persons with reduced physical or mental capabilities, lack of experience or knowledge, unless they are given suitable supervision, this includes children.

Pack Contents


- 1 x Chefmaster Stick Blender
- 1 x Stick Blender Shaft 250mm (HEG578) / 300mm (HEG579)

Assembly

- Remove all packaging including all protective plastic, from your Chefmaster Stick Blender
- Attach the shaft / whisk to the motor & lock by tightening up the plastic sleeve in clockwise direction.

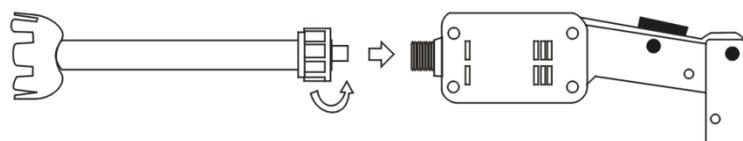

- Connect to the power supply

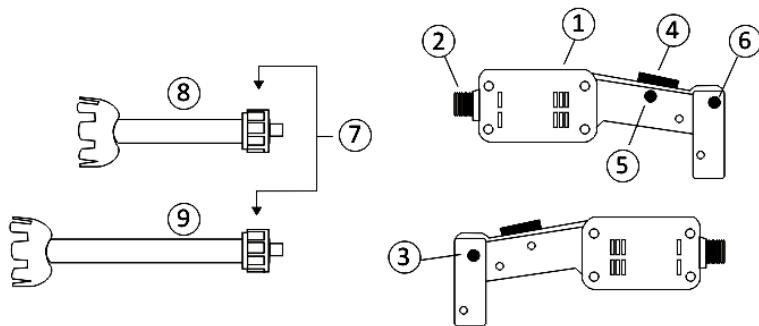

1	Motor body	2	Threaded shaft
3	Overload protection	4	On/Off switch
5	Locking button	6	Speed controller
7	Joining clutch	8*	250mm stainless steel shaft
9*	300mm stainless steel shaft	*	One size supplied

Operation

- Check the cord and plug and plug in
- Place the stainless steel shaft into the food container holding ingredients. Ensure not to allow more than 3/4 of the stainless steel shaft to be immersed. Doing so may damage the head and void the warranty.
- Press the ON/OFF button [4] to start the operation.
- When the appliance is operating, you can adjust the speed by rotating the Speed controller [6].
 - Turn clockwise to increase the speed.
 - Turn counter-clockwise to reduce the speed.
- Pressing the Locking button [5], will lock the operation and the unit will continue to run.
- The blades are very sharp. NEVER touch the blade while the appliance is in operation or when the blades are in motion.
- To stop operation, press the ON/OFF button [4] and release it.
- Remove the appliance from the food container only after it has completely stopped.
- To prevent any spills, switch OFF the appliance first before you lift it up from the food container.
- Unplug the appliance after you finish blending

Always use your Chefmaster Stick Blender in the vertical position

- Warm up the product for 30 seconds (ideally 2 minutes) before food processing
- If the product operates consecutively for 15 minutes which is the maximum working time, turn it off for 30 minutes before it is used again. (15 MIN ON / 30 MIN OFF)

Cleaning & Maintenance

Model	HEG578	HEG579
<ul style="list-style-type: none">• Before cleaning disconnect the stick blender from the electricity supply• Be very careful when touching the blade – It is extremely sharp• A wet cloth can be used to clean the shaft. Do not submerge the shaft completely in water.• DO NOT submerge the stick blender housing in water or use water sprays/jets to clean it• Dry the product thoroughly and store it in a dry place• Always clean your Chefmaster Stick Blender daily		

Troubleshooting

Fault	Possible Cause	Solution
The unit is plugged in but not working	Protection button is not pressed & held before the operation switch is pressed The plug or lead are damaged Carbon brush is worn out The fuse has blown	Hold the protection button and press the operation switch Contact your Chefmaster distributor Contact your Chefmaster distributor Replace the fuse
The unit stops running during operation	The plug / lead / fuse are damaged Overload protection was triggered	Contact your Chefmaster distributor / Replace the fuse Press the manual reset button to restore

Transportation and Storage

Please handle your stick blender with care to prevent any damage to the unit and internal parts. The stick blender should be stored somewhere which is ventilation and non-corrosive gas.

Do not store any flammable objects near the equipment.

Technical Information

Input Voltage	220 – 240V 50/60Hz	
Power	550w (rating)	
Speed	3000 – 12000rpm	
Dimensions	306 x 330mm	306 x 380mm
Weight	1.98kg	2.05kg
Shaft Length	250mm	300mm

- Chefmaster Stick Blenders are supplied with a 3 pin plug and lead with a 13 amp fuse
- Appliance must be earthed
- If in doubt contact a qualified electrician or your Chefmaster distributor

Disposal



Under WEEE regulations this product must not be disposed of as household waste. To prevent damage to the environment and humans this product must be disposed of in an approved and environmentally friendly recycling process. For more information on how to dispose of this correctly please contact your Chefmaster distributor or local authority responsible for waste disposal.

Compliance



All Chefmaster parts and products have undergone a stringent testing process to ensure that comply with all European standards and specifications. All Chefmaster products carry the CE approval symbol.