

User Instruction Manual


BURCO

Electric Griddle



Please read and
keep these
instructions

These instructions cover the Burco electric griddle model CTGD01, SKU 444449316

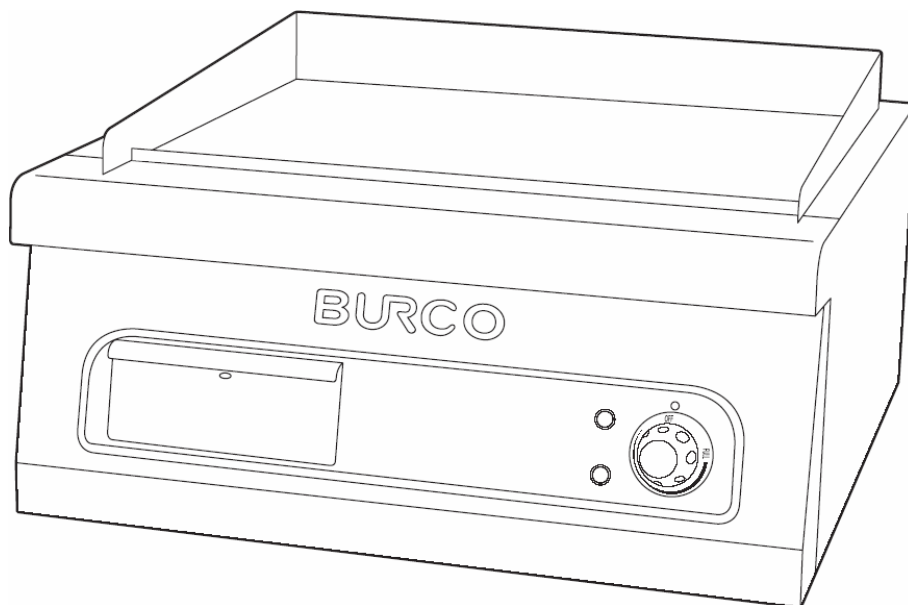

CTGD01
SKU 444449316

Glen Dimplex Professional Appliances
Stoney Lane, Prescot, Merseyside, L35 2XW
Tel: 0844 815 3755

www.burco.co.uk

INTRODUCTION.

To ensure you obtain full benefits from your new griddle:

- Please read this instruction booklet carefully, and follow all instructions.
- If you are unsure of any aspect of the installation, use or performance of your appliance, please contact the after sales number shown on the back page.

SPECIFICATIONS

Model		CTGD01
SKU Number		444449316
Dimensions	Height	275 mm
	Width	600 mm
	Depth	600 mm
Weight		55 kg
Voltage		230 V ~50 Hz
Power rating		2.9 kW

INSTALLATION

Installation Requirements

It is essential that this appliance is installed correctly. Installation should comply with all local electrical, and health and safety requirements.

Before Connection to Power Supply:

Remove all packaging.

Check the griddle for damage. Report any damage immediately to the carrier or supplier.

Remove any protective plastic coating from the outer panels.

Check the available power supply corresponds to that shown on the griddle rating label.

Location:

This griddle is for indoor use only.

Do not install the griddle in a cabinet, it is for counter top use only. Allow at least these clearances - top 500mm, rear 100mm, sides 100mm.

The appliance is only to be installed in locations where its use and maintenance is restricted to trained personnel.

The mains lead should reach from the mains socket without straining the connections.

Do not let the mains lead hang over the edge of the table or counter, and keep it away from any hot surfaces.

Do not let the mains lead run across an open space

Do not place the appliance where the mains lead could fall into a sink.

Do not place the appliance near a hot gas or electric burner.

Ensure the appliance is installed on a level, firm surface that is capable of supporting the weight of the appliance. Do not place on surfaces or near any wall, partition or kitchen furniture unless they are made from non-combustible material, or clad with non-combustible heat insulating material.

Important:

DO NOT OBSTRUCT VENTILATION AROUND THE FRONT AND REAR OF THE APPLIANCE.

Electrical Connection:

Fitting a plug

The mains lead of this appliance will already be fitted with a BS1363 13A plug. If the fuse has to be replaced, use a 13 amp fuse complying with BS 1362.

If the plug is not suitable for your socket then the plug must be cut off and disposed of safely.

An appropriate plug should be fitted as follows:

IMPORTANT: The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow - Earth

Blue - Neutral

Brown - Live

The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or the earth symbol or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black or blue.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red or brown.

Make sure that the connections are tight and that there are no loose strands of wire and no insulation trapped under the terminals. Tighten the clamp in the plug making sure that it grips the outer covering of the cord. If fitting a BS 1363 13A fused plug then fit a 13A fuse. Tighten the plug cover securely. If you are in any doubt, consult a qualified electrician.

IMPORTANT: if the supply cord is damaged, it must be replaced by the manufacturer, service agent or similar qualified person in order to avoid a hazard. The supply cord may become warm when the appliance is in use.

WARNING - THIS APPLIANCE MUST BE EARTHED

Electrical connection: 230V ~ 50Hz, 12.5A, 2.9kW

Before Use:


Operate the appliance for approximately 30 minutes at the highest temperature, to remove any fumes or odour which may be emitted - this is due to oil used during manufacture, but is not harmful.

USER GUIDE

DURING USE THE APPLIANCE BECOMES VERY HOT. BE CAREFUL NOT TO TOUCH HOT SURFACES.

TURN OFF THE POWER SUPPLY AND REMOVE THE PLUG WHEN NOT IN USE, BEFORE CLEANING, AND BEFORE REPLACING ANY PARTS.

Controls:

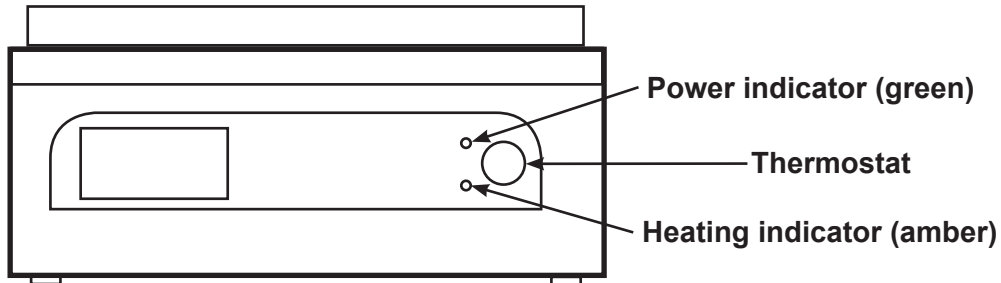

- The green power indicator will be illuminated whenever power is connected to the griddle.
- Turn the thermostat to the desired temperature.
- The amber heating indicator will be illuminated whenever the element is on.
- Once the unit is up to temperature, shown by the amber heating indicator cycling on and off, load the griddle with product.
- The fat collection tray in the front of the appliance must be emptied periodically.

Cleaning:

ALWAYS TURN OFF THE POWER SUPPLY AND REMOVE THE PLUG BEFORE CLEANING

THIS APPLIANCE IS NOT WATERPROOF

DO NOT USE A WATER JET SPRAY TO CLEAN THE INTERIOR OR EXTERIOR OF THE APPLIANCE, OR USE A WATER JET IN THE VICINITY OF THE APPLIANCE

Clean with a good quality stainless steel cleaning compound. Do not use harsh abrasive cleaners as this could damage the surface finish.

Trouble-shooting:

Fault	Possible Cause	Remedy
The appliance does not operate.	No power to the appliance.	Check supply socket is switched on. Check fuse and circuit breaker. Check green power indicator is illuminated.
	Thermostat or element faulty.	Replace thermostat or element.



At end of unit life, dispose of appliance and any replacement parts in a safe manner, via a licenced waste handler. Units are designed to be dismantled easily and recycling of all material is encouraged whenever practicable.

GUARANTEE

This griddle is guaranteed against defective materials or faulty workmanship, for a period of 12 months on labour and 36 months on parts.

This guarantee is given subject to the appliance being used in accordance with the instructions supplied, and on the supply voltage marked on the rating label. The guarantee is subject to fair wear and tear conditions.

The guarantee does not cover consequential damage arising out of any failure acceptable under guarantee, nor does it cover damage resulting from misuse, accident or unauthorised alterations to the oven.

Proof of purchase will be required.

In any communication with the supplier or manufacturer, quote the model and serial number marked on the oven rating label.

This guarantee does not affect your statutory rights.

The products are intended for commercial use as detailed in these instructions.

The Company has a policy of continuous improvement in product quality and design. The Company therefore reserves the right to change the specification at any time.

FAQ's

SPARES LIST

ALWAYS TURN OFF THE POWER SUPPLY AND REMOVE THE PLUG BEFORE REPLACING ANY PARTS

Part Number	Description	Qty
082639027	SHELF GUIDE 302110181	2
082626793	COOKING grid 30071	1
082626794	GRID handle 30072	2
082639028	DRIP TRAY assy 20112038002	1
082626789	ELEMENT 30066	1
082626790	CONTROL knob 30068	1
082626791	ENERGY regulator 30069	1
082639029	NEON yellow 301130005	1
082626792	RUBBER feet set 30070	4
082639030	BLOCK terminal 301070050	1
082639031	POWER CORD 301050007	1
	Handbook	1

Customer helpline

For spares and after-sales service please contact

Burco on:

T: 0844 815 3755

F: 0844 815 3748

E: info@gdha.com

**Glen Dimplex Professional Appliances
(A Division of Glen Dimplex Home Appliances)**

**Stoney Lane,
Prescot,
Merseyside L35 2XW**

www.burco.co.uk



**GLEN DIMPLEX
PROFESSIONAL APPLIANCES**