lincat

Operating Instructions

(Supplementary Instructions to Synergy Grill Information Pack)

Opus 800 Gas Synergy Grills OG8410-A001 & OG8411-A001

Please make a note of your product details for future use:
Date Purchased:
Model Number:
Serial Number:
Dealer:



CONTENTS

Important Information	2
Warnings and Precautions	3
Checklist of Enclosures	3
User Instructions	4
Servicing and Maintenance	5
Component Replacement	5
Spares	6
Accessories	6
Service Information and Guarantee	7

IMPORTANT INFORMATION



Read these instructions carefully before using this product, paying particular attention to all sections that carry warning symbols, caution symbols and notices. Ensure that these are understood at all times.



WARNING!

This symbol is used whenever there is a risk of personal injury.



CAUTION!

This symbol is used whenever there is a risk of damaging your Lincat product.



NOTE:

This symbol is used to provide additional information, hints and tips.

KEEP THIS MANUAL FOR FUTURE REFERENCE

Page 2 of 8

WARNINGS AND PRECAUTIONS

It is mandatory that all appliances are installed, commissioned and serviced by a qualified and competent person as defined by the regulations in force in the country of installation.

Failure to comply will invalidate the warranty.



WARNING!

This appliance must be installed by a competent installation engineer in accordance with the installation instructions, and should conform to the following requirements:

Do not obstruct or block the appliance flue.

Installation must include sufficient ventilation to prevent the occurrence of unacceptable concentrations of substances harmful to health in the room in which they are installed.

It is recommended that this appliance is sited under an extraction canopy for the removal of combustion products

After operation, some parts of the appliance will remain hot for a period of time. Please take care to avoid accidental burns.



CAUTION!

All equipment must be earthed to prevent shock.

Do not connect directly to any flue, ducting or mechanical extraction system.

Installation should allow for a sufficient flow of fresh air for gas combustion.

Parts which have been protected by the manufacturer or his agent must not be adjusted by the installer or user.

CHECK LIST OF ENCLOSURES

Model	OG8410 & OG8411	Tick
Information Pack	1	
Operating Instructions	1	
Scraper	1	
Branding Grid Lifter	1	

SERIAL NUMBER

NOTE

Each appliance at Lincat has a unique identifying number found in the top right hand corner of the data plate attached at the rear of the appliance. Please record that number in the space provided should it be required for future reference.

Serial Number

USER INSTRUCTION

APPLIANCE USE

This appliance is only for professional use and should only be used by qualified personnel. Ensure that the person responsible understands how to light, safely operate, clean and shutdown the appliance and is made aware of the position and operation of the gas isolating cock in the event of an emergency.


Ensure that all controls have free and easy movement, if not contact a qualified service engineer.

This appliance is intended to be used for grilling of culinary preparations that can be cooked or browned by means of radiant heat and MUST NOT be used for any other purpose.

Operators of the appliance must not leave combustible materials directly in the cooking areas of the appliance when in use.

OPERATION OF THE APPLIANCE

- The appliance should not be left unattended when in use for any lengthy period of time.
- Grilling of product should never be left unattended.
- Use hand and arm protection to avoid injuries from burns.

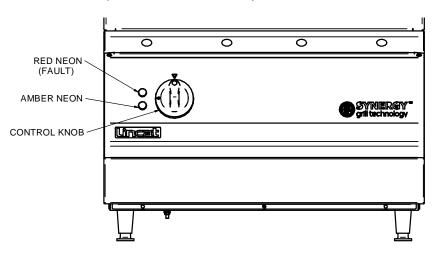

LIGHTING SEQUENCE

Please ensure that the gas isolation valve for the appliance is turned to the open position and the unit is plugged into an electrical socket and switched on before attempting to light.

Turn the control knob clockwise 90° to the stylized flame (the amber neon will glow and the ignition sequence will start) and the burner will ignite.

The unit will have three attempts to light the burner, if it is not successful it will go into lockout and the red (fault) neon will glow. At this stage turn the power off to the appliance and retry.

SHUT DOWN

To shut down the appliance rotate all control knobs anti-clockwise to the OFF position. The gas supply stopcock or bottle valve should now be closed.

SERVICING AND MAINTENANCE


All servicing, maintenance and component replacement on this appliance should be carried out by one of our recommended service engineers.

SERVICE ACCESS

To access and service the components

FACIA PANEL REMOVAL

- Remove facia fixing screws **B**.
- Remove facia A.

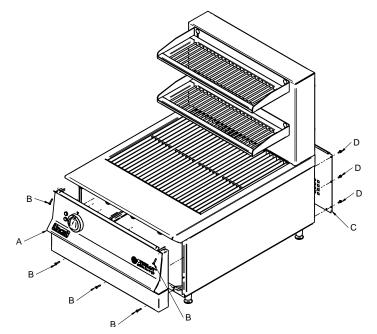

BACK PANEL REMOVAL

- Remove back panel fixing screws D.
- Remove back panel **C**.

COMPONENT REPLACEMENT

Neon's

Remove the facia panel **A** (see above). Pull off the cables (noting their position). Undo retaining nut and remove from facia. Fit the new neon and re-assemble in the reverse order.

Switch

Remove the facia panel **A** (see above). Remove control knob. Pull off the cables (noting their position). Remove the two fixing screws and remove switch. Fit the new switch and re-assemble in the reverse order.

IS722 ECN 4447

SPARE PARTS LIST

Part Number	Part Description	OG8410	OG8411
KN518	Control Knob	1	2
KN02	Control Knob Clip	1	2
LE38	Leg	4	4
NE47	Amber Neon	1	2
NE49	Red Neon	1	2
SW101	Switch	1	2

ACCESSORIES

Part Number	Description	Used on
OA8991	Stand on Legs – 600mm	OG8410
OA8991/C	Stand on Castors – 600mm	OG8410
OA8992	Stand on Legs – 900mm	OG8411
OA8992/8C	Stand on Castors – 900mm	OG8411

SERVICE INFORMATION

For help with the installation, maintenance and use of your **Lincat** equipment, please contact our service department:

2 UK: 01522 875520

For non-UK customers, please contact your local Lincat dealer. All service work, other than routine cleaning MUST be carried out by qualified personnel and a record kept of any remedial actions taken and at least cover the requirements of the service schedule of this document. We cannot accept responsibility for work carried out by other persons.

To ensure your service enquiry is handled as efficiently as possible, please tell us:

- Brief details of the problem
- Product code
- Type number
- Serial number

All available on serial plate

Lincat reserve the right to carry out any work under warranty, given reasonable access to the appliance, during normal working hours, Monday to Friday, 08:30 to 17:00.

DECLARATION

All Lincat products capable of burning gaseous fuels, satisfy the requirements of the Gas Appliance Regulations 2016/426.

GUARANTEE

This unit carries a comprehensive UK mainland warranty. The guarantee is in addition to, and does not diminish your statutory or legal rights. Contact Lincat for terms and conditions

The guarantee does not cover:

- Accidental damage, missuse or use not in accordance with the manufacturer's instructions
- Consumable items (such as filters, glass, bulbs, slot toaster elements and door seals.)
- Damage due to incorrect installation, modification, unauthorised service work or damage due to scale, food debris build-up, etc.

The manufacturer disclaims any liability for incidental, or consequential damages. Attendance is based on reasonable access to the appliance to allow the authorised personnel to carry out the warranty work.

Service calls to equipment under warranty will be carried out in accordance with the conditions of sale. Unless otherwise specified, a maximum of 15 minutes of administrative time, not spent directly carrying out servicing work, is provided for within the warranty. Any requirement for staff attending the call to spend greater time than 15 minutes due to administrative requirements, such as on health and safety risk assessments, will be chargeable at the prevailing rate.

For Information