



**Chefmaster Citrus Juicer  
Instruction Manual**

**Model**


HEG695 – Citrus Juicer

**Thank you for purchasing your Chefmaster Citrus Juicer. To make full use of the product please read this manual carefully before using the product and keep it safe for future reference.**

### **Safety Tips**

- If you find any damage when the product is unpacked, contact your Chefmaster supplier within 24 hours of receipt of goods
- Always position on a flat stable surface
- Repairs should always be carried out by a qualified technician
- Do not use this product if the cone is damaged
- Keep hair & clothing clear of the unit when using it
- Do not use this product outside
- Always switch off and unplug the unit before cleaning
- Move by holding the product by the base
- Do not remove the lid of the machine until the disc and basket have finished moving
- Always use the pusher provided, never try and insert your hand into the hopper
- **Never use this product with frozen fruit**
- Always store upright.
- If the power cord becomes damaged it must be replaced by a qualified technician
- This product is not designed to be used by persons with reduced physical or mental capabilities, lack of experience or knowledge, unless they are given suitable supervision - this includes children.

## Unit Diagram

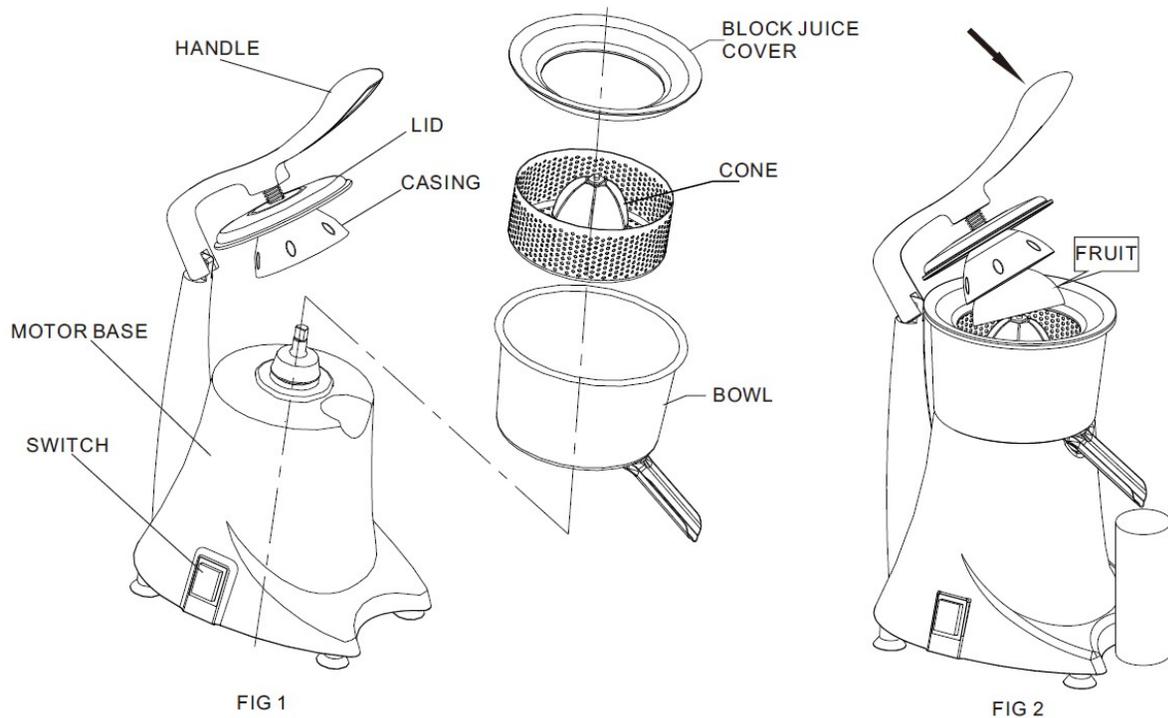

## Before Use

- Remove all packaging including all protective plastic from your Chefmaster Citrus Juicer.
- Ensure you wash all parts that will come into contact with food.
- Position on a flat surface
- Plug your citrus juicer into the mains
- Ensure the bowl, cone and juice cover are correctly fitted.
- Position a jug or glass below the spout
- The juicer will now be ready to use

## Caution

Do not process very hard fruits & vegetables (i.e. Coconut)  
Always remove hard stones from fruit (i.e. peaches, apricots and cherries)  
Do not process frozen fruit or ice.

## **How to use**

- Cut fruit in half.
- Press the switch to position I.
- Raise the handle and align the centre of the cut fruit with the juicer head and gently lower.
- Apply pressure to the juicer handle and the head will rotate.
- Apply even pressure until juice starts to flow.
- Remove the peel.
- Repeat juicing operation for the desired quantity.
  - Pay attention to the cone and filter to avoid overflowing.
- Press the switch to position 0 when you have finished using.

## **Important**

- Don't apply too much pressure/force to the handle.
  - If the motor is rotating slowly or stops, too much pressure is being applied.
  - The juicer is equipped with thermal protection that will stop the motor if it overheats. If this occurs, allow the unit cool down and restart the juicer.
- Pay careful attention to the fruit residue distribution during extraction, it is recommended to clean the unit every 4 – 6 oranges.
  - Allowing too much residue to collect may create an imbalance during extraction which may lead to splashes and wastage.

DO NOT USE THE JUICER IF THE CONE IS DAMAGED

## **Cleaning & Maintenance**

- Before cleaning, disconnect the juicer from the electricity supply.
- Never immerse the motor base in water or use a spray gun. Wipe the base with a damp soft cloth.
- Remove all other parts and rinse with hot water. During use, you may need to remove and empty the basket. Note that this juicer has edges that can be sharp, please handle with care and attention.
- The bowl can be removed. Hold the handle and rotate in a counterclockwise direction.
  - Pay care and attention when refitting.
- Always clean your Chefmaster Automatic Juicer daily

## Troubleshooting

<b>Fault</b>	<b>Possible Cause</b>	<b>Solution</b>
The juicer is not operate.	The unit is not switched on The plug or lead are damaged The fuse has blown Thermal protection activated	Check the unit is plugged in and switched on Contact your Chefmaster distributor Replace the fuse Allow unit to cool down
The unit will not operate	Safety switch.	Ensure the unit is properly assembled and the locking arm is correctly positioned
Juice is splashing / overflowing	The basket or spout maybe blocked.	Clean the basket Clean the bowl and spout
Juice is not being produced	The basket or spout maybe blocked.	Clean the basket Clean the bowl and spout

## Transportation and Storage

Please handle your automatic juicer with care to prevent any damage to the unit and internal parts. The automatic juicer should be stored somewhere which is ventilation and non-corrosive gas.

Do not store any flammable objects near the equipment.

## **Technical Information**

### **HEG695 – Chefmaster Citrus Juicer**

Voltage ~230v 50/60Hz

Dimensions 212 x 287 x 396mm

- Chefmaster Automatic Juicer is supplied with a 3 pin plug and lead with a 13 amp fuse
- Appliance must be earthed
- If in doubt contact a qualified electrician or your Chefmaster distributor

## **Disposal**



Under WEEE regulations this product must not be disposed of as household waste. To prevent damage to the environment and humans this product must be disposed of in an approved and environmentally friendly recycling process. For more information on how to dispose of this correctly please contact your Chefmaster distributor or local authority responsible for waste disposal.

## **Compliance**



All Chefmaster parts and products have undergone a stringent testing process to ensure that they comply with all European standards and specifications.  
All Chefmaster products carry the CE approval symbol.