



**Chefmaster Coffee Machine
Instruction Manual**

Model -HEB086

Thank you for purchasing your Chefmaster Coffee Machine. To make full use of the product please read this manual carefully before using the product and keep it safe for future reference.

Safety Tips

- If you find any damage when the product is unpacked, contact your Chefmaster supplier within 24 hours of receipt of goods.
- Always position the coffee machine on a flat stable surface.
- DO NOT touch hot surfaces.
- DO NOT leave the appliance unattended during operation.
- DO NOT immerse the appliance in water or any other liquids.
- Always switch off and disconnect from the main power if not in use or before cleaning
- Never attempt to dismantle this appliance.

Pack of contents

Chefmaster Coffee Machine

Filter basket

Coffee Jug 2.0Litre

Instruction Manual

Product Parts Information



- A. Water reservoir
- B. Brewing indicator light
- C. Brewing power switch
- D. Upper hotplate power switch
- E. Filter basket
- F. Coffee jug
- G. Base plate
- H. Upper hotplate
- I. Reset switch (at back)

Before First Use

It is recommended that Chefmaster coffee machine is cleaned before using for the first time, or if the appliance has been sat unused for an extended period of time.

1. Fill the water reservoir with cold water.
2. Slide the empty filter basket into position between the two basket tabs.
3. Place the jug on the base plate beneath the basket.
4. Turn the Brewing power switch On. The Brewing Indicator lights up and hot water will begin to fill the jug.
5. Once finished the Brewing Indicator light will switch off. Discard the hot water in the jug.
6. Repeat steps 1-5. The appliance is now clean.

Note: Use the Jug to fill the reservoir to ensure the maximum capacity of the jug is not exceeded.

Operation

1. Fill the water reservoir with cold water.
2. Place a filter paper inside the filter basket.
3. Measure the required amount of coffee into the filter paper and slide the filter basket into position.
4. Place the jug on the base plate beneath the filter basket.
5. Turn the Brewing power switch On. The Brewing Indicator lights up and hot water will begin to fill the jug.
6. Once finished the Brewing indicator will switch off.
7. Turn the power switch off when finished and clean in accordance with Cleaning, Care & Maintenance guidance below.

Using the Upper Hotplate

This appliance is fitted with a hotplate to keep a jug warm.

1. Place the jug on the upper hotplate.
2. Turn the Upper hotplate power switch On.

Cleaning, Care & Maintenance

- Always turn off and disconnect the appliance from the power supply before cleaning.
- Use soapy water and a damp cloth to clean the exterior of the appliance.
- Dry thoroughly after cleaning.

Descaling

In hard water areas limescale can build up within the appliance. To descale the appliance:

1. Pour a solution of descaler and water into the reservoir.
2. Turn the Brewing power switch On.
3. After approximately 4 minutes turn the appliance Off to allow the descaling solution to work through the system.
4. After approximately 10 minutes turn the Brewing power switch back On. Allow the reservoir to empty.
5. Discard the solution collected in the jug.
6. Fill the reservoir with clean water and turn the appliance back On to flush out the system and remove any descaler residue. Discard the collected water and rinse the jug.
7. The appliance is now ready for use.

Note: It is recommended that this appliance is descaled every 6 months or more frequently in hard water areas.

Trouble shooting

Fault	Possible Cause	Solution
The unit is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug and lead are damaged	Call Chefmaster distributor or qualified technician
	Fuse in the plug has blown	Replace the plug fuse
	Power supply	Check power supply
Coffee is not coming from the filter basket	No water in reservoir	Turn Off and fill reservoir
	Coffee is too compact within the filter	Turn off, loosen coffee within the filter and resume
Loud noise coming from appliance	No water in reservoir	Turn Off and fill reservoir

Important note: In the event of overheating, the appliance will automatically shut off. You will need to press the “Reset” switch at the back of the appliance to restart the coffee machine.

Technical Information

HEB086 – Chefmaster Coffee Machine

Voltage ~230v 50Hz

Power 2000W

Weight 6.7kg

Reservoir Capacity 2.0Ltr

Output 2.0Ltr/8min, 15Ltr/hr

Dimensions 210mm x 410mm x 520mm (Lx W x H)

- Chefmaster Coffee Machine is supplied with a 3 pin plug and lead with a 13 amp fuse
- Appliance must be earthed
- If in doubt contact a qualified electrician or your Chefmaster distributor

Disposal



Under WEEE regulations this product must not be disposed of as household waste. To prevent damage to the environment and humans this product must be disposed of in an approved and environmentally friendly recycling process. For more information on how to dispose of this correctly please contact your Chefmaster distributor or local authority responsible for waste disposal.

Compliance



All Chefmaster parts and products have undergone a stringent testing process to ensure that they comply with the provisions of the relevant specific standards and all UK legislations.

Meanwhile, they also comply with all European standards and specifications. All Chefmaster products carry the UKCA and CE approval symbols.