

HEA242/752/753
Countertop deep fat fryer



This is an attended appliance

Troubleshooting Guide - Appliance unplugged, empty clean and cool.

Fryer	Ensure all components of the fryer are installed and seated correctly (Fig 1 & 2)
Unit not working / dead	Check/replace the plug fuse. Check socket and ring main are working and switched on. Check power cable and plug for condition Thermal cutout has been activated - see below
Thermal cut out reset	Disconnect and allow to cool. Clean fryer Unscrew the safety cover at the rear labelled RESET (Fig 3) Push the reset pin down until it clicks using a suitable blunt tool (Fig 5) Replace the safety cover and restart the fryer (Fig 3)
Appliance not reaching temperature	Thermostat may need replacing - contact approved service agent Element may need replacing - contact approved service agent Appliance element may need cleaning
Appliances heats, indicator not illuminated	Indicator light may need replacing - contact approved service agent
Oil smoking and overheating	Isolate appliance immediately. Thermostat may need replacing - contact approved service agent

HEA242/752/753
Countertop deep fat fryer

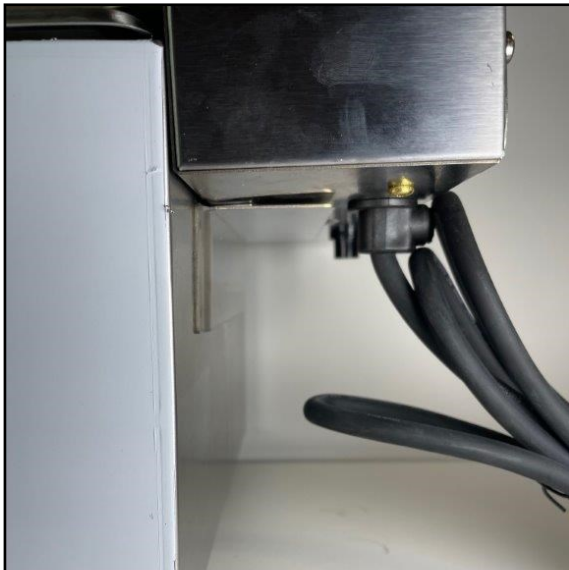


Fig.1 Element correctly positioned



Fig. 2 Element Correctly positioned



Fig 3 Reset Switch - Capped



Fig 4 Reset Switch - Uncapped



Fig 5 Reset Switch - Fully depressed

If fault persists, please contact your approved maintenance and repair contractor.

HEA242/TS/052024

If unit is under warranty, please contact your distributor