


Quick Start Reference Guide

Refer to *Product Safety Manual for Safety Statements*

Complete Owner's Manual available online

This guide covers model: **JET***

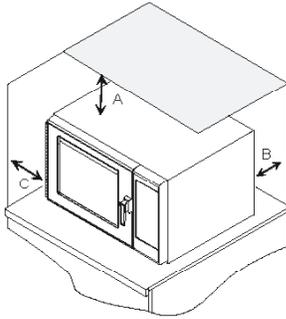


Oven Wall Clearances

A—For North American (UL/CSA) models, allow at least 2" (5.1 cm) of clearance around top of oven. For all international models (50 Hz), allow at least 7" (18 cm) of clearance around the top of the oven. Proper air flow around oven cools electrical components. With restricted air flow, oven may not operate properly and life of electrical parts is reduced.

B—There is not an installation clearance requirement for the back of the oven.

C—Allow at least 1" (2.54 cm) of clearance around sides of oven.

D—Install combination oven so oven bottom is at least 3 feet (91.5 cm) above floor.

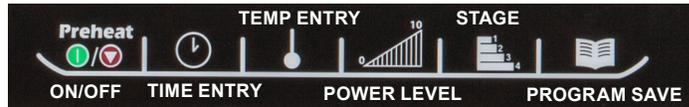

No popcorn

Manual Operation

To cook food using a specific entered time and power level.

1. Press Preheat On/Off pad to start the oven.
 - **Oven Preheating 475°F** displays with **Oven Preheating** flashing.
2. Oven reaches preheat temperature.
 - **Ready 475°F** displays.
3. Place food in the oven.
4. Press Time Entry pad.
 - Enter desired cooking time by using numeric keypad.
5. Press Temp Entry pad if cooking temperature differs from preheat temperature.
 - Enter the new temperature.
6. Press Power Level pad.
 - For a lower microwave power, press pads 1 (for 10%) through 9 (for 90%).
 - **0 turns off the microwave power and cooking is by convection only.**
 - Press any numeric key pad twice to set power level to 100%.
7. If stage cooking is desired, press STAGE pad and repeat steps 4, 5, and 6.
 - Up to 4 different stages can be programmed.
8. Press the Start pad to begin the cooking cycle.

Programming Items

1. Oven must be ON.
 - Press Preheat On/Off.
 - **Oven Preheating 475°F** displays with **Oven Preheating** flashing.
2. Oven reaches preheat temperature.
 - **Ready 475°F** displays with **Ready** flashing.
3. Press Program Save pad.
4. Press pad to be programmed or reprogrammed.
5. Press Time Entry pad to program amount of cooking time.
 - The total microwave cooking time (all stages combined) is 20 minutes.
6. Press Temp Entry pad to program the cooking temperature.
 - Enter desired temperature by using numeric pads.
7. Press Power Level pad to program level of microwave power.
 - For a lower microwave power, press pads 1 (for 10%) through 9 (for 90%).
 - Press any numeric key pad twice to set power level back to 100%.
 - **0 turns off the microwave power and cooking is by convection only.**
8. Press Stage pad.
 - Enter cook time, temp and power level as in steps 5, 6, and 7.
 - To enter another cooking stage for that pad, press Stage pad again. Up to four different stages can be programmed.
9. Press the Program Save pad to save the program and changes.

NOTE: To discard changes, press Stop/Reset pad before pressing Program Save pad.

Programming Preheat Setting

The factory default preheat setting is 475°F (250°C). To program the preheat setting oven must be ON:

1. Press Program Save pad.
2. Press Temp Entry pad.
3. Enter desired temperature by using the numeric key pads.
4. Preheat temperature is changed.

4 Preprogrammed Pads

To cook food using preprogrammed cooking sequences.

1. Open oven door and place food in oven. Close door.
2. Press desired pad.
3. Oven begins to cook.
4. At end of cooking cycle oven beeps signaling food is done.


Quick Start Reference Guide

Refer to Product Safety Manual for Safety Statements

Complete Owner's Manual available online

Cleaning Oven Cavity

- Wear protective rubber gloves when cleaning oven.
- Use only a plastic utensil or nylon scouring pad to aid in removing soil or build-up from the oven interior.
- **Do not use** knife, **metal** utensil, or **steel wool pad** to remove baked on material.
- We recommend using ACP Oven Cleaner (Item CL10) and Oven Shield (Item SH10).
- Avoid spraying caustic cleaners or those containing ammonia, phosphates, chlorine, sodium or potassium hydroxide (lye) directly on oven surfaces.

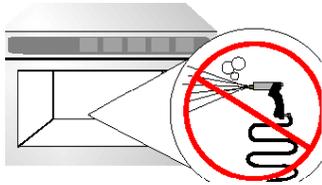

DO NOT power spray



Can I change an option?

Options such as single or double digit programming, beep volume, and maximum cooking time can be changed to suit individual preferences.

To change options oven STANDBY must display:

1. Open and close door.
2. Press hidden pad.
 - Pad is unmarked and located to the direct left of Preheat On/Off pad.
 - Nothing will be displayed when hidden pad is pressed.
3. Press Program Save pad.
 - The first user option will display. Oven is now in options mode.
4. Press number pad that controls option to be changed.
 - See table below for options.
 - Current option will display.
5. Press numeric pad again to change the option.
 - Each time pad is pressed, option will change.
 - Match code displayed with code for desired option.
6. Press Program Save pad to save changes.
 - To change additional options, repeat steps 4 and 5.
 - Changes take effect after Program Save pad is pressed.
 - Press Stop/Reset to return to STANDBY, or open and close oven door.

Numbered Pads	Display	Options (Factory Settings in Bold)
1 Double Digit Entry	Disabled Enabled	Allows 10 (0-9) preprogrammed pads. Allows 100 (00-99) preprogrammed pads.
2 Manual Time Entry	Disabled Enabled	Manual time entry/cooking not allowed. Manual time entry/cooking allowed.
3 Reset on Door Open	Disabled Enabled	Opening oven door does not reset oven back to ready mode. Opening oven door resets the oven back to ready mode.
4 Keybeep	Keybeep ON Keybeep OFF	Keys beep when pressed (keybeep on). Keys do not beep when pressed (keybeep off).
5 Keybeep Volume	OFF LOW MEDIUM HIGH	Keybeep volume OFF. Keybeep volume LOW. Keybeep volume MEDIUM. Keybeep volume HIGH.
6 End of Cook Signal	Solid Beep 3 Second Beep 4 Beeps Once 4 Beeps Repeating	Food done signal is a continuous beep until reset by user. Food done signal is a three second beep. Food done signal is four beeps, continuously. Food done signal is four beeps, four times.
7 Keypad Active	15 SECONDS 30 SECONDS 60 SECONDS 120 SECONDS ALWAYS	Keypad time entry window is 15 seconds. Keypad time entry window is 30 seconds. Keypad time entry window is one minute. Keypad time entry window is two minutes. Keypad time entry window is always active.
8 Preheat Warnings	Disabled Program Warning Only Preheat Warning Only Both	Both temperature warnings off. Warning only when preheat temperature does not match preprogrammed temperature. Warning only when actual oven cavity temperature is not to preheat temperature. Both temperature warnings on.
TEMP PAD Temperature Scale	FAHRENHEIT CELSIUS	Temperatures are displayed in °F for 60 Hz models. Temperatures are displayed in °C for 50 Hz models.
STAGE PAD CLEAN FILTER Message Frequency	Disabled Weekly Monthly Quarterly	Oven will not display Clean Filter. Oven will display Clean Filter every seven (7) days. Oven will display Clean Filter every thirty (30) days. Oven will display Clean Filter every ninety (90) days.
POWER LEVEL PAD MICROWAVE ONLY	Disabled Enabled	Oven will not operate in microwave only mode. Oven will operate in microwave only mode.