







Exploded diagram and spare parts list CK698

| Machine                          | Explode | Code  | Description                |
|----------------------------------|---------|---|----------------------------|
| CK698 - Jumbo Rice Cooker - 9Ltr | 1       |    | Lid Handle assembly        |
| CK698 - Jumbo Rice Cooker - 9Ltr | 2       |    | Lid                        |
| CK698 - Jumbo Rice Cooker - 9Ltr | 3       |    | Lid Cover (Up)             |
| CK698 - Jumbo Rice Cooker - 9Ltr | 4       |    | Lid Cover (Down)           |
| CK698 - Jumbo Rice Cooker - 9Ltr | 5       |    | Lid Rod                    |
| CK698 - Jumbo Rice Cooker - 9Ltr | 6       |    | Lid Insulation             |
| CK698 - Jumbo Rice Cooker - 9Ltr | 7       |    | Plate                      |
| CK698 - Jumbo Rice Cooker - 9Ltr | 8       |    | Fixed Tray                 |
| CK698 - Jumbo Rice Cooker - 9Ltr | 9       |    | Inner Lid Seal             |
| CK698 - Jumbo Rice Cooker - 9Ltr | 10      |    | Lid Heating Wire           |
| CK698 - Jumbo Rice Cooker - 9Ltr | 11      |    | Vent Outlet Cap - 1        |
| CK698 - Jumbo Rice Cooker - 9Ltr | 12      |    | Vent Outlet Cap - 2        |
| CK698 - Jumbo Rice Cooker - 9Ltr | 13      |    | Vent Outlet Cap - 3        |
| CK698 - Jumbo Rice Cooker - 9Ltr | 14      |    | Inner Lid Assembly         |
| CK698 - Jumbo Rice Cooker - 9Ltr | 15      |    | Silicon Ring               |
| CK698 - Jumbo Rice Cooker - 9Ltr | 16      |   | Inner Lid                  |
| CK698 - Jumbo Rice Cooker - 9Ltr | 17      | AF790   | Inner Bowl                 |
| CK698 - Jumbo Rice Cooker - 9Ltr | 18      |  | Support                    |
| CK698 - Jumbo Rice Cooker - 9Ltr | 19      |  | Side Lid Cover             |
| CK698 - Jumbo Rice Cooker - 9Ltr | 20      | AF791   | Water Tray                 |
| CK698 - Jumbo Rice Cooker - 9Ltr | 21      | AC381   | 155*c Thermal Limiter      |
| CK698 - Jumbo Rice Cooker - 9Ltr | 22      |  | Heating Plate (2850W/240V) |
| CK698 - Jumbo Rice Cooker - 9Ltr | 23      |  | Liner Bowl                 |
| CK698 - Jumbo Rice Cooker - 9Ltr | 24      |  | Body Heating Wire (B/43W)  |
| CK698 - Jumbo Rice Cooker - 9Ltr | 25      |  | Body Heating Wire (A/12W)  |
| CK698 - Jumbo Rice Cooker - 9Ltr | 26      | AF792   | Cut Out Switch             |
| CK698 - Jumbo Rice Cooker - 9Ltr | 27      |  | Caramic Connector          |
| CK698 - Jumbo Rice Cooker - 9Ltr | 28      | AF793   | 216*c Thermal Fuse         |
| CK698 - Jumbo Rice Cooker - 9Ltr | 29      |  | Thermostat Support         |
| CK698 - Jumbo Rice Cooker - 9Ltr | 30      | AF794   | 68*c Thermostat            |
| CK698 - Jumbo Rice Cooker - 9Ltr | 31      |  | Body Insulation            |
| CK698 - Jumbo Rice Cooker - 9Ltr | 32      |  | Plate                      |
| CK698 - Jumbo Rice Cooker - 9Ltr | 33      |  | Outer Body                 |
| CK698 - Jumbo Rice Cooker - 9Ltr | 34      | AF795   | Main Switch Set            |
| CK698 - Jumbo Rice Cooker - 9Ltr | 35      |  | Bottom Support             |

Exploded diagram and spare parts list CK698

|                                  |    |   |                              |
|----------------------------------|----|---|------------------------------|
| CK698 - Jumbo Rice Cooker - 9Ltr | 39 |  | Foot Washer                  |
| CK698 - Jumbo Rice Cooker - 9Ltr | 40 |  | Power Cord Fixed Tray (Up)   |
| CK698 - Jumbo Rice Cooker - 9Ltr | 41 |  | Power Cord Fixed Tray (Down) |
| CK698 - Jumbo Rice Cooker - 9Ltr | 42 |  | Power Cord                   |
| CK698 - Jumbo Rice Cooker - 9Ltr | 43 | AC643   | Fork                         |
| CK698 - Jumbo Rice Cooker - 9Ltr | 44 | AC644   | Spoon                        |
| CK698 - Jumbo Rice Cooker - 9Ltr | 45 | AC640   | Measuring Cup                |