 



DC Daily cleaning and maintenance

Undercounter dishwashers


- 1** At the end of service, press **Power Button**. Do not remove any filters at this stage.
- 2** Remove **Drain Plug**. **Wash Tank** empties (if fitted, **Drain Pump** automatically pumps water out).



- 4** When empty, remove debris, such as cutlery and plastic, from dishwasher.

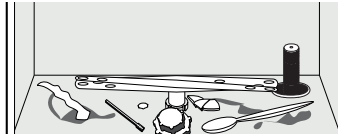



- 5** Clean **Wash Tank**, door surrounds and hinges with an Addis type brush and a soft cleaning cloth.

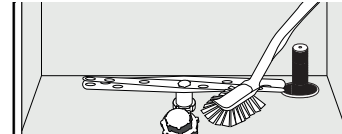

- 6** Remove **Filter** and clean under water with an Addis type brush. Do not let debris fall into lower sump.
- 7** Do not bang **Filters** against anything - this could damage or distort them.



  - 8** Regularly check **Rinse** and **Wash Jets** are clear of debris or limescale - remove if necessary by unscrewing the **Rinse Arm** retaining nut that holds the **Rinse Arm** in place. Remove the **Rinse Pin** that holds the **Rinse Arm** in place. Clean both arms thoroughly and reassemble.



Good washing guide

- Anything remaining on dishes must be removed before washing.
- Should dishes be prewashed with soaps or washing up liquids, dishes must be rinsed before placing inside machine. Washing up liquids should not enter the machine, as they can cause excessive foaming, which reduces washing performance and prevents draining.
- Excessive foaming can damage the machine.
- The use of washing up liquids and soaps can cause flooding and damage the machine.
- Don't interrupt wash cycle.
- Ensure machine has reached correct temperature before washing.
- Don't put items not suited to a dishwasher in machine - only wash items designed to be washed in a dishwasher.



Caution
Dangerous chemicals



Danger
Electricity



Warning
Hot surface



Filters

Filters provide protection for the dishwasher's internal pumps and collect food, debris while washing.

Don't use the machine without the filters in position.

Cleaning chemicals

Warning

Do not use any chemical compounds in or around the machine containing chlorine ions (bleach, chlorine, salt etc) either undiluted or in diluted solutions such as destain, detan, brine, Milton bleach etc. They are incredibly corrosive to stainless steel A304 and can quickly cause the appearance of stains and pin holes in the stainless steel, allowing rust to occur.

If chemicals containing chlorine ions are put into the machine, ensure that all debris is removed and the machine thoroughly rinsed to ensure no corrosive chemicals remain.

Do not use steel wool scouring pads to clean the inside or outside of the machine.

Please note

 
Any corrosion of this sort that occurs is due to misuse and it is not covered under warranty.

Correct PPE should be worn at all times when operating or carrying out maintenance..

Chemical filters

Detergent chemical

The **Red Tube** to the machine is used for detergent.



Rinse aid chemical

The **Clear or Blue Tube** to the machine is used for the rinse aid chemical.



The amount of detergent or rinse aid dosed depends on the quality and dilution information provided on the detergent chemical container. You may need to adjust the dosing quantity if you change the supplier of the chemical product. Please see the dosing guide for more information.

Incorrect dosing quantities will always give poor washing results.