

Quick Start Guide

Casio Model Numbers SE-S10


Press  for more information

1 Load the Memory Protection Batteries and Paper Roll

- A) Remove the printer cover. B) Open battery compartment cover. C) Insert 2 new "AA" type batteries in to the compartment.



IMPORTANT Be sure that the plus (+) and minus (-) ends of the batteries are facing in the directions indicated the illustration inside the battery compartment.

 
 To prevent to lose all of your setting and sales data, we recommended you to install the memory protection batteries.

- D) Install the supplied 58mm thermal paper roll by lifting up the platen arm (Push open button) and placing the paper roll into the printer well. Close the cover firmly.




2 Initialize Your Cash Register

- A) Insert the supplied key and turn to the "OFF" position. B) Plug the power cord into an AC outlet, then a message is printed.

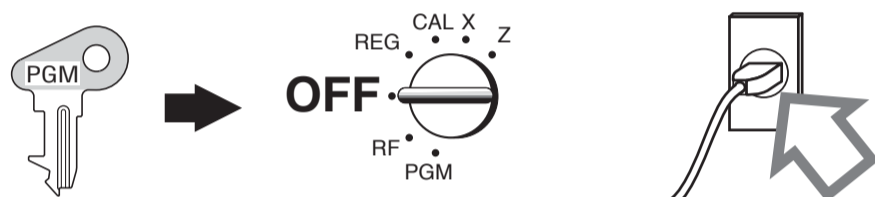

3 Choosing the language if necessary

- A) You can choose the printout language from ten languages.
B) Read the printout and follow the procedure printed on the chit.
Select the language code (0 ~ 9) and press  key.

4 Setting the Date and Time

- A) Follow the procedure printed on the chit to set the date and time.

5 Printer switch for receipt or journal

In case of printing a journal;

- A) Turn the key to the "PGM" position.
B) Perform steps below.

 
 

In case of issuing receipts;

- A) Turn the key to the "PGM" position.
B) Perform steps below.

Default printer definition is receipt printer.

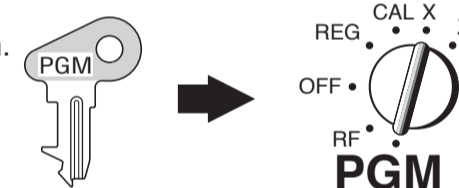


6 Setting Tax Rates

Input the desired flat tax rate to the appropriate department key.

- A) Turn the key to the "PGM" position.




- B) Press the  key.



- C) Enter tax rate.

(Example: For 6% enter "6", 5.75% enter "5.75".)





- D) Press the appropriate department key.

- E) Repeat step C) and D) to set other department key.





- F) Press the  key to end tax programming.

Note: In case of setting the wrong tax rate to the key, please enter  and press those department keys above, and quit this procedure by pressing  key, and start from the beginning of this procedure.

Example 1: Set state tax 6% to department 2, 3 key

 Start tax program
 Enter tax rate and press dept key.
 Enter tax rate and press dept key.
 To end the setting.

Example 2: Set state tax 5.5% to department 2 key and tax 7% to department 3 key

 Start tax program
 Enter tax rate and press dept key.
 Enter tax rate and press dept key.
 To end the setting.

For Add-ON Tax, please refer to the user's manual.

Please keep this sheet for future reference.

Quick Start Guide

Casio Model Numbers SE-S10

7 Programming receipt message

You can program receipt message at the top of the receipt.


Receipt message sample:

YOUR RECEIPT	Receipt message 1st line
THANK YOU	Receipt message 2nd line
CALL AGAIN	Receipt message 3rd line
	Receipt message 4th line
	Receipt message 5th line
28-10-2009	12:34
REG	0123
TAXABLE T1	·1.00
DEPT10	·2.00
DEPT15	·0.30
TA1	·1.00
TX1	·0.04
TOTAL	·3.04
CA	·5.00
CG	·1.66

Default receipt message depends upon a selected language.

Example: Set "THANK YOU" to the second line.

 A) Turn the key to the "PGM" position.

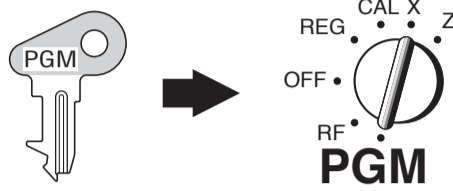


B) Press **2** and **SUB TOTAL** key.

C) For 2nd message

line press **2** then **CH**


D) Enter message by multi-tapping method

 (refer to the multi-tapping keyboard)

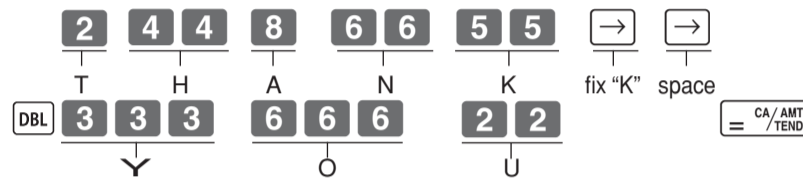

E) Press **SUB TOTAL** key to end the program.

 DBL :Double sized character

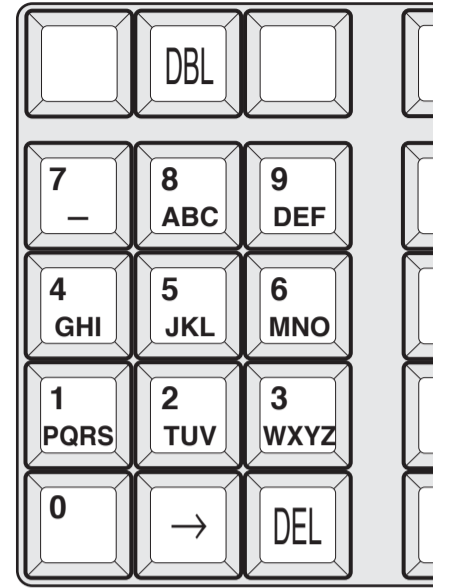

Multi-tapping keyboard

8 Quick Start Setup Completed!