


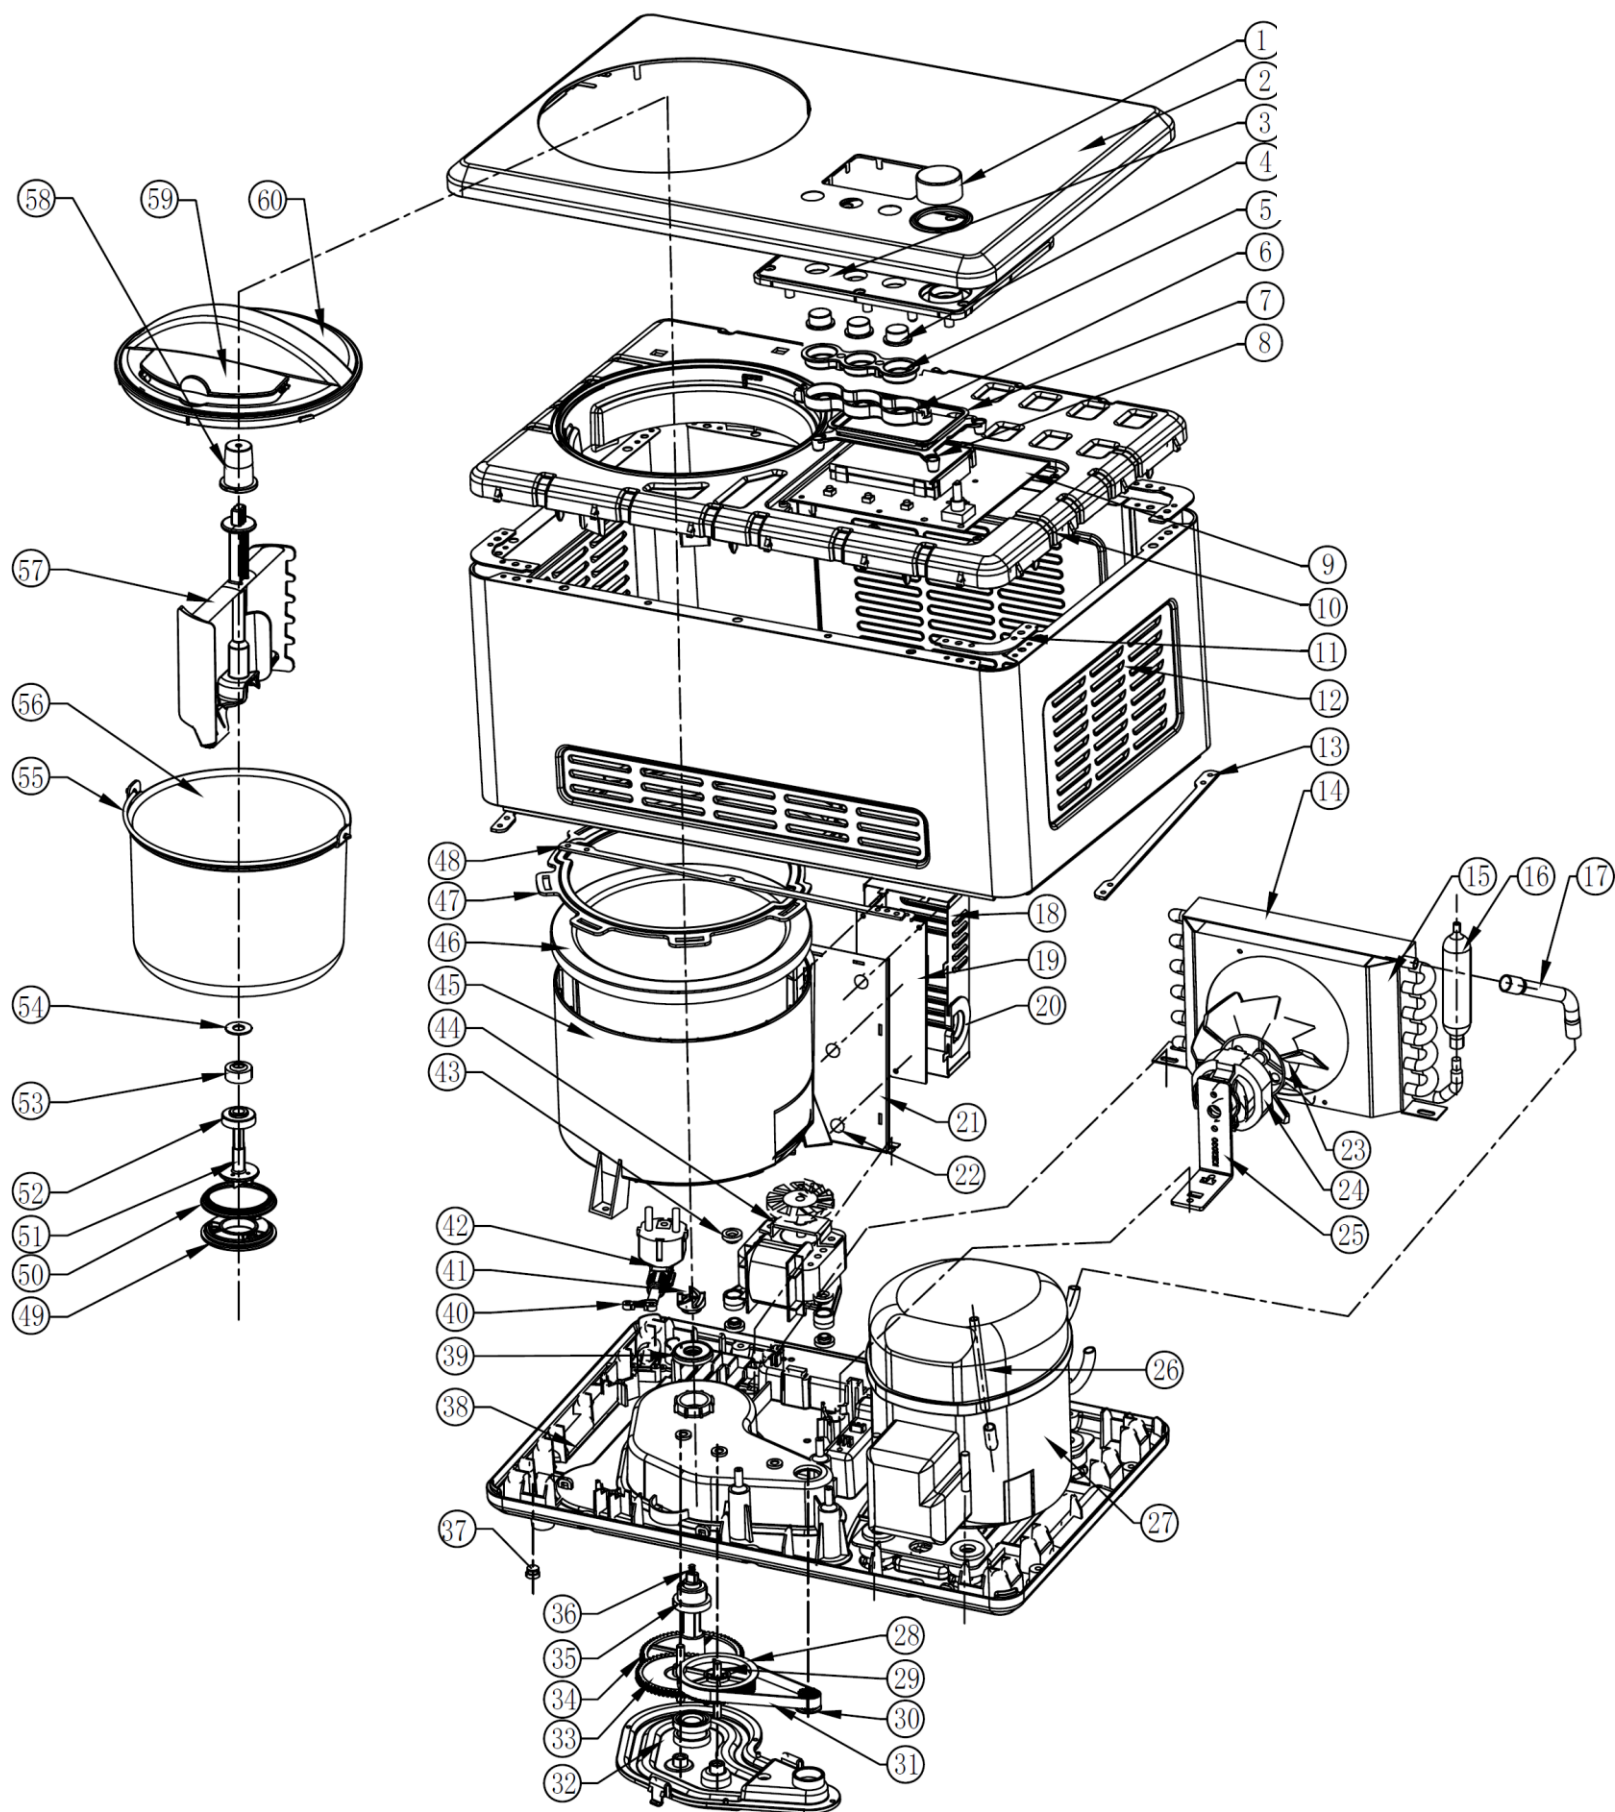

Machine	Explode	Code	Description
Ice Cream Maker - 2Ltr	1	AF920	Control Knob
Ice Cream Maker - 2Ltr	4		Button
Ice Cream Maker - 2Ltr	5		Button seal
Ice Cream Maker - 2Ltr	6		Button support
Ice Cream Maker - 2Ltr	7		Display seal
Ice Cream Maker - 2Ltr	8		Display cover
Ice Cream Maker - 2Ltr	9		Display panel
Ice Cream Maker - 2Ltr	19	AF921	Power PCB
Ice Cream Maker - 2Ltr	21		PCB Fixing Plate
Ice Cream Maker - 2Ltr	23	AD987	Fan
Ice Cream Maker - 2Ltr	24	AF922	Fan Motor
Ice Cream Maker - 2Ltr	25		Fan Motor Bracket
Ice Cream Maker - 2Ltr	28		Big Gear
Ice Cream Maker - 2Ltr	30		Little Gear
Ice Cream Maker - 2Ltr	31	AF929	Fan Belt
Ice Cream Maker - 2Ltr	32		Cover of base
Ice Cream Maker - 2Ltr	35	AD981	Bearing
Ice Cream Maker - 2Ltr	37	AF923	Feet (set of four)
Ice Cream Maker - 2Ltr	39		Seal of evaporator holder
Ice Cream Maker - 2Ltr	40		Clip of Power cord
Ice Cream Maker - 2Ltr	42		Power cord
Ice Cream Maker - 2Ltr	44	AF924	Mixing motor
Ice Cream Maker - 2Ltr	47		Seal
Ice Cream Maker - 2Ltr	55		Handle of removable bowl
Ice Cream Maker - 2Ltr	56		Removable bowl
Ice Cream Maker - 2Ltr	57	AF925	Mixing blade
Ice Cream Maker - 2Ltr	58		Bearing of lid
Ice Cream Maker - 2Ltr	59	AF927	Lid Access Panel
Ice Cream Maker - 2Ltr	60	AF928	Lid