

Connect the plug to a suitable power socket

SPEED CONTROL

- Select the fan speed using the dial (5): 0 = OFF, 1 = Low, 2 = Medium, 3 = High
- If the oscillating function is required press down button 4 on top of the motor housing, pull up to stop oscillating.

MAINTENANCE

- Cleaning and user maintenance shall not be made by children without supervision.
- Switch off and unplug from the power supply before assembling or disassembling and cleaning.
- Keep the air vents at the rear of the main body free from dust or fluff– use a vacuum cleaner to remove these when necessary. Do not probe any opening to remove fluff.
- Fan component parts should be cleaned using mild soap and a damp cloth or sponge. Do not allow any water or other liquid to enter the motor housing.
- Thoroughly remove soap film with clean water.

CAUTION: Do not use harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the fan components.

SPECIFICATION: Rated Voltage: 220-240V ~ 50Hz
Power Consumption: 35 watts

CONTACT HELPLINE: Monday – Friday 9.00am – 5.00pm
01274 852200




The 'Wheellie Bin' symbol on the product or its packaging indicates that it must not be disposed of with your other household waste. Please dispose of this product at a designated collection point for the recycling of waste electrical and electronic equipment. For more information please contact your local authority.

This product is under continuous product development and the design may alter to that on the instruction manual or box without prior notice.

Status International (UK) Ltd BD19 5AR

STATUS®

12" DESK STAND FAN

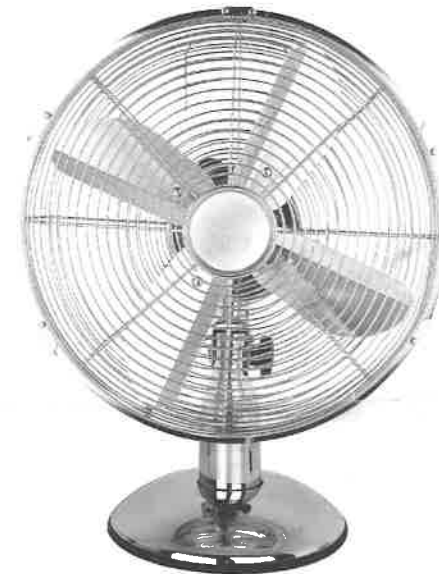

Thank you for purchasing a Status 12" Oscillating Desk Fan. We recommend that you spend some time reading these instructions in order to fully understand all the operational features it offers.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS


When using the 12" Oscillating Desk Fan, the following safety precautions must be followed.

- This fan is for household and indoor use only
- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate
- Do not use this fan with any solid state speed control device
- The appliance can be used by children aged from 8 years and above and any person with reduced sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Do not leave the fan running unattended.
- If the supply cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified persons in order to avoid a hazard. This product must be earthed.
- If it is not working properly, contact a qualified electrician or service centre for examination and repair, never try to dismantle it by yourself.
- Do not immerse or expose the product or flexible cord to rain, moisture or any other liquid
- This product should not be used in the immediate vicinity of water, such as baths, basins, swimming pools etc. where a likelihood of immersion or splashing could occur.
- Never install the unit where it could be subject to:
 - Heat sources such as radiators, heat registers, stoves or other products that produce heat
 - Direct sunlight
 - Mechanical vibration or shock
 - Excessive dust
 - Lack of ventilation, such as a cabinet or bookcase
 - Uneven surface
- Switch off and unplug from socket when the product is not in use, before assembling or disassembling parts and before cleaning. (Fully assemble the fan before switching on, never try to dismantle it by yourself)
- Avoid contact with moving parts. Do not insert any body parts (e.g. finger) or objects through the grill when the fan is operating.
- Do not cover the grille, or operate in close proximity to curtains, etc.
- Always disconnect the fan when moving it from one location to another.

- Be sure the fan is on a stable surface when operating to avoid overturning.
- Do not immerse in water

PRODUCT DIAGRAM

1. Fan blade
2. Fan grill(front + rear)
3. Motor housing
4. Oscillation button
5. Speed control knob
6. Power Cord & plug
7. Base
8. Stem

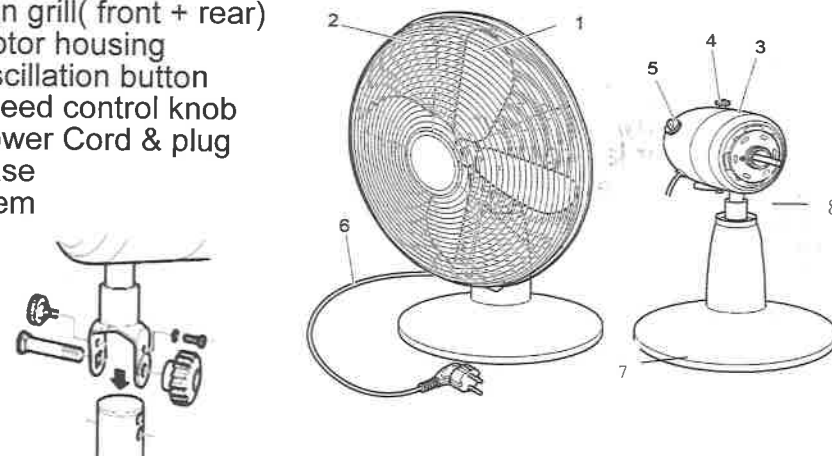

Fan / Base Assembly Method

ASSEMBLY (do not use the fan until it is fully assembled)

- Remove the clamp screw from the stem (8) and position over the hole of the base (7), refit the clamp screw & washer and tighten firmly.
- Place the motor on the top of the extension section as shown in the Fan / Base Assembly method diagram above.
- Remove the 4 screws from the face of the motor housing (3) and place the rear fan grill into position with the carry handle at the top. Replace the 4 screws and tighten firmly.
- Place the blade on the motor shaft with the screw over the flat section and tighten firmly.
- Fit the front fan grill onto the rear cage, locate the clip central at the top and secure together using the metal clips. Insert the small nut / bolt at the bottom.

OPERATING INSTRUCTIONS

- Select a suitable location for the fan. Always choose a safe location in accordance with the Important Safeguards.
- When placing a fan on a table or shelf, always ensure that the power cord does not hang where it can accidentally be pulled causing the fan to fall.