


WARINGTM
COMMERCIAL

Heavy-Duty Commercial Toaster

WCT805K

Operating Manual

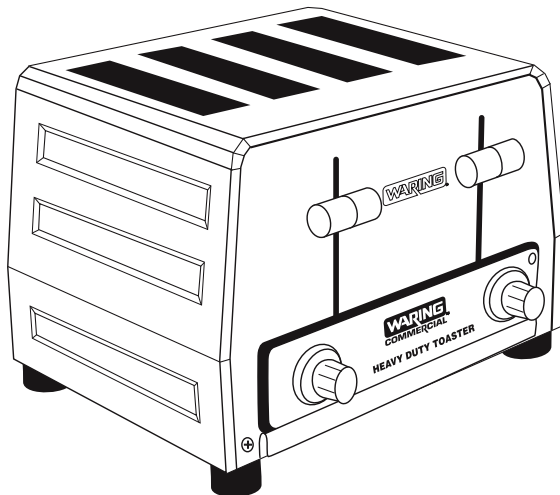


IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be taken, including the following:

- 1) **Read all instructions.**
- 2) **Do not touch hot surfaces. Use handles or knobs.**
- 3) To protect against risk of electrical hazards, do not immerse cord, plug, or any part of the Waring™ toaster in water or other liquid.
- 4) This appliance should not be used by or near children, or individuals with certain disabilities.
- 5) Unplug from outlet when not in use and before cleaning. Allow unit to cool before cleaning or handling.
- 6) Do not operate any appliance with a damaged cord or plug or after the appliance has been dropped or damaged in any way or if it is not operating properly. Return the toaster to the nearest Waring authorized service facility for examination, repair, or adjustment.
- 7) The use of attachments not recommended or sold by Waring may cause injury.
- 8) Do not use outdoors.
- 9) Do not let cord hang over edge of table or countertop, or touch hot surfaces.
- 10) Do not place on or near a hot gas or electric burner or in a heated oven.
- 11) Do not use this toaster for other than its intended use.
- 12) **A FIRE MAY OCCUR IF THE TOASTER IS COVERED OR TOUCHING FLAMMABLE MATERIALS SUCH AS DRAPERIES OR WALLS WHEN IN OPERATION. DO NOT OPERATE UNDER WALL CABINETS.**
- 13) **Oversize foods, metal foil packages or utensils must not be inserted in a toaster as they may involve a risk of fire or electrical shock.**
- 14) Do not attempt to dislodge food when toaster is plugged into electrical outlet.
- 15) To avoid possibility of fire, do not leave toaster unattended during use.
- 16) Put this list in a safe place - do not discard.
- 17) Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

SAVE THESE INSTRUCTIONS
For Commercial Use

WCT805K Toaster

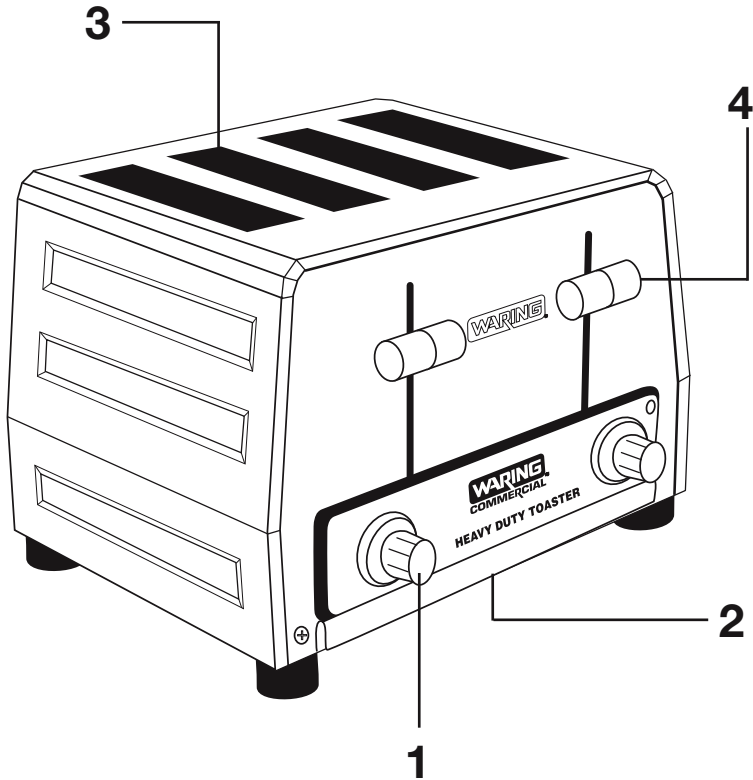

- 1) Electronic Browning Control
- 2) Slide-out Crumb Tray
- 3) Toaster Slot
- 4) Carriage Control Lift Lever
- 5) 3 ft. Power Cord (not shown)

Specifications

Phase	Model	Amps	Watts	Frequency(Hz)	Voltage	Cord
1	WCT805K	10	2015-2400	50/60	220-240V	1 meter
CE Listed						

IMPORTANT UK WIRING INSTRUCTIONS

This appliance is supplied with a fitted plug; however, for your information, should you wish to change the plug, the wires in the mains lead of the appliance are colored in accordance with the following code:

Green and Yellow:	Earth
Blue:	Neutral
Brown:	Live

Warning: The severed plug should be disposed of to avoid a possible shock hazard and should never be inserted into a 13A socket. As the colors of the mains lead of this appliance may not correspond to the colored markings identifying the terminals in your plug, proceed as follows: the wire which is colored Green and Yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol \perp or colored Green or Green and Yellow. The wire which is colored Blue must be connected to the terminal which is marked with the letter N or colored Black or Blue. The wire which is colored brown must be connected to the terminal which is marked with the letter L, or colored Red or Brown.

NOTE: If the terminals of the plug are unmarked or if you are in any doubt, consult a qualified electrician. If a BS1363 Fused Plug is used, this must be fitted with the correct amperage fuse – 13A. This applies to UK models only.

Operation

1. Put toaster on counter or flat, dry surface near electrical outlet.
2. Place bread in all the slots, set both browning controls and push down the carriage control levers. The toasted bread will automatically rise when the bread cycle is complete.
3. The regular slots toast both sides of bread.
4. To stop toasting mid-cycle, just lift up the carriage control lever.

CAUTION: The removable crumb tray must be completely inserted before toaster can be operated. If the tray is removed for cleaning, ensure that it is replaced before using toaster. Crumb tray is dishwasher safe.

Care and Cleaning

Let toaster cool before any cleaning operation.

1. To clean outer surface: Let toaster cool. **Unplug power cord.** Wipe down exterior with damp cloth. Prevent liquid from running into toaster slots. Before using allow toaster's outer surface to dry.
2. To clean crumb tray: Remove the crumb tray and discard crumbs. Wipe crumb tray clean and replace in toaster. Never operate the toaster without the crumb tray in place. Crumb tray is dishwasher safe.
3. To remove any pieces of bread remaining in the toaster, unplug toaster, turn the toaster upside down and gently shake. Never insert any metal or sharp instrument into the toaster slots. This could damage the toaster and cause a safety hazard.



Waring Commercial
314 Ella T. Grasso Avenue
Torrington, CT 06790
©2007 Waring

www.waringproducts.com

07WC30126

IB-8024