



INSTRUCTION REF: IN116
ISSUE No. 1
DATE 21.02.06
Page 1 of 5

TELEPHONE: SERVICE (44) 01332 875665
FAX: SERVICE (44) 01332 875536

- INSTALLATION INSTRUCTIONS
 - SAFETY INSTRUCTIONS
 - USER INSTRUCTIONS

CHIP SCUTTLES

MODEL: 9153/1925/CCS



TELEPHONE: SERVICE (44) 01332 875665
FAX: SERVICE (44) 01332 875536

PLEASE NOTE INSTALLATION MUST BE CARRIED OUT BY A QUALIFIED ELECTRICIAN

IMPORTANT

Please read these instructions before you attempt to use the equipment. Keep these instructions for future reference.

WARNING

To avoid scratching the highly polished exterior surface of this equipment whilst in transit, the protective film on the exterior surfaces has NOT been removed.

It is IMPORTANT that this protective film is peeled off before the equipment is used.

WARNING

1. All electrical appliances/parts must be earthed.
2. No user-serviceable parts.
3. Isolate power supply before carrying out any installation work.

INSTALLATION

1. Choose a suitable site for your machine taking into consideration its, use, and any heat that may be generated whilst in service.
2. Remove all protect film and packing material, and inspect for any damage which may effect the machine's electrical safety.
3. All appliances with an electrical loading above 3 kilowatts must be connected to a suitable supply by qualified electrician, who should ensure that
 - a) Precaution is taken during installation regarding leakage current,
 - b) The means of isolation has a contact separation of at least 3mm on all poles, and
 - c) It is installed in accordance with Health and Safety at Work Act, BS Codes of Practice, IEE Wiring Regulations and Building and Local Authority Standards.

OPERATING

1. Switch on power supply, the red lamp will indicate the power is ON



INSTRUCTION REF: IN116
ISSUE No. 1
DATE 21.02.06
Page 3 of 5

TELEPHONE: SERVICE (44) 01332 875665
FAX: SERVICE (44) 01332 875536

2. Turn the temperature dial to the required setting (1-2½ is used for simmering and 3 for maximum continuous heat): the green lamp will show, indicating power to the element and will extinguish when the desired temperature is reached

Thus procedure will be repeated automatically as the thermostat maintains a constant temperature.

Wipe down regularly with soapy water after switching off and disconnecting the power supply.

GENERAL ADVICE

CLEANING

Before cleaning any unit, and before working on any electrical equipment, DISCONNECT FROM THE ELECTRICITY SUPPLY. If the appliance is permanently connected, switch off the mains supply. The control panel or body containing the electrical fixtures must not be immersed in water and the appliance must not be cleaned by using water jets. All other parts are easily removable for cleaning. All units give best service if kept clean.

FAULTS

The most common fault is that the unit is not connected with the mains supply, and so the mains light does not come on.

Try another appliance in the socket, check the socket is switched on, check the wiring to and in the plug, and the plug fuse; one of these may cure your fault. If this is not the case, and for any other problem, first contact your distributor.

Any spares or replacements must conform to the relevant standards and the Health and Safety at Work Act, and only be fitted by a qualified electrician or competent person.

Declaration of conformity CE



TELEPHONE: SERVICE (44) 01332 875665
FAX: SERVICE (44) 01332 875536

- This product has been designed, constructed and marketed in compliance with:
 - safety requirements of EEC Directive “Gas” 90/396;
 - safety requirements of EEC Directive “Low voltage” 73/23;
 - protection requirements of EEC Directive 93/68.
- This product is suitable for contact with foodstuffs, and complies with EEC Directive 89/109.
- This product has been designed to be used only for cooking. Any other use (such as heating a room) is improper and dangerous.
- This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).
By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- A symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Parry Catering recognises our obligations to the EU DIRECTIVE covering the waste disposal of electrical and electronic equipment (WEEE), Parry Catering are committed to this policy in order to help conserve the environment.



INSTRUCTION REF: IN116
ISSUE No. 1
DATE 21.02.06
Page 5 of 5

TELEPHONE: SERVICE (44) 01332 875665
FAX: SERVICE (44) 01332 875536

At the end of this unit's life you **MUST** dispose of it in an approved manner. You **MUST** not discard the unit or place it in the refuse bin.

You have several options:

- a) Take the unit to an approved WEEE scheme company, there will be one in your area.
- b) Take the unit to an approved waste disposal site; many sites are managed by your local authority.
- c) Contact the unit's manufacturer, importer or their agent the contact details will be on the unit.

There will probably be a charge for this service which will depend on the physical location of the unit and size you will be given a collection price for a curb side collection based on commercial rates prevailing at the time.

It should be noted that the unit to be collected should be suitably packed and sealed to prevent dangerous gases and fluids from escaping. The condition of the unit must also be clean to comply with health and safety regulations.