



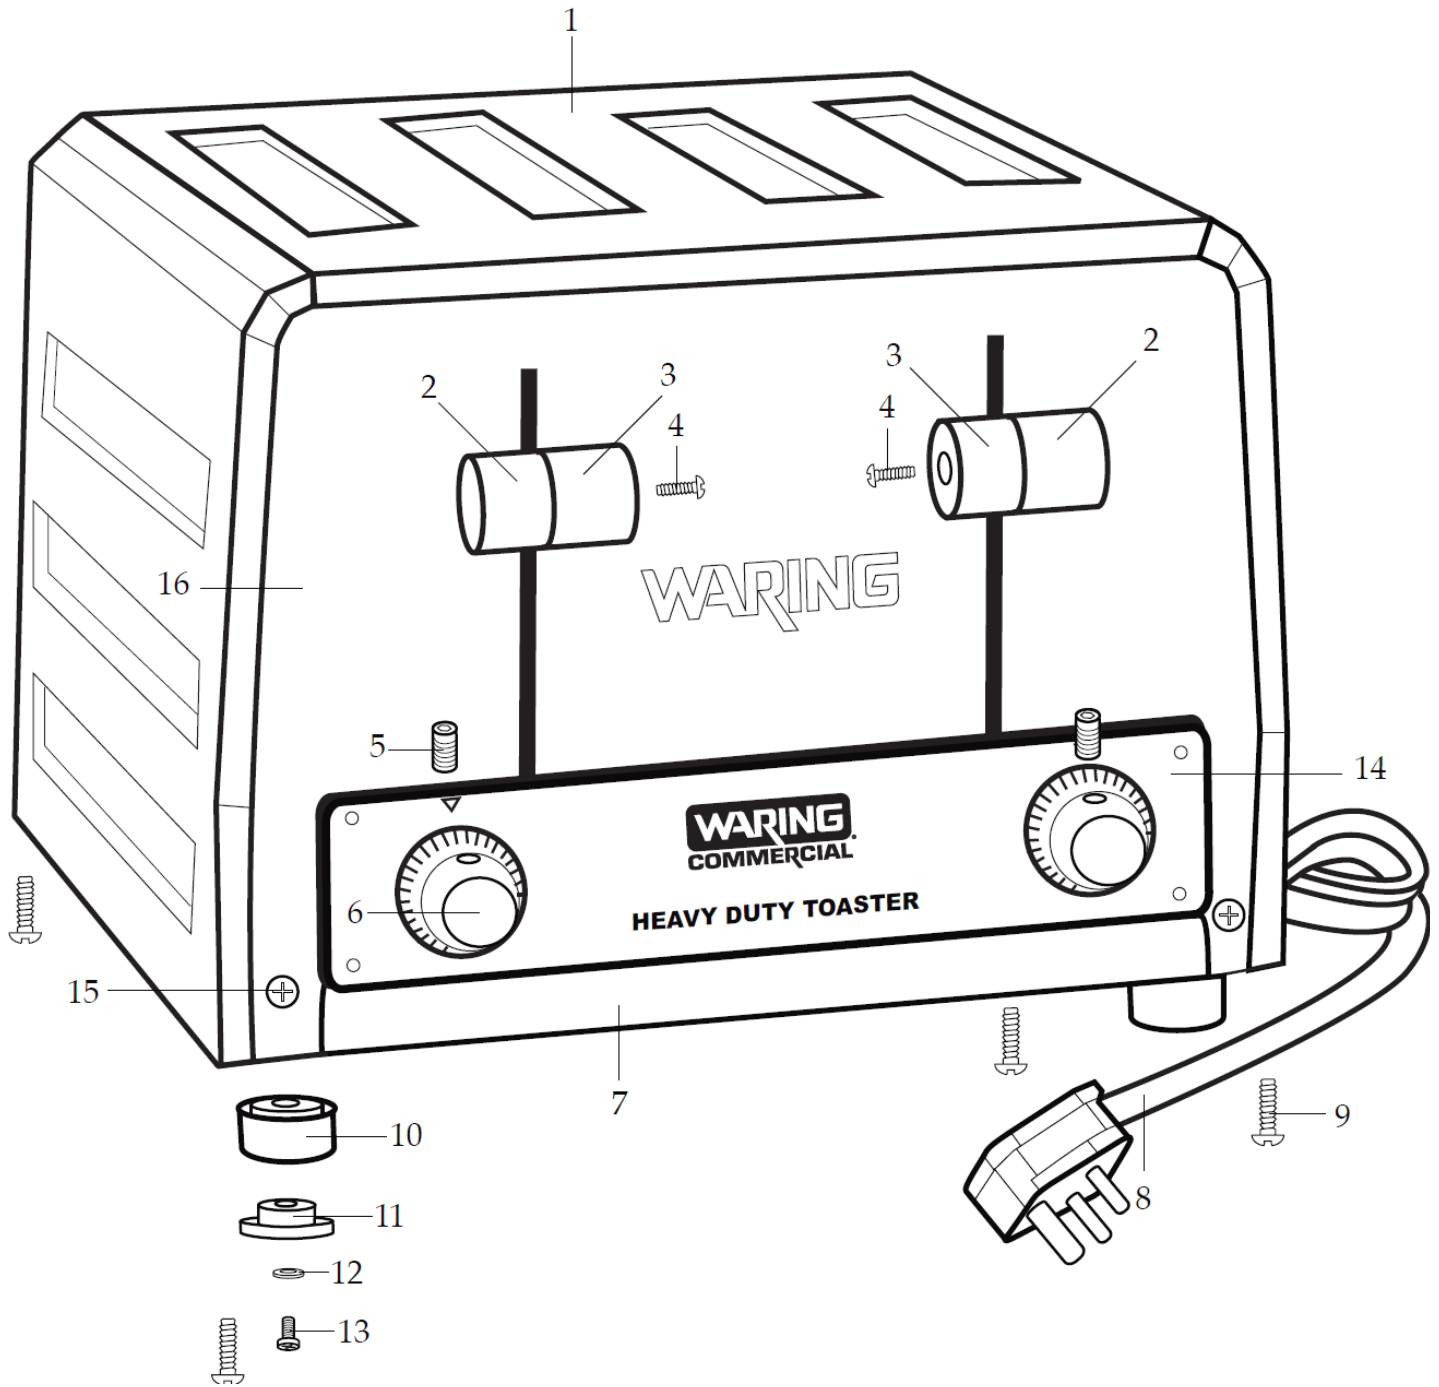

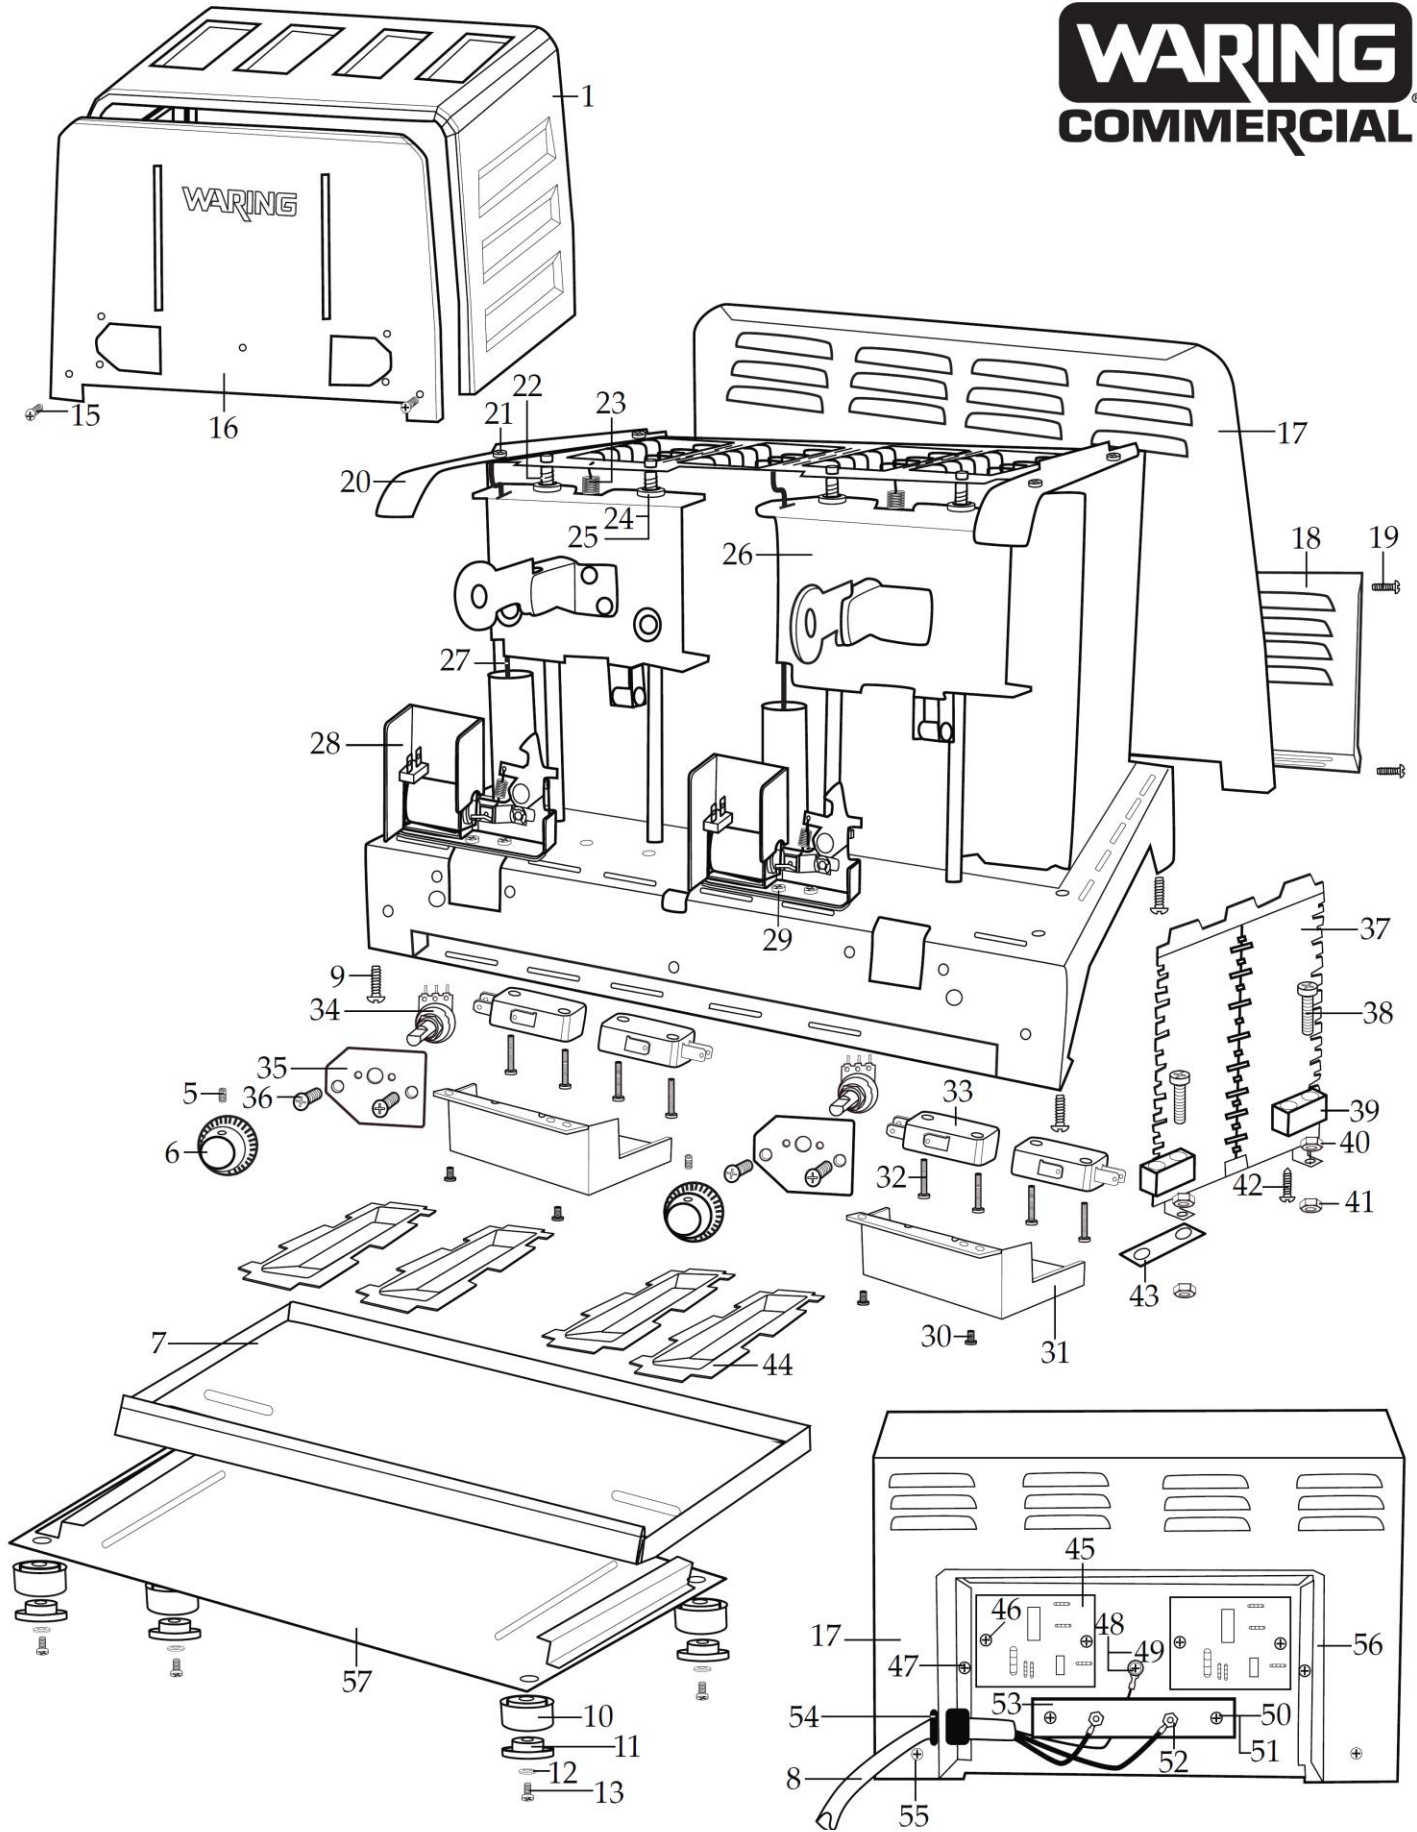

















































Exploded diagram and spare parts list

CB131





Machine	Explode	Code	Description
Waring Slot Toaster WCT805K	1		Top Cover Plate
Waring Slot Toaster WCT805K	2		Push Knob (flat outer centre 2 required)
Waring Slot Toaster WCT805K	3		Push Knob (screw hole in outer centre 2 required)
Waring Slot Toaster WCT805K	4		Screw (2 required)
Waring Slot Toaster WCT805K	5		Set Screw (2 required)
Waring Slot Toaster WCT805K	6	AD369	Browning Control Knob
Waring Slot Toaster WCT805K	7	AD370	Crumb Tray
Waring Slot Toaster WCT805K	8		Cord Set
Waring Slot Toaster WCT805K	9		Screw (4 required)
Waring Slot Toaster WCT805K	10		Foot (4 required)
Waring Slot Toaster WCT805K	11		Rubber Foot (4 required)
Waring Slot Toaster WCT805K	12		Washer (4 required)
Waring Slot Toaster WCT805K	13		Screw (4 required)
Waring Slot Toaster WCT805K	14		Front Panel Assembly
Waring Slot Toaster WCT805K	15		Screw (2 required)
Waring Slot Toaster WCT805K	16		Front Cover Plate
Waring Slot Toaster WCT805K	17		Back Cover Plate
Waring Slot Toaster WCT805K	18		Power Box Cover
Waring Slot Toaster WCT805K	19		Screw (4 required)
Waring Slot Toaster WCT805K	20		Housing Support (2 required)
Waring Slot Toaster WCT805K	21		Screw (4 required)
Waring Slot Toaster WCT805K	22		Compression Wire Spring (4 required)
Waring Slot Toaster WCT805K	23		Moving Bracket Spring (2 required)
Waring Slot Toaster WCT805K	24		Bracket Bushing (8 required)
Waring Slot Toaster WCT805K	25		C Ring (4 required)
Waring Slot Toaster WCT805K	26		Moving Bracket Assembly (2 required)
Waring Slot Toaster WCT805K	27		Damper Cylinder Rod (2 required)
Waring Slot Toaster WCT805K	28		Locking Mechanism
Waring Slot Toaster WCT805K	29		Screw (4 required)
Waring Slot Toaster WCT805K	30		Screw (4 required)
Waring Slot Toaster WCT805K	31		Switch Cover (2 required)
Waring Slot Toaster WCT805K	32		Screw (8 required)
Waring Slot Toaster WCT805K	33		Micro Switch (4 required)
Waring Slot Toaster WCT805K	34		Rheostat (2 required)
Waring Slot Toaster WCT805K	35		Insulated Bracket Plate (2 required)
Waring Slot Toaster WCT805K	36		Screw (4 required)
Waring Slot Toaster WCT805K	37		Elements 17-7341-LFV-B-LF (8 required)
Waring Slot Toaster WCT805K	38		Screw (16 required)
Waring Slot Toaster WCT805K	39		Insulator Bracket-ceramic (16 required)
Waring Slot Toaster WCT805K	40		Hex Nut (16 required)
Waring Slot Toaster WCT805K	41		Hex Nut (16 required)
Waring Slot Toaster WCT805K	42		Screw (16 required)
Waring Slot Toaster WCT805K	43		Jumper Bracket
Waring Slot Toaster WCT805K	44		Baffle (standard slot)
Waring Slot Toaster WCT805K	45		PC Board (2 required)
Waring Slot Toaster WCT805K	46		Screw (4 required)
Waring Slot Toaster WCT805K	47		Screw (2 required)
Waring Slot Toaster WCT805K	48		Lock Washer for ground
Waring Slot Toaster WCT805K	49		Screw-green for ground

Waring Slot Toaster WCT805K	50		Screw (2 required)
Waring Slot Toaster WCT805K	51		Power PCB Holder (2 required)
Waring Slot Toaster WCT805K	52		Hex Nut (4 required)
Waring Slot Toaster WCT805K	53		Power Terminal Board
Waring Slot Toaster WCT805K	54		Strain Relief
Waring Slot Toaster WCT805K	55		Screw (2 required)
Waring Slot Toaster WCT805K	56		Power Box Body
Waring Slot Toaster WCT805K	57		Bottom Cover
Waring Slot Toaster WCT805K	Not numbered	027214	Main PCB Holder for PC board
Waring Slot Toaster WCT805K		027222	Screw for front panel assembly

**Micro Switch for Older Models:**

