



**Portable Ice Maker
Instruction Manual**

Model
HEA653

Thank you for purchasing your Arctica Ice Maker. To make full use of the product please read this manual carefully before using the product and keep it safe for future reference.

Safety Tips

- If you find any damage when the product is unpacked, contact your Arctica supplier within 24 hours of receipt of goods
- Always position on a flat stable surface
- Repairs should always be carried out by a qualified technician
- Do not use with any other liquid apart from water
- **ONLY USE WATER SUITABLE FOR DRINKING**
- Do not use this product outside
- Always switch off and unplug the unit before cleaning
- Move by holding the product by the base
- Always store flat and do not store products on top of it
- If the power cord becomes damaged it must be replaced by a qualified technician
- This product is not designed to be used by persons with reduced physical or mental capabilities, lack of experience or knowledge, unless they are given suitable supervision, this includes children.

Pack Contents

- 1 x Arctica Ice Maker
- 1 x Ice Basket
- 1x Ice Scoop

Operation

- Remove all outer and inner packaging and ensure there is an ice scoop & basket – If not please contact your Arctica distributor.
- Clean the tank & ice basket
- Place the ice maker on a flat and level countertop out of direct sunlight
- Allow the unit to settle for 1 hour
- Remove the ice basket and fill with water to MAX line
- Press ON/OFF button to begin the ice making process
- Select the cube size by pressing the SELECT button
- Ice making cycle will last between 6 – 13 minutes

Cleaning & Maintenance

- Ensure the water is changed every 24 hours – If the unit is not being used drain all the water from it using the plug on the base
- Clean the interior & exterior with warm soapy water
- Dry with a clean soft cloth
- DO NOT submerge the ice maker in water or use water sprays to clean it
- Always clean your Arctica Ice Maker daily
- Periodically it is advised to run a full tank of water through the ice maker with lemon juice to remove any smell that might build up

Troubleshooting

Fault	Possible Cause	Solution
Add Water indicator is on	Lack of water	Stop the ice maker, fill with water, press ON/OFF to restart the unit
Ice Full indicator is on	Ice basket is full	Empty the ice basket and restart the unit
No ice being formed	Room or water temp is too high	Room temp should be 10-43c, water temp should be 8-32c
	Pipe is blocked	Contact your Arctica distributor

Transportation and Storage

Please handle your ice maker with care to prevent any damage to the unit and internal parts. The ice maker should be stored somewhere which is ventilation and non-corrosive gas.

Do not store any flammable objects near the equipment.

Technical Information

HEA653 – Arctica Ice Maker

Voltage ~230v 50/60Hz

Refrigerant : R134a/62g

Weight : 9.2 kg

Dimensions : 242 x 358 x 328mm

- Arctica Ice Maker is supplied with a 3 pin plug and lead with a 13 amp fuse
- Appliance must be earthed
- If in doubt contact a qualified electrician or your Arctica distributor

Disposal



Under WEEE regulations this product must not be disposed of as household waste. To prevent damage to the environment and humans this product must be disposed of in an approved and environmentally friendly recycling process. For more information on how to dispose of this correctly please contact your Arctica distributor or local authority responsible for waste disposal.

Compliance



All Arctica parts and products have under gone a stringent testing process to ensure that comply with all European standards and specifications. All Arctica products carry the CE approval symbol.