

CF132 Foyer Trolley

Assembly Instructions

- (UK) **Telephone Helpline**: 0845 146 2887 (United Kingdom) / 1300 225960 (Australia)
- NL Klantenondersteuning: 040 2628080 (Nederland) / 050 609999 (België)
- FR Standard d'assistance téléphonique: 01 64 89 73 61 (Français) / 050 600006 (Belgique)
- DE Telefonische Helpline: 0800 1860806 (Deutschland)
- ES Línea de asistencia telefónica: 901-100 133 (España)

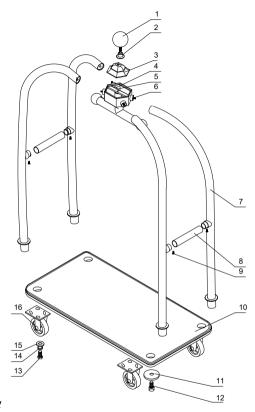


Figure 1

Parts List:

1.	Φ120 diameter ball	1 No
2.	Ball washer	1 No
3.	Small cover	1 No
4.	39X14 flat washer	4 No
5.	M12X40 bolt	4 No
6.	Head unit	1 No
7.	frame	4 No
8.	handle rail	2 No
9.	M6X12 screw	4 No
10.	Platform	1 No
11.	39X14 flat washer	4 No
12.	M12X40 bolt	4 No
13.	M8X20 bolt	16 No
14.	M8 spring washer	16 No
15.	M8 flat washer	16 No
16.	fixed wheel(universal wheel)	4 No
17.	10mm hexagon ring spanner	1 No

Assembly Instructions:

- Using fixings 13, 14 and 15, attach the wheels to the underside of the Platform: take care to ensure that both fixed wheels 16 are at one end of the Platform and both Universal wheels are at the other end.
- 2. Take two frame legs **7**, ensuring that the lugs in the centre face one another.
- 3. Insert the frame leg lugs into either side of the handle rail **8** and rotate the handle rail to ensure that the screw holes line up: secure the handle rail in position with 4 No. M6x12mm screws **9**.
- 4. Repeat steps 2 & 3 for the frame legs for the other end of the trolley.
- Insert the foyer trolley head piece 6 into the frame legs 7; use spanner 17 to tighten bolts from the headpiece into the frame legs (as Figure 2)
- 6. In turn, locate items **3** and **2** onto the head unit **6** and tighten them together using **1**.
- 7. Once the frame is assembled locate the frame legs in their respective hole **10** locations on the platform.
- 8. Secure the frame legs to the platform using fixings **11** and **12** (as *Figure 1*)



Figure2