



**Chefmaster Double Induction Hob 3Kw
Instruction Manual**

Model

HEA517 – 3.1kw

Thank you for purchasing your Chefmaster Induction Hob. To make full use of the product please read this manual carefully before using the product and keep it safe for future reference.

Safety Tips

- If you find any damage when the product is unpacked, contact your Chefmaster supplier within 24 hours of receipt of goods
- Always position on a flat stable surface
- Repairs should always be carried out by a qualified technician
- Do not use this product outside
- Do not carry when hot
- Do not move the appliance during cooking or with hot cookware on it
- Do not use cookware less than 12cm in diameter
- Do not place empty cookware on this appliance
- Do not place metal utensils/objects on this appliance as they may become hot
- Do not place magnetic items on the glass top during operation
- People with pace makers should not use this appliance, and should keep 60cm away
- Always switch off and unplug the unit before cleaning
- Move by holding the product by the base
- Always store flat and do not store products on top of it
- If the glass is cracked disconnect from the power and contact a Chefmaster distributor or qualified technician
- If the power cord becomes damaged it must be replaced by a qualified technician
- This product is not designed to be used by persons with reduced physical or mental capabilities, lack of experience or knowledge, unless they are given suitable supervision, this includes children.

Pack Contents

- 1 x Chefmaster Induction Hob

Before Use

- Remove all packaging including all protective plastic from your Chefmaster Induction Hob
- Position on a flat surface
- Plug your Chefmaster Induction Hob into the mains
- The hob will now be ready to turn on

Operation

Cookware

Suitable cookware

- All magnetic pans
- Enameled/non enameled cast iron and iron pans
- Steel/mild steel/stainless steel pans
- All pans must be flat bottomed and with a diameter between 12 – 26cm

Unsuitable cookware

- Heat –resistance glass
- Ceramic
- Copper pans
- Aluminum pans
- Rounded bottom pans

- Ensure the hob is plugged in and the power is on
- Touch the “on/off” button and the power light will shine
- Place a suitable piece of cookware on the hob
- **NEVER PLACE AN EMPTY PAN OR COOKWARE ON THE HOB ONCE IT IS SWITCHED ON**
- Once the digital display is on, touch the “select” button and set the desired cooking power with the button of “up” or “down”. The hob will default to 1200w for the left plate, and 1000w for the right plate.
- Touch the “select” button again to switch between POWER and TEMPERATURE
- Touch the “timer” and then “up” / “down” to select the cooking time. The timer will default to “0” minute. Press “on/off” to cancel the timer function.
- To lock the panel, press the “lock” button and the lock indicator will shine. To unlock, press & hold the “lock” button until it makes “beep” sound twice.
- The hob will shut off automatically if there has been no operation for 2 hours, unless the timer is set.

Cleaning & Maintenance

- Before cleaning disconnect the Hob from the electricity supply.
- Once the unit has cooled completely wipe with a damp, soapy cloth.
- DO NOT submerge the hob in water or use water sprays to clean it
- Always clean your Chefmaster Induction Hob daily
- Use a vacuum cleaner to clean the air intake & exhaust vents

Troubleshooting

Fault	Possible Cause	Solution
Error message E0	No Cookware or incorrect cookware on the hob	Place a suitable pan on the cooking zone
E1	Device is too hot	Clean ventilation slots and let the unit cool for a few minutes
E2	Overheating protection is active	Remove cookware from the hob, switch off and leave to cool for a few minutes
E3	Power input has changed	Switch off the unit and allow it to cool, if the problem continues contact your Chefmaster distributor

Transportation and Storage

Please handle your induction hob with care to prevent any damage to the unit and internal parts. The induction hob should be stored somewhere which is ventilation and non-corrosive gas.

Do not store any flammable objects near the equipment.

Technical Information

HEA517 – Double Induction Hob

Voltage 240v 50/60Hz

Power 3.1Kw

Weight ___kg

Dimensions 605x360x63mm

- Chefmaster Induction Hobs are supplied with a 3 pin plug and lead with a 13 amp fuse
- Appliance must be earthed
- If in doubt contact a qualified electrician or your Chefmaster distributor

Disposal



Under WEEE regulations this product must not be disposed of as household waste. To prevent damage to the environment and humans this product must be disposed of in an approved and environmentally friendly recycling process. For more information on how to dispose of this correctly please contact your Chefmaster distributor or local authority responsible for waste disposal.

Compliance



All Chefmaster parts and products have under gone a stringent testing process to ensure that comply with all European standards and specifications.

All Chefmaster products carry the CE approval symbol.