

### **Installation Manual**

- ❖ Position the refrigerator level (4 adjustable feet at bottom)
- ❖ Do not place refrigerator in direct sun light
- ❖ After installing leave cabinet for 2 hours before switching it on
- ❖ Ensure bottom grill (below door) is clear at all times
- ❖ Do NOT block the air slots at the inside of the refrigerator
- ❖ Be aware you should always close doors securely (especially with Sliding Doors)

### **General**

- ❖ Load products at the end of the day so you have full pull down time available before opening
- ❖ Never obstruct airflow inside refrigerator, to obtain maximum cooling performance
- ❖ If working or cleaning on the refrigerator, always take out the plug from the power supply
- ❖ Parts inside machine compartment can be hot, cold or sharp. Be aware of this !!
- ❖ Switch OFF the light during closing hours (switch is located below door)

### **Power supply**

Power supply required: 220-240- Volts AC - 50 Hz

### **ON-OFF switches**

With the ON-OFF switch at the inside of the cabinet (in back panel at the top), you can turn off the complete unit.

### **Light switch**

With the light switch at the front of the cabinet, you can only put off the light inside the cabinet. The refrigerator will stay on

### **Maintenance**

For cleaning the refrigerator use lukewarm water and a mild domestic cleaner. Never use abrasives or aggressive chemicals. Do not use too much water. Keep water away from electrical components.

### **Condenser**

There is a high capacity finned condenser in the machine compartment. The condenser is fan assisted.

In order to reduce energy consumption to a minimum and also have maximum cooling capacity, it is advised to clean the condenser every 6 months minimum for the average situation.

In a dusty ambient, condenser might be cleaned more frequently in order to keep maximum cooling capacity and give a long lifetime.

Please be aware the frequency of cleaning required is based upon the ambient of the refrigerator.

You have to check and determine the optimal cleaning frequency yourself.

**Be aware there are hot, sharp and moving components inside the machine unit.**

**Always remove plug from power supply before you start any maintenance or handling.**

Always replace the back panel to cover the machine unit and refit all the original screws.

Always follow the instructions.

No unauthorized people should enter the machine compartment nor make repairs.

292号--157克双铜, A4双面, 印黑色



## **User Manual for Bottle Cooler**

BAR10

BAR20