


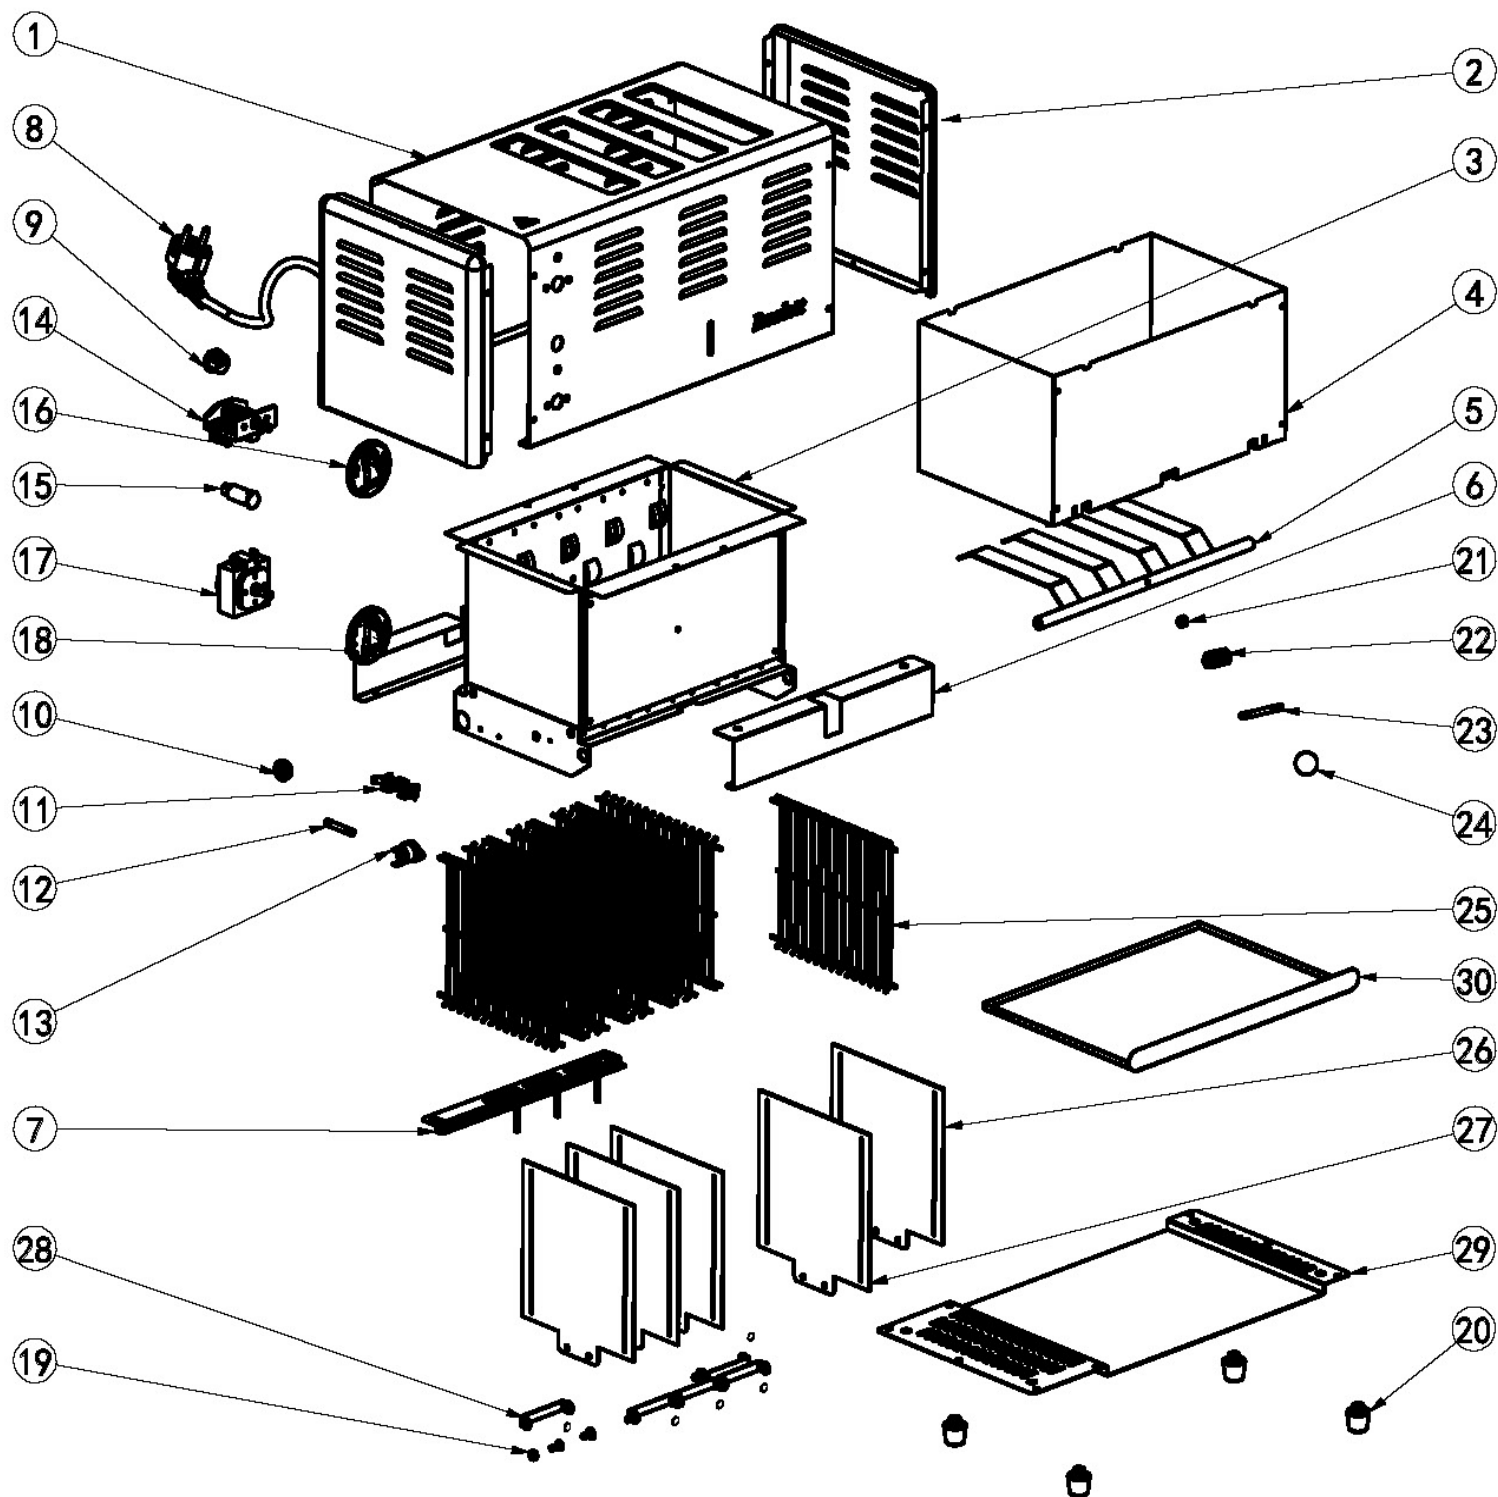

Machine	Explode	Code	Description
CH170 - Rowlett Premier 4 Slot Toaster	1		Pre-4 Body
CH170 - Rowlett Premier 4 Slot Toaster	2		End Plates
CH170 - Rowlett Premier 4 Slot Toaster	3		Inner Assy/P4
CH170 - Rowlett Premier 4 Slot Toaster	4		Heat Shield Assy/P4
CH170 - Rowlett Premier 4 Slot Toaster	5		Finger Bar/P4
CH170 - Rowlett Premier 4 Slot Toaster	6		Adapter Plate/P4
CH170 - Rowlett Premier 4 Slot Toaster	7		Fixed Plate/P4
CH170 - Rowlett Premier 4 Slot Toaster	8	AK221	Power Cord
CH170 - Rowlett Premier 4 Slot Toaster	9		Power Cord Buckle
CH170 - Rowlett Premier 4 Slot Toaster	10		Wire Bushing
CH170 - Rowlett Premier 4 Slot Toaster	11	AK222	Fuse Holder
CH170 - Rowlett Premier 4 Slot Toaster	12		Fuse
CH170 - Rowlett Premier 4 Slot Toaster	13	AK223	Thermostat Cut Out
CH170 - Rowlett Premier 4 Slot Toaster	14	AK224	Position Selector
CH170 - Rowlett Premier 4 Slot Toaster	15	AK225	Indicator
CH170 - Rowlett Premier 4 Slot Toaster	16	AK587	Selector Knob
CH170 - Rowlett Premier 4 Slot Toaster	17	AK239	Timer
CH170 - Rowlett Premier 4 Slot Toaster	18	AK240	Timer Knob
CH170 - Rowlett Premier 4 Slot Toaster	19		Screw/Nut
CH170 - Rowlett Premier 4 Slot Toaster	20	AK229	Feet (set 4)
CH170 - Rowlett Premier 4 Slot Toaster	21	AK230	Nut
CH170 - Rowlett Premier 4 Slot Toaster	22		Spring
CH170 - Rowlett Premier 4 Slot Toaster	23		Ejectorbar
CH170 - Rowlett Premier 4 Slot Toaster	24		Sphere Knob
CH170 - Rowlett Premier 4 Slot Toaster	25		Guard Wire
CH170 - Rowlett Premier 4 Slot Toaster	26	AK231	End Element 310W
CH170 - Rowlett Premier 4 Slot Toaster	27	AK232	Middle Element 400W
CH170 - Rowlett Premier 4 Slot Toaster	28	AK233	Element Link
CH170 - Rowlett Premier 4 Slot Toaster	29		Base Plate/P4
CH170 - Rowlett Premier 4 Slot Toaster	30	AK237	Crumb Tray/P4
CH170 - Rowlett Premier 4 Slot Toaster	N/A	AL994	Side & Middle Elements