

INSTRUCTIONS FOR USE AND INSTALLATION PANINI XL



Made in France


CONTACT-GRILL PANINI XL

Congratulations for the acquisition of this upmarket appliance made in France. You chose an appliance which alloys the best technical qualities with a big user-friendliness. We wish you the biggest contentment

1. SECURITY INSTRUCTIONS

Please respect these instructions scrupulously to avoid any risk of fire, electric shock, scald or other wounds and damage. During the use of this appliance, fundamental circumspection of security must always be noticed, such as:

- Take into account the instructions to be systematically kept with the appliance.
- Install the appliance always in instructions respect. A 10 cm distance minimum with the partition or the wall is necessary.
- Protect the appliance from direct light of the sun, frost and humidity.
- Never leave the appliance within the reach of children or disabled persons without surveillance.
- Never move the appliance when it is working or when the surfaces of cooking are still hot.
- Check that the appliance is definitely off before connecting it up or disconnecting it.
- Do not touch the hot surfaces of the appliance. The temperature of the hot surfaces can be very important when the appliance is working. Always use handles and control knobs.
- Do not use the appliance for other functions than determined use.
- Do not leave the electrical cord in contact of hot surfaces.
- The appliance should not be used close to combustible materials.
- During use, look after not to obstruct hearings of aeration of the appliance
- To avoid any electric shock, never plunge the appliance, the cord or plug in water or quite other liquid.
- If the cord is harmed, it must be replaced by the producer, his after sale service or persons of similar skills to avoid any risk.
- Entrust repairs only to a skilled person.
- Use only spare parts of origin.
- At the end of cooking, before cleaning the appliance, do not forget to disconnect it.

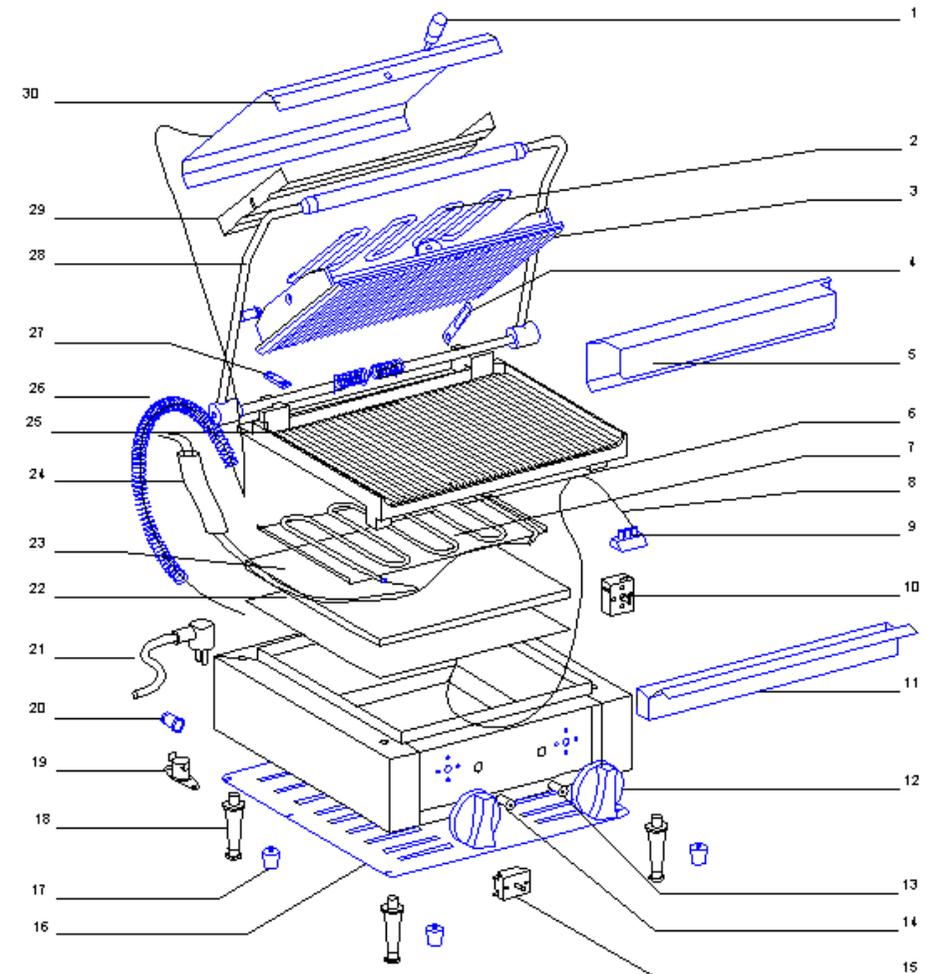

Nomenclature **PANINI XL**
Spare parts **PANINI XL**

Rep	Code	Qty	Pièce	Spare part
1	A15008	1	Poignée plaque supérieure	Top plate handle
2	D02101	1	Résistance haute	Top heating element
3	B02042+PTR	1	Plaque supérieure rainurée	Top grooved cast iron plate
	B02045+PTR	1	Plaque supérieure lisse	Top flat cast iron plate
4	37212	2	Guide plaque supérieur	Top plate guide
5	37202	1	Cache ressort	Spring protection
6	D02102	1	Résistance basse	Bottom heating element
7	37206	1	Serre résistance bas	Bottom element plate
8	C05016	1	Fil de terre	Earth wire
9	A16013	2	Bornier 3 plots	Three holes domino
10	A06032	1	Thermostat	Thermostat
11	37200	1	Bac à sauce	Sauce lid
12	A14078	2	Bouton	Knob
13	A08003	1	Voyant orange	Orange pilot light
14	A08009	1	Voyant vert	Green pilot light
15	A01001/1	1	Commutateur	Commutator
16	37205	1	Fond de socle	Bottom casing
17	A13003	4	Pied caoutchouc	Rubber foot
18	A13005	4	Pied	Pied
19	A06034	1	Thermostat sécurité	Safety thermostat
20	A10032	1	Presse étoupe 16	Cord closer 16
21	C03007	1	Cordon avec prise	Cord with plug
22	37208	1	Défecteur	Deflector
23	H02050	1	Isolant inférieur	Bottom insulation
24	C04007	1	Isolant	Insulation
25	B02043+PTR	1	Plaque inférieure rainurée	Bottom grooved cast iron plate
	B02044+PTR	1	Plaque inférieure lisse	Bottom flat cast iron plate
26	C04008	1	Gaine ressort	Spring girdle
27	B04027	2	Bride poignée	Handle strap
28	F01028	1	Poignée complète	Handle assembly
29	37207	1	Serre résistance haut	Upper element plate
30	37203	1	Capot inox	Stainless steel cover
	B07029	2	Ressort	Spring

2. CONTENTS OF CARDBOARD PACKAGING

Device: a contact-grill Panini XL

Accessories: - A drip tray
- A stainless steel scraper
- The present note

See exploded views for PANINI XL at the end of the document

3. CONFORMITY OF USE

Use the device as a griddle plate to fry very quickly fresh or deep-frozen steaks, hamburgers: without reduction, retaining all the juice and vitamins.

Another possibility is to use it as a contact grill : thanks to its extra large cooking surface (360 x 360 mm), you can bake up to 5 paninis a time

4. WAY OF FUNCTIONING

This machine is fitted with cast iron plates for a perfect cooking. The upper plate is self-balanced and the pressure spring is adjustable to adapt the cooking to the food. The armoured heating elements distribute heat evenly on all cooking surfaces.

To turn on and preheat the plates, turn the commutator (n°1 on picture) on the wished position, the green pilot light (n°2 on picture) ignites. Turn the thermostat control knob (n°4 on position) on the wished position, the orange pilot light ignites (n°3 on picture), the appliance is on and is heating.

When orange pilot light switches off, the device is ready for the cooking.

During cooking, the temperature can be regulated thanks to thermostat control knob (n°4 on picture) to avoid phenomenon of overheating. Orange pilot light indicates heating periods.

Your machine is fitted with a removable drip tray (n°5 on picture) for the evacuation of cooking juices and fat. It must be regularly emptied. It is recommended to pour some water into the drip tray at the beginning of cooking to facilitate the cleaning and avoid the solidification and the accumulation of fat in the drip tray

Never use the machine without the drip tray (n°5 on picture)



- 1 Commutator
- 2 On/off pilot light
- 3 Thermostatic pilot light
- 4 Thermostat control knob
- 5 Drip tray

5. FUNCTIONING / MANIPULATION


a) Installation / assembly:

- Unpack carefully the device of its packaging.
- Place the contact-grill on a plane and heatproof surface.
- Never place the device near a wall or near a partition makes of combustibles materials even if it is very well isolated.
- A distance of minimum 10 cm with the partition or the wall is necessary.
- Remove the protective film from the upper cover without forgetting the one on the drip tray (n°5 on picture)

b) First starting:

Before the first use, remove the anti-corrosion protection fat with a cleaner. Then, it is necessary to grease plates with oil.

During the first use, warm your machine up outside during about 30 min to evacuate residual smokes of manufacturing oil from the metallic parts. This may emit a slight smell for a few moments.

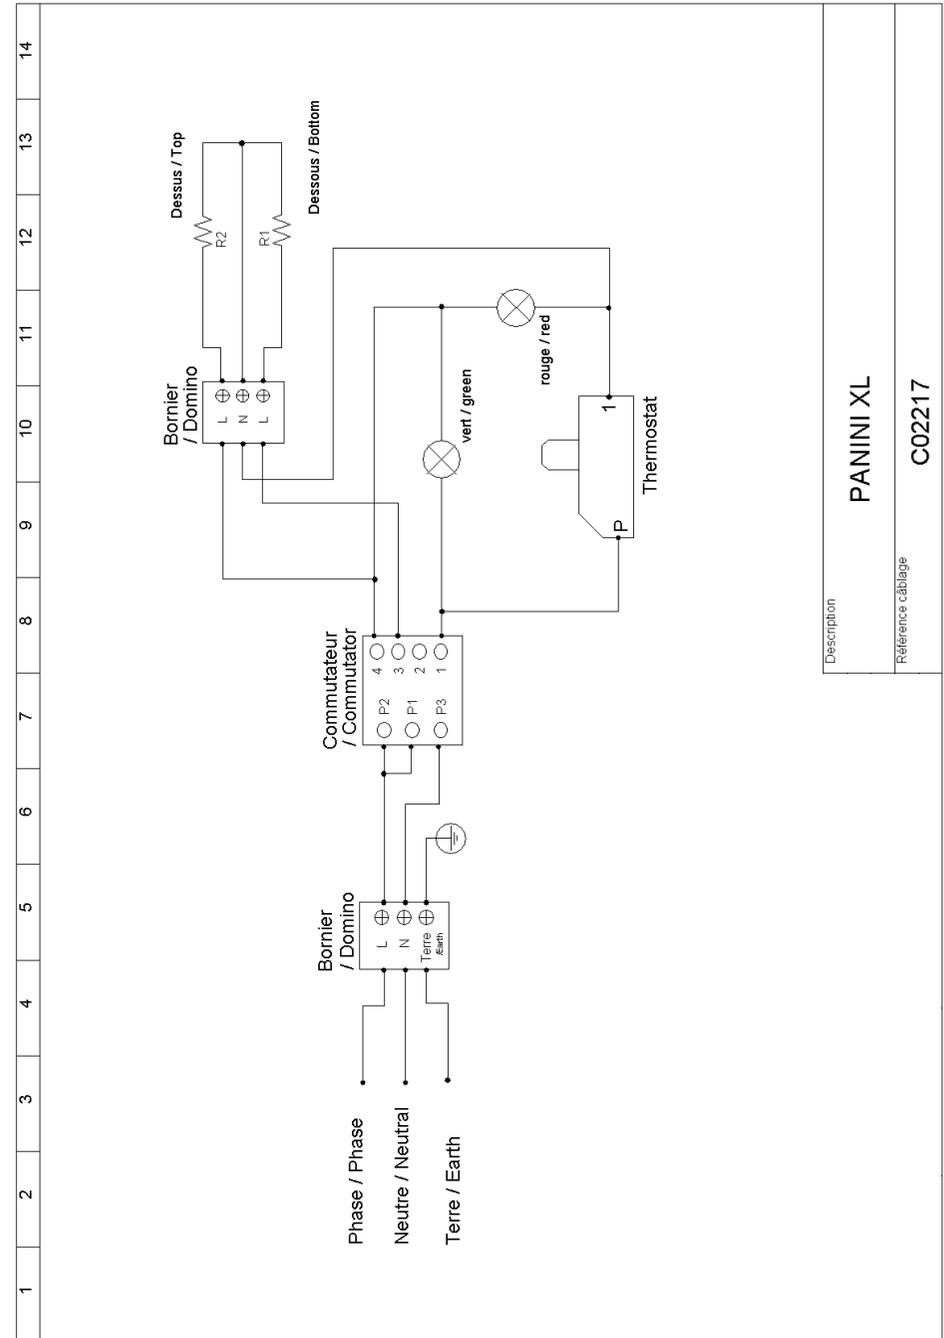

Description

PANINI XL

C02217

Reference câblage

The materials of the device are indeed reusable. By eliminating correctly the electric and electronic wastes, the recycling and quite other shape of re-use of worn equipments, you participate in a significant way in the environmental protection.

For any information about the collection of electric and electronic waste, please contact your distributor.

10. GUARANTEE

Conditions of guarantee

The guarantee applicable to any device is the commercial guarantee of the distributor or the retailer. Please contact the store where you bought your device to know the precise conditions.

The guarantee grants no right for damages.

The dispositions which follow are not exclusive of the profit of the legal guarantee planned by articles 1641 and following ones of the Civil code relative to the defects and the latent defects.

Exclusion clauses of the guarantee

Bad installation and bad maintenance, in particular if they do not respect current regulations or instructions appearing in this user guide.

Cannot benefit from the guarantee the repairs required as a result of false operations, of inappropriate use, of carelessness or of excess loads of the device, as well as those resulting from variations of the power supply, over tension or from defective installations.

The damage due to shocks, bad weather is not flatware by the guarantee. The material travels at the risks of the user; in case of delivery by carrier, the consignee has to have reservations towards the carrier before any delivery of the device.

The guarantee comes to an end in case of intervention, of repair, of modification by no qualified persons, or of use in inappropriate purposes.

First cleaning

Clean the device before the first use. (Cf 6 Cleaning)

Connection of the device

- Check that the tension and the frequency of the electricity network suit to the values indicated on the descriptive plate.
- Check that neither the cord nor the plug are damaged
- Make sure that every control knob is positioned on 0.
- Unwind completely the electric power cable and connect it in a plug connected with the earth.
- The device is connected.

NB: in case of connection of the device in a plug without earth protection or directly on the electricity network, confide its connection to a qualified person .

c) Use of device :

Elements of command and display

Command/Display	Function
Thermostat (n°4 on picture)	Temperature setting
Green pilot light (n°2 on picture)	Machine on (pilot light on) Machine off (pilot light off)
Orange pilot light (n°3 on picture)	Warming up (pilot light on) Desired temperature reached (pilot light off)
Commutator 4 positions	
Position 1	Stop
Position 2	Contact grill (3600 W)
Position 3	Griddle plate (2200 W)
Position 4	Contact grill (3600 W)

Never use the machine without its drip tray (n°5 on picture).

Putting on

- Turn on the commutator (n°1 on picture) on wished position. The green pilot light (n° 2 on picture) is on.
- Turn on the thermostat control knob (n°4 on picture) on the wished position: the orange pilot light (n°4 on picture) ignites. The machine is warming up. Once orange pilot light (n°3 on picture) is off, the machine reached the wished temperature.
- Grease the plates before each cooking.

Temperature setting

Set the temperature by positioning the thermostat (n°4 on picture) to the desired temperature. The orange pilot light (n°3 on picture) switches on if a higher level of temperature is required and switches off when the same is reached.

It is not necessary to leave the device switched on at full power. It is necessary to adapt the temperature to products to be cooked to limit the energy consumption.

If your food sticks on the plate, reduce the temperature of the thermostat

Stopping the appliance

Set each control knob (n°1 and 4 on picture) on 0: the appliance is no longer functioning.

Let the device cool

Disconnect the power cable.

Clean the appliance. (see 6. Cleaning)

Grease the plates

d) Breakdown / repair:

In case of breakdown or of damaged part, please call your after-sales service and confide any technical operation to qualified person.

When you contact the after-sales service of your distributor or your store, give him the complete reference of your device (commercial name, type and serial number). This information appears on the visible descriptive plate behind the device.

6. CLEANING AND MAINTENANCE

Disconnect the device.

- Let cool completely the device before any technical intervention or cleaning.
- For cleaning of plates, only use non-abrasive products, clean regularly the external walls of your device with warm water and wash liquid: avoid the abrasive towelling. Rinse your device with a wet sponge.
- Never clean the device under a water jet, the infiltrations would risk to damage it in a irreparable way.
- Never immerse the device, the cord or the plug in the water or quite other liquid to avoid any electric shock.
- During a prolonged non-use, we recommend you strongly to keep the device shielded from the humidity.
- The drip tray can be washed in a machine

7. TECHNICAL SPECIFICATIONS

Model	PANINI XL
Outside dimensions	410x620x340 mm
Cooking surface	360x360 mm
Weight	34 Kg
Power	3600 W
No element	2
Current	15.5 A
Voltage	220-240 V N~

Wires colours correspondence

Phase

Brown / Black / Grey

Neutral

Blue

Earth

Yellow-Green



The equipotential connection marked by this symbol must be linked with the equipotential conductive connection of your installation by means of a minimum conduction of a 2.5 mm² section.

8. NORMS AND LEGALS DISPOSALS

The device is conform to :

IEC/EN 60335-1

IEC/EN 60335-2-38

EN 55014-1 + 55014-2

EN 61000-3-2 + 61000-3-3

9. ELIMINATION OF THE ELECTRIC AND ELECTRONIC WASTE

The device respects the directives:

2002 / 96 / CE (DEEE) N°34270064800021

2002 / 95 / CE (ROHS)

2006/95 CE

2004/108 CE



Reach rule

Never put the device among household waste.

The device must be put down in a centre of recycling for the electric equipments.