


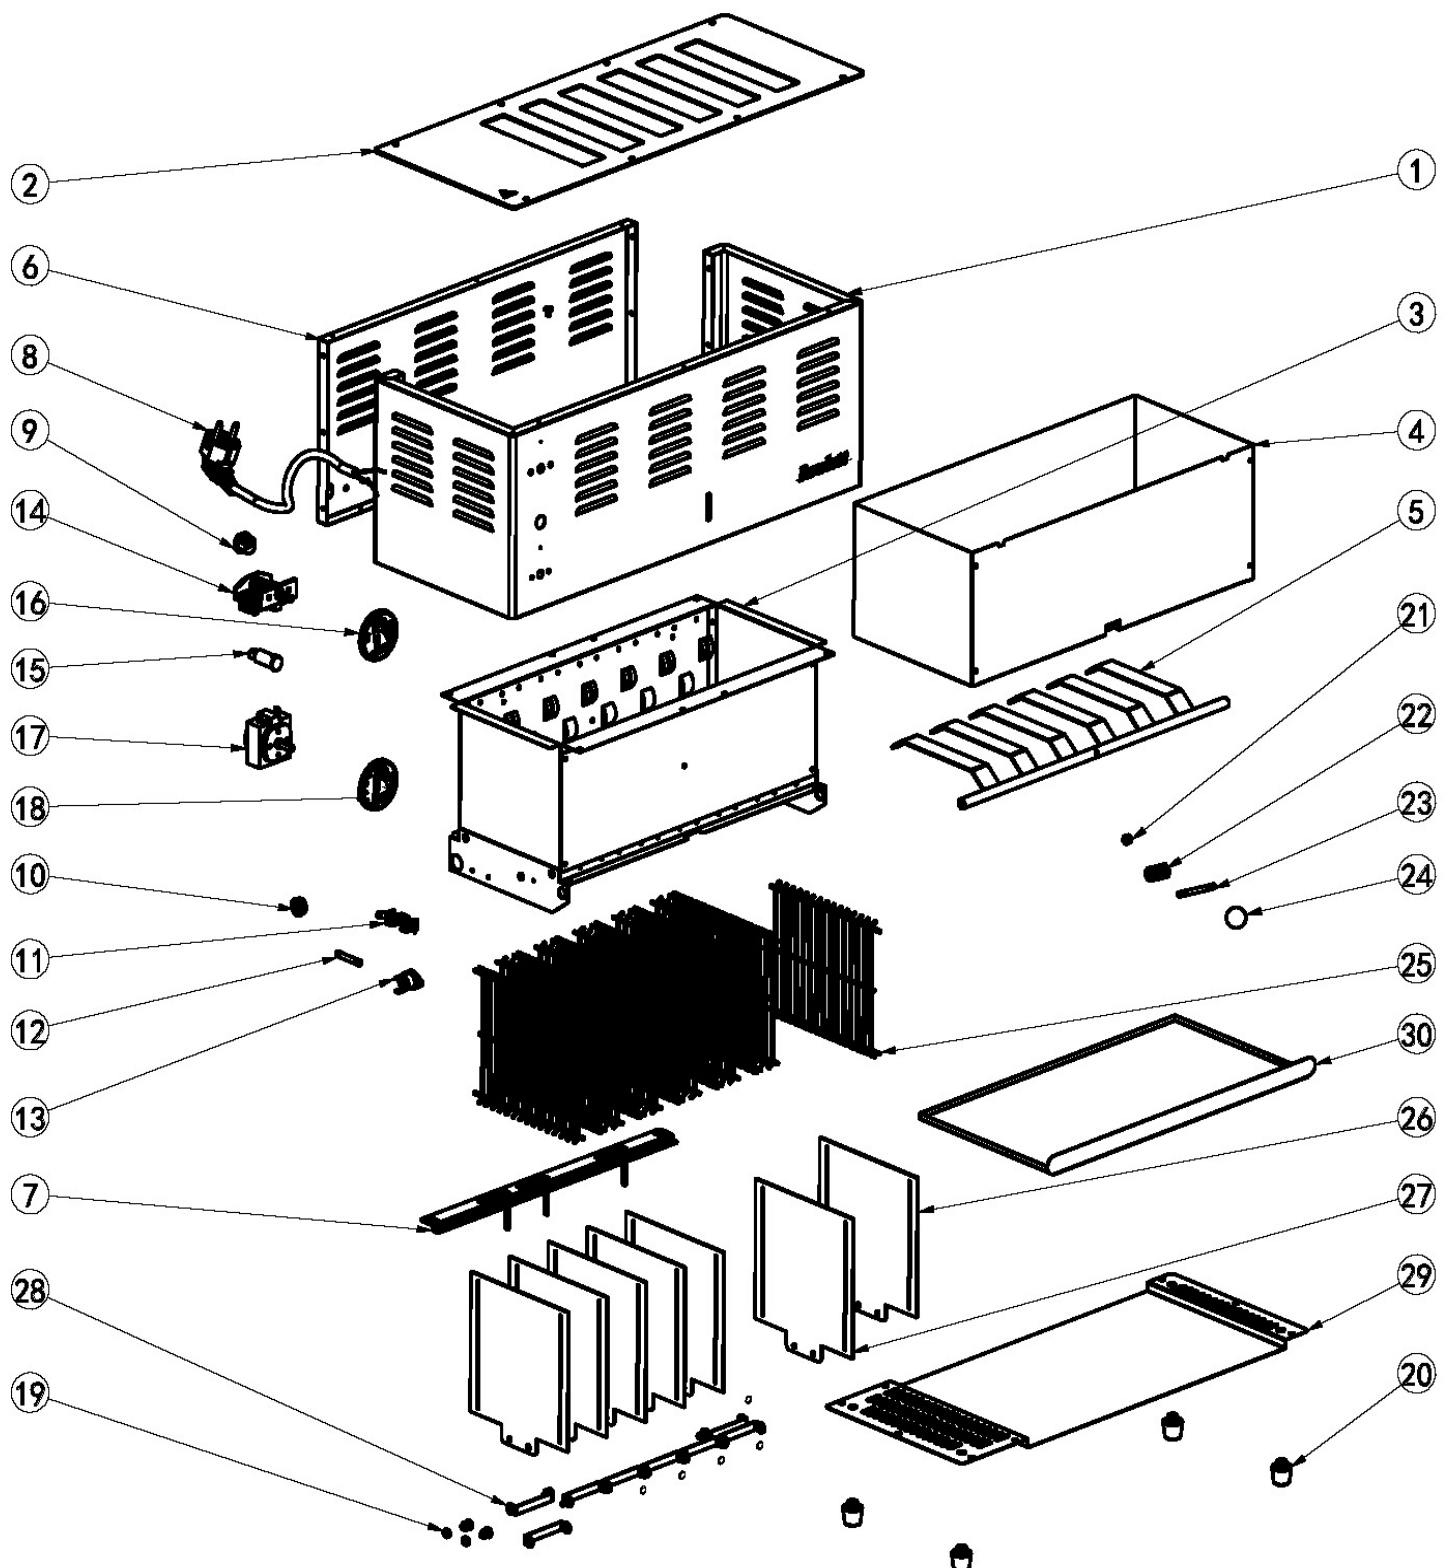

Machine	Explode	Code	Description
CH176 - Rowlett Regent 6 Slot Toaster	1		Reg-6 Body
CH176 - Rowlett Regent 6 Slot Toaster	2		Reg-6 Top Plate
CH176 - Rowlett Regent 6 Slot Toaster	3		Inner Assy/R6
CH176 - Rowlett Regent 6 Slot Toaster	4		Heat Shield Assy/R6
CH176 - Rowlett Regent 6 Slot Toaster	5		Finger Bar/6P
CH176 - Rowlett Regent 6 Slot Toaster	6		Back of Body/6P
CH176 - Rowlett Regent 6 Slot Toaster	7		Fixed Plate/6P
CH176 - Rowlett Regent 6 Slot Toaster	8	AK221	Power Cord
CH176 - Rowlett Regent 6 Slot Toaster	9		Power Cord Buckle
CH176 - Rowlett Regent 6 Slot Toaster	10		Wire Bushing
CH176 - Rowlett Regent 6 Slot Toaster	11	AK222	Fuse Holder
CH176 - Rowlett Regent 6 Slot Toaster	12		Fuse
CH176 - Rowlett Regent 6 Slot Toaster	13	AK223	Thermostat Cut Out
CH176 - Rowlett Regent 6 Slot Toaster	14	AK224	Position Selector
CH176 - Rowlett Regent 6 Slot Toaster	15	AK225	Indicator
CH176 - Rowlett Regent 6 Slot Toaster	16	AK226	Selector Knob
CH176 - Rowlett Regent 6 Slot Toaster	17	AK239	Timer
CH176 - Rowlett Regent 6 Slot Toaster	18	AK240	Timer Knob
CH176 - Rowlett Regent 6 Slot Toaster	19		Screw/Nut
CH176 - Rowlett Regent 6 Slot Toaster	20	AK229	Feet (set 4)
CH176 - Rowlett Regent 6 Slot Toaster	21	AK230	Nut
CH176 - Rowlett Regent 6 Slot Toaster	22		Spring
CH176 - Rowlett Regent 6 Slot Toaster	23		Ejectorbar
CH176 - Rowlett Regent 6 Slot Toaster	24		Sphere Knob
CH176 - Rowlett Regent 6 Slot Toaster	25		Guard Wire
CH176 - Rowlett Regent 6 Slot Toaster	26	AK231	End Element 310W
CH176 - Rowlett Regent 6 Slot Toaster	27	AK232	Middle Element 400W
CH176 - Rowlett Regent 6 Slot Toaster	28	AK233	Element Link
CH176 - Rowlett Regent 6 Slot Toaster	29		Base Plate/P6
CH176 - Rowlett Regent 6 Slot Toaster	30	AK238	Crumb Tray/P6
CH176 - Rowlett Regent 6 Slot Toaster	N/A	AL994	Side & Middle Elements