

## CONTROL PANEL



### DESCRIPTION:

1. ON-OFF BUTTON
2. ON-OFF LED INDICATOR
3. WARMING LED indicator
4. START BUTTON
5. PROGRAM LED indicator



CHECK!



POWER ON




WATER ON

## ATTACHING THE CHEMICALS BOTTLES

Transparent Tube to Detergent


Blue Tube to Rinse-Aid

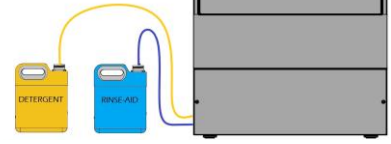

## STEP 1: PLACE THE PARTS



Check that the overflow hose is correctly installed (fig. a).

(B) Check that the wash pump filter in the tank is correctly positioned (fig. b)

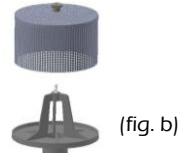

## STEP 2: TURN ON

Press the ON-OFF switch [1]. The POWER LED (2) lights on. The dishwasher will automatically start filling with water up to the set level.

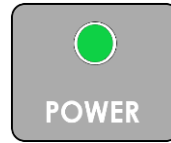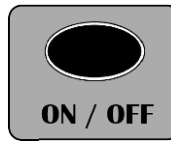

NOTICE!

At initial daily start, allow about 25 to 30 minutes for machine to stabilize water temperatures to their proper temperatures.

## STEP 3: HEATING

After the initial filling stops, the WARMING LED [3] is flashing on until the boiler and the washing tank stops heating up. When the LED [3] switches off, the dishwasher is ready to work






## STEP 4: READY TO USE


When the WARMING LED (3) switch off the dishwasher is ready to use.

Open the door and slide in the basket with dishes/cutlery.

Before inserting the basket, make sure that all food residues are removed from the dishes and cutlery.

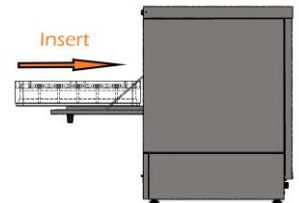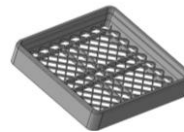

 Check the rinse aid and detergent levels in the compartment. Use only low foaming effect detergents.  
NOTICE!

 **DO NOT USE:**  
ATTENTION!


- Dish SOAP liquid detergents inside the tank's machine.
- Cleaning chemicals containing bleach.


## STEP 5: START THE WASH CYCLE

Close the door.

For the washing program to start, press the START button [4].

The 2-minute washing program starts automatically while at the same time, the PROGRAM LED [5] lights on to indicate that the washing cycle is in progress.

 In case that the door is open accidentally before program is finished, the washing cycle stops. As soon as the door is closed again, the rest of the washing program continues.  
NOTICE!

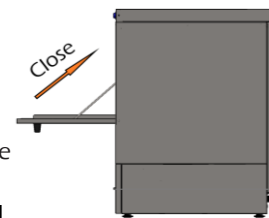

## STEP 6: END OF THE WASH CYCLE

When the program is finished, the green PROGRAM LED (6) lights off to indicate the washing cycle is over. Promptly open the door and remove the basket with the clean items. Use caution with hot items. Allow the dishes and cutlery to dry.




**REPEAT** STEP 4 and STEP 5 to START a new wash cycle.

## STEP 7: TURN OFF / DRAIN

Turn OFF the power switch to shut down the dishwasher (ON/OFF BUTTON). The POWER LED (2) indicator lights off.

Remove any baskets/racks from the dishwasher.

Remove the overflow pipe within the machine's tank and let the machine to drain through gravity force.

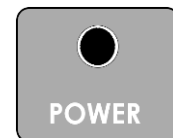


# 8 STEP GUIDE FOR DAILY MAINTENANCE

DW 464/DW 467/DW 468/DW 319

## STEP 1: TURN OFF


Turn OFF the power switch to shut down the dishwasher (ON/OFF BUTTON).

The POWER LED indicator lights off.

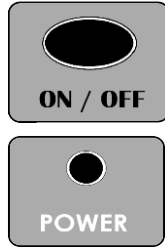

## STEP 2: BASKET / RACKS

Remove any baskets/racks from the dishwasher.

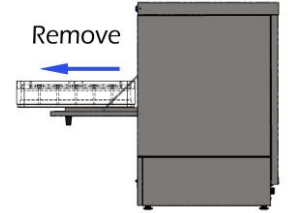

## STEP 3: DRAIN

FOR: DW464


Remove the overflow pipe within the machine's tank and let the machine to drain through gravity force.



FOR: DW467 / DW468 / DW319

- Remove the overflow pipe,
- Close the door
- Press the START BUTTON.
- The machine will automatically starts to drain the water for 120 seconds.

The PROGRAM LED lights on to indicate that the drain cycle is in progress.

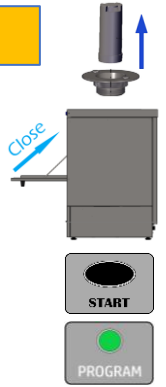

## STEP 4: CLEAN INTERIOR

Before performing maintenance, wait for elapse of the resistances cooling time. Thoroughly cleanse and flush the dishwasher interior. Remove remaining soil with a soft cloth or brush and mild cleanser; rinse again. Do a visual check for general obstructions.



We recommend using a suitable sanitizer liquid (e.g., Jantex CF968)

## STEP 5: CLEAN WASH AND RINSE ARMS

Remove and check wash arms and rinse nozzles to make sure they are free of any lime scale and food solids. Replace and make sure they rotate freely and are without obstructions.



## STEP 6: WASH PUMP FILTER

Remove the wash pump filter from the machine. Clean it and rinse it under running clean water.




## STEP 7: REPLACE PARTS

All removed parts should be properly re-assembled into the machine ensuring they are securely in position.

## STEP 8: AIR OUT

Leave machine door(s) open to allow interior to air out and dry overnight.

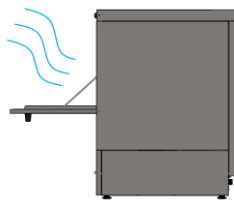

## DO NOT USE FOR CLEANING:

- Dish SOAP liquid detergents inside the tank's machine.
- Cleaning chemicals containing bleach.
- Steel sponges/scourers or wire brushes
- The appliance should never be sprayed with water jet, a high pressure cleaner or a steam cleaner.

**BUFFALO**

recommends

**Jantex**

Check chemical bottles daily. Do not allow to run dry.  
If bottles run; dry perform 8-10 wash cycles to prime machine.