

WARING PRO™

FOOD & BEVERAGE
BLENDER SERIES



MB & PB SERIES

For your safety and continued enjoyment of this product,
always read the instruction book carefully before using.

Contents

Safety Cautions	1
Instructions for Use	3
Hot Blending Instructions	3
Reset Switch	4
Cleaning & Maintenance.....	4
UK Guarantee.....	5
UK After Sales Service	6
UK Wiring Instructions.....	7

SAFETY CAUTIONS

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance. The appliance should only be used for the preparation of drinks/food as described within this instruction book.

- Please read all instructions before use and retain for reference.
- Do not immerse the motor unit in water or other liquids or wash in a dishwasher.
- Do not operate this appliance if the lead is damaged. In the event of damage, discontinue use immediately and contact the Waring Service Centre (refer to UK After Sales Service).
- Do not use this appliance if it has been damaged or dropped. Discontinue use immediately and contact the Waring Service Centre (refer to UK After Sales Service).
- No repair should be undertaken by the user. Return the appliance to the Waring Service Centre for repair/replacement (refer to UK After Sales Service).
- Only use the attachments supplied with this Waring appliance. Do not use the carafe on any other appliance.

- Only use the appliance indoors on a solid, level work surface.
- Do not allow the lead to hang over the edge of the work surface.
- Avoid contact between the lead and hot surfaces.
- Always hold the carafe with one hand whilst blending.
- Always operate the blender with the cover in place.
- When blending hot liquids, remove the centre part of the two-piece cover. Limit the amount of material processed to 200ml or 8 fl oz. Always start blending at the lowest speed setting. Keep hands and other exposed skin away from the open centre of the cover to prevent possible injury. For further advice, refer to Hot Blending Instructions.
- **IMPORTANT** – Never place hands or utensils in the carafe or touch the blades whilst the appliance is switched on or plugged in.
- Always remove the carafe from the base of the appliance before emptying the contents.
- Sharp blades. Handle with care.
- Adult supervision is required when the appliance is used near children and some disabled persons. This appliance is not suitable for use by children. Store out of the reach of children.
- Suitable for household use only.
- Do not leave the blender unattended whilst in operation.
- Always switch off and unplug the appliance from the mains when not in use, when attaching or removing parts and when cleaning.
- This appliance complies with the basic requirements of Directives 89/336/EEC (Electromagnetic Compatibility) and 73/23/EEC (Safety of Domestic Electrical Appliances), amended by Directive 93/68/EEC (CE Marking).

Instructions for Use

Before using this appliance for the first time, the carafe and lid should be cleaned (refer to Cleaning & Maintenance).

- Ensure the appliance is switched off and unplugged.
- Place the carafe on the base of the appliance. Never use a container other than a Waring carafe with your Waring blender.
- Plug into a suitable mains socket.
- For best results, do not fill the container above the 650ml level.
- Place the ingredients into the carafe, adding liquid ingredients first unless the recipe specifies otherwise.
- Put the cover on the carafe.
- Always start blending at the lowest speed setting.
- Always hold the carafe with one hand whilst blending.
- When blending ice drinks, keep the blades covered with liquid, switch on, remove the centre part of the two-piece cover and feed ice cubes slowly into the carafe.
- To avoid damaging the appliance, do not operate the blender if the blades become blocked or jammed during use. Switch off immediately, remove the carafe from the base and dislodge the material causing the blockage using a plastic spatula.
- Always clean the appliance and carafe immediately after each use and before storing away.

Hot Blending Instructions

To minimise the possibility of personal injury when blending hot ingredients, the following precautions and procedures must be observed:

- Limit the amount of material processed to 200ml (8 fl oz).
- Completely remove the centre part of the two-piece

cover. (This will allow venting of the rapidly heated and expanding air present inside the carafe.)

- Keep hands and other exposed skin away from the open centre of the cover to prevent possible injury when the blender is in operation.
- Always start blending at the lowest speed setting.
- Whilst blending, up to 330ml (12 fl oz) of additional liquid can be added. Pour liquid slowly through the opening in the cover.

Reset Switch

- In the event that the motor becomes overloaded, the appliance will cut out.
- Should this occur, switch the appliance off and unplug from the mains.
- Remove the carafe from the base of the appliance.
- Leave the appliance to stand for 10-20 minutes.
- To reset the appliance, turn the base upside down and press the red reset switch.
- Replace the carafe on the base, plug into a suitable mains socket and switch on.

Cleaning & Maintenance

Cleaning the Carafe

- Ensure the appliance is switched off and unplugged from the mains.
- Remove the carafe from the base of the appliance.
- Clean the carafe and lid to remove as much residue as possible and empty the carafe.
- Pour a cup of cleaning solution into the carafe and put the cover on.

- Place the carafe on the base of the appliance and run on the HI speed setting for two minutes.
- Empty the carafe and repeat as above.
- Rinse the carafe and dry thoroughly before storing.

Cleaning the Base

- Ensure the appliance is switched off and unplugged from the mains.
- Wipe the exterior surfaces with a soft cloth or sponge dampened with cleaning solution and dry thoroughly.
- Do not immerse the base in water or other liquids, or wash in a dishwasher.

UK Guarantee

- This Waring appliance comes with a lifetime guarantee, excluding the carafe.
- This guarantee covers defects under normal household use from date of purchase, and ceases to be valid in the event of alteration or repair by unauthorized persons.
- If the appliance does not perform satisfactorily due to defects of material or manufacture, it will be repaired or replaced by the manufacturer (refer to UK After Sales Service for details).
- This guarantee is only valid for Waring products purchased in the United Kingdom and Eire (NB: includes the Channel Islands and the Isle of Man).
- No responsibility is accepted for any damage caused in transit or if dropped during use.
- A charge may be made if the appliance is returned unnecessarily.
- The manufacturer reserves the right to amend terms and specifications without prior notice.
- This guarantee in no way affects your statutory rights.

UK After Sales Service

For further advice on using this Waring appliance, and other products in the Waring range, please contact the Waring Customer Care Line on 08700 604260 (09:00 to 17:00 Monday to Friday) or, alternatively, e-mail your enquiry to support@waringproducts.co.uk.

In Guarantee

Before returning an appliance to the Service Centre, please contact the Waring Customer Care Line on 08700 604260 (09:00 to 17:00 Monday to Friday) or, alternatively, e-mail details of the fault to support@waringproducts.co.uk.

Products should be returned to the following address:

Waring Service Centre
PO Box 506
WIGAN
WN1 9AA

Enclose your name and address, together with proof of purchase and details of the fault. Waring will either repair or replace the product as appropriate.

Out of Guarantee

Contact the Waring Customer Care Line on 08700 604260 (09:00 to 17:00 Monday to Friday) or, alternatively, e-mail your enquiry to support@waringproducts.co.uk for details of the standard repair or replacement charge. If you wish to proceed with the repair or replacement, return the product to the Waring Service Centre at the following address:

Waring Service Centre
PO Box 506
WIGAN
WN1 9AA

Enclose your name and address, together with details of the fault and a cheque made payable to The Conair Group Limited.

UK Wiring Instructions

This Waring appliance is supplied with a BS 13 amp moulded (fused) mains plug on the supply lead.

Should it be necessary at any stage to remove this moulded plug and replace it with a re-wireable BS 13 amp mains plug, the re-wiring should be completed as follows:

Class I (1)

The wires in the mains lead are coloured in accordance with the following code:

Blue = Neutral

Brown = Live

Green & Yellow = Earth

As the colours of the wire may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured black.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red.

The wire which is coloured GREEN & YELLOW must be connected to the terminal in the plug which is marked with the letter E or \perp or coloured green or green and yellow.

With this appliance, if a 13 amp plug is used, a 13 amp fuse should be fitted. If any other type of plug is used, a 10 amp fuse must be fitted, either in the plug or at the distribution board.



PART # 028631
Rev 01 0701
Printed in USA
MB/PB Series IB
07WI31005