




Machine	Explode	Code	Description
Gigamix	0793	☎	DETACHABLE HANDLE
Gigamix	089953	☎	RING 50X12
Gigamix	9353	☎	FIXED WHEEL + SCREWS (UNIT)
Gigamix	9354	☎	BRAKE WHEEL + SCREWS (UNIT)
Gigamix	9355	☎	FRAME + JIB HOLDER

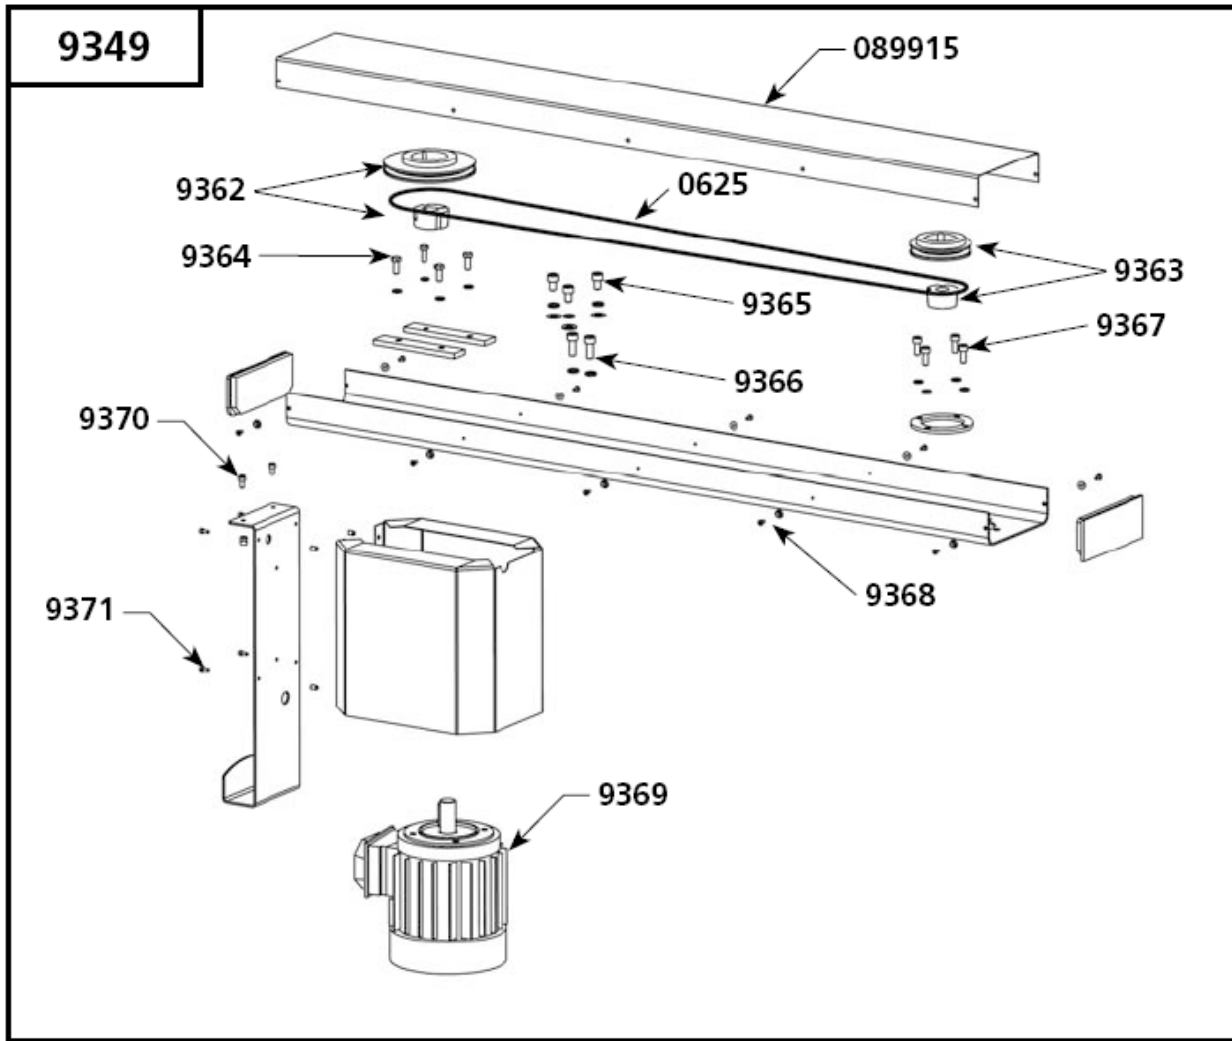


9349		Jib Assembly	
Machine	Explode	Code	Description
Gigamix	0625	☎	TRANSMISSION BELT
Gigamix	089915	☎	COVER
Gigamix	9362	☎	DIRECTING PULLEY + HUB
Gigamix	9363	☎	CONDUCTING PULLEY + HUB
Gigamix	9364	☎	SCREW SET + WASHERS FOR FIXING THE MOTOR
Gigamix	9365	☎	SCREW SET + WASHERS FOR FIXING THE JIB
Gigamix	9366	☎	SCREW SET + WASHERS FOR FIXING THE AXLE-BRAKE
Gigamix	9367	☎	SCREW SET + WASHERS FOR FIXING THE TUBE
Gigamix	9368	☎	SCREW SET + WASHERS FOR FIXING THE COVER
Gigamix	9369	☎	MOTOR
Gigamix	9370	☎	SCREW SET + NUTS FOR FIXING THE STEEL SHEET ON THE JIB
Gigamix	9371	☎	SCREW SET FOR FIXING THE STEEL SHEET ON THE MOTOR HOUSING

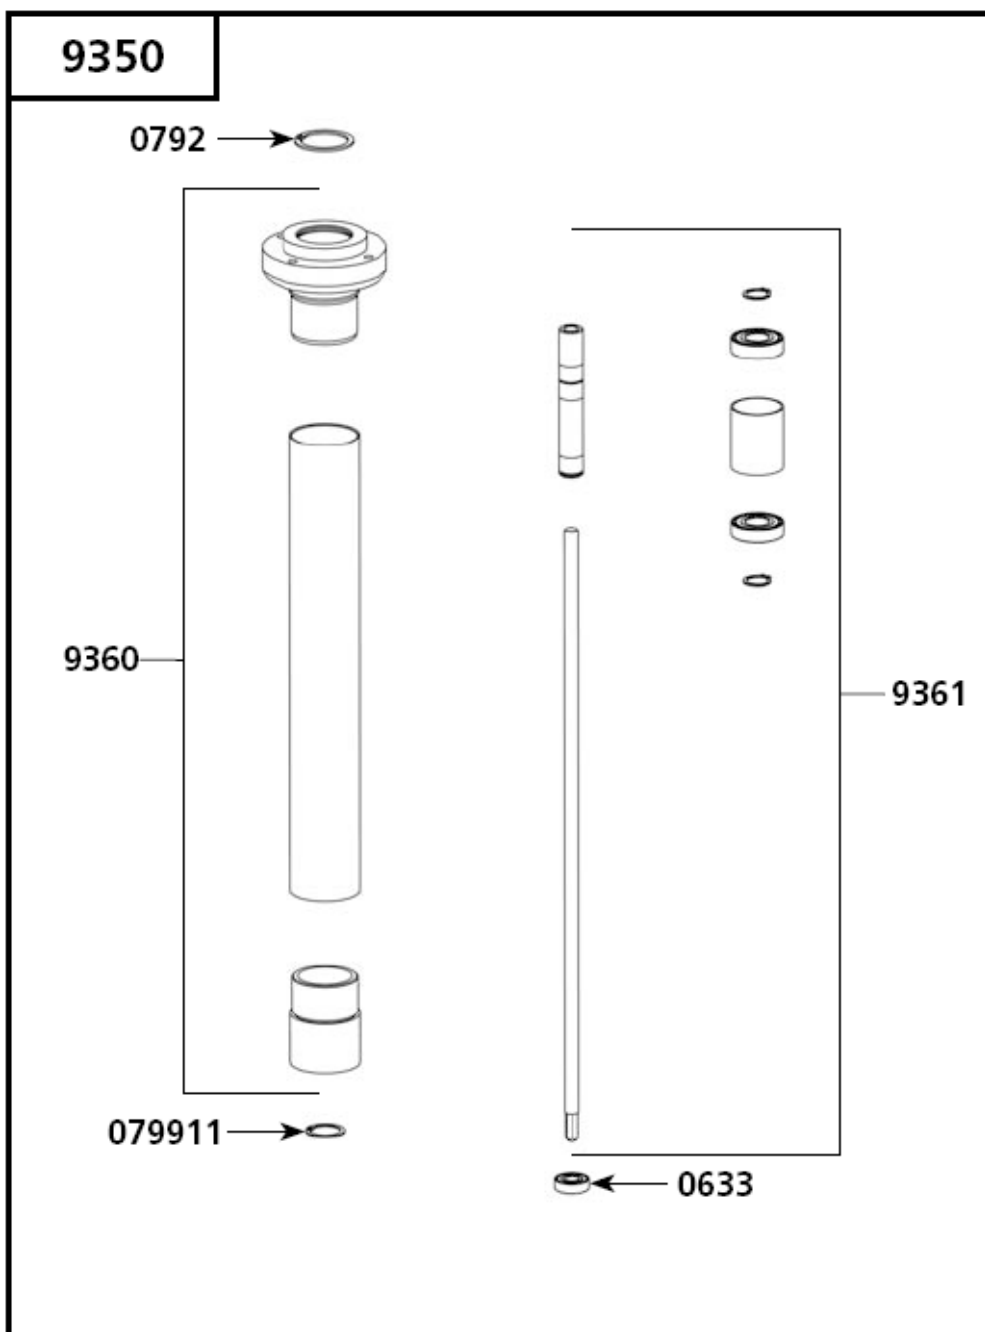

9350		Foot Attachment Assembly	
Machine	Explode	Code	Description
Gigamix	0633		BALL BEARING
Gigamix	0792		RUBBER RING FOR UPPER BEARING HOLDER
Gigamix	079911		RUBBER RING CASE
Gigamix	09360		BEARING HOLDER, BRACE, CASE
Gigamix	09361		DRIVE SHAFT

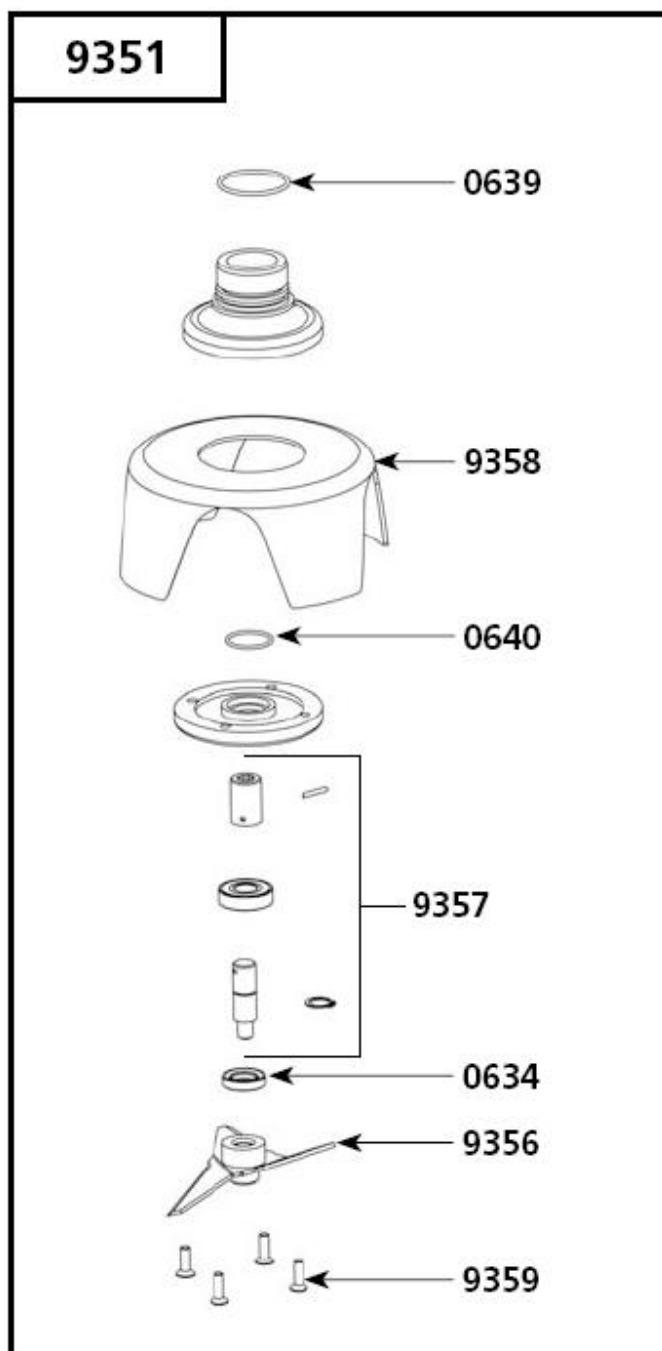

9351		Detachable Bell Assembly	
Machine	Explode	Code	Description
Gigamix	0634	☎	WATERPROOF LIP SEAL
Gigamix	0639	☎	TORIC JOINT 42 X 2.5
Gigamix	0640	☎	TORIC JOINT 34 X 2
Gigamix	9356	☎	BLADE
Gigamix	9357	☎	LOWER SHAFT + BEARING+COUPLING + CLIPS
Gigamix	9358	☎	PROTECTION BELL
Gigamix	9359	☎	ASSEMBLING SET OF SCREW FOR THE BELL

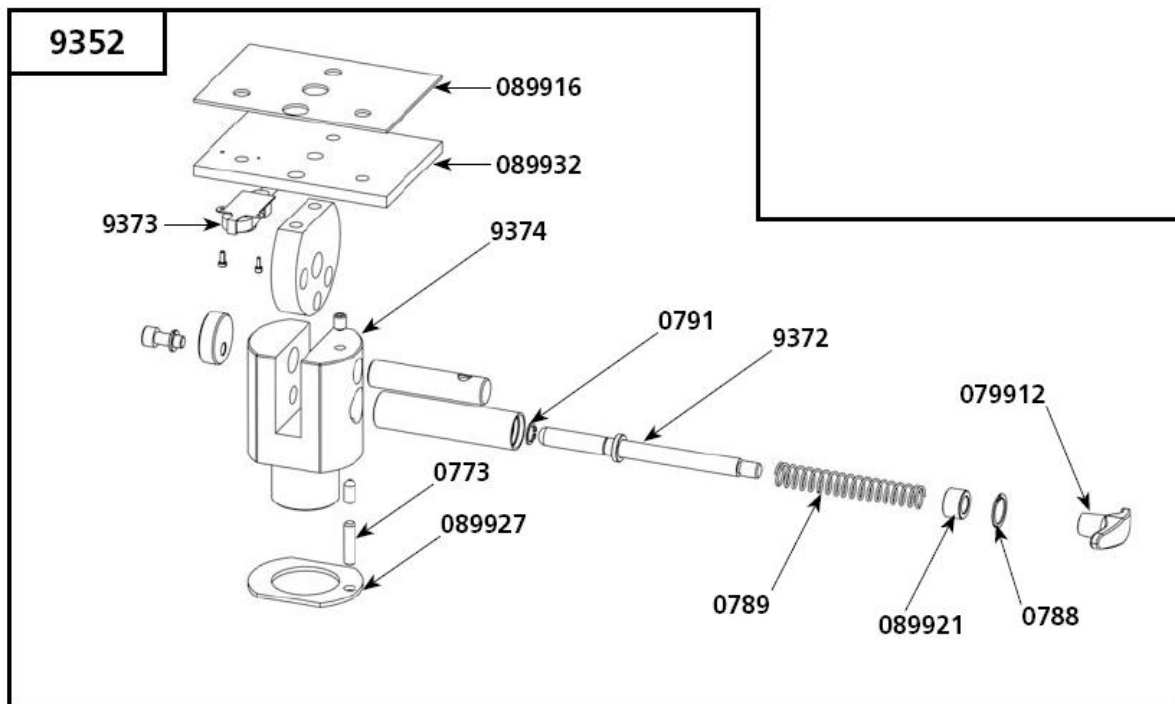

9351		Pin-brake Assembly	
Machine	Explode	Code	Description
Gigamix	0773	☎	PLAIN SCREW M8X30
Gigamix	0788	☎	RUBBER RING FOR BRAKE THRUST
Gigamix	0789	☎	COMPRESSION SPRING
Gigamix	0791	☎	RUBBER RING FOR BRAKE AXLE
Gigamix	079912	☎	HANDLE FOR BRAKE
Gigamix	089916	☎	INSULATING SHEET
Gigamix	089921	☎	BRAKE THRUST
Gigamix	089927	☎	INTERPOLATED SHEET
Gigamix	089932	☎	JIB PLATE HOLDER
Gigamix	9372	☎	BRAKE AXLE
Gigamix	9373	☎	MICROSWITCH + SCREWS
Gigamix	9374	☎	PIN-BRAKE + ECCENTRIC + CAM + CAM AXLE