





Machine	Explode	Code	Description
Waring Juice Extractor	1		Pusher
Waring Juice Extractor	2		Cover
Waring Juice Extractor	3	AC652	Strainer Basket w/ Shredder
Waring Juice Extractor	4		Housing Bowl
Waring Juice Extractor	5		Pulp Container
Waring Juice Extractor	6		Cup Cover
Waring Juice Extractor	7		Froth Separator
Waring Juice Extractor	8	AC654	Cup
Waring Juice Extractor	9		Foot 6 required
Waring Juice Extractor	10		Washer 6 required
Waring Juice Extractor	11		Screw (short) 2 required
Waring Juice Extractor	12		Screw (long) 4 required
Waring Juice Extractor	13		Cord Set
Waring Juice Extractor	14	AE986	Coupling
Waring Juice Extractor	15		Top Housing
Waring Juice Extractor	16	AE987	Switch
Waring Juice Extractor	17		Screw 6 required
Waring Juice Extractor	18	AE988	Micro Switch
Waring Juice Extractor	19		Screw 2 Required
Waring Juice Extractor	20	AE989	PC Board
Waring Juice Extractor	21		Lead / black
Waring Juice Extractor	22		Lead / green & yellow
Waring Juice Extractor	23		Nut/ ground to hsg
Waring Juice Extractor	24		Lock Washer 2 required/ ground to hsg
Waring Juice Extractor	25		Screw/ ground to hsg
Waring Juice Extractor	26		Lead / yellow & green
Waring Juice Extractor	27	AC990	Motor
Waring Juice Extractor	28		Screw / ground to motor
Waring Juice Extractor	29		Washer 4 required
Waring Juice Extractor	30		Screw 4 required
Waring Juice Extractor	31		Motor Cover
Waring Juice Extractor	32	AE991	RPM Sensor
Waring Juice Extractor	33		Screw 2 Required
Waring Juice Extractor	34		Lead Tape with Connector
Waring Juice Extractor	35		Lead / red
Waring Juice Extractor	36		Lead/ red
Waring Juice Extractor	37		Lead / black
Waring Juice Extractor	38		Wire Tie 4 required
Waring Juice Extractor	39		Reset switch
Waring Juice Extractor	40		Bottom Housing