

DEFINITION OF USE

This appliance is exclusively destined to wash and spin machine washable laundry.

- Observe the instructions given in these Instructions for Use and in the separate Programme Chart when using the washing machine.

- Keep these Instructions for Use and the Programme Chart; if you pass on the washing machine to another person, also give him/her the Instructions for Use and the Programme Chart.

BEFORE USING THE WASHING MACHINE

1. Remove the packaging and check

- After unpacking, make sure that the washing machine is undamaged. If in doubt, do not use the washing machine. Contact After-Sales Service or your local dealer.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, since it is a possible source of danger.
- If the appliance was exposed to the cold prior to delivery, keep it at room temperature for a few hours before operating.

2. Remove the transit bolts

- The appliance is fitted with transit bolts to prevent internal damage during transport. **Before using the washing machine you must remove the transit bolts** (see "Installation"/"Remove the transit bolts").

3. Install the washing machine

- Installing the washing machine requires at least 2 persons.
- Install the appliance on a solid and level floor surface. In the case of a yielding sub-floor, the appliance should be installed in the corner of a room.
- Adjust the feet to ensure that the machine is stable and level on the floor (see "Installation"/"Adjust the feet").
- In case of wooden or so-called "floating floors" (for instance certain parquet or laminate floors), place the appliance on a 70 x 70 cm sheet of plywood at least 3 cm in thickness. The plywood sheet must be screwed to the floor.
- Make sure that the ventilation openings in the base of your washing machine (if available on your washer) are not obstructed by a carpet or other material.

4. Water inlet

- Connect the water supply inlet hose in accordance with the regulations of your local water company (see "Installation"/"Connect the water supply hose(s) (A or B, depending on the model)" and instructions on the hose bag).
- Water supply
 - for models with one inlet valve: cold water ("C").
 - for models with two inlet valves: cold ("C") and hot ("H") water, or cold water only (see also instructions on separate programme chart).
- Tap: 3/4" threaded hose connection

- Pressure: 100-1000 kPa (1-10 bar).
- Use only new hoses to connect the washing machine to the water supply. Used hoses must not be used and should be discarded.
- We recommend to replace the inlet hoses by new ones every 3 years.
- In case of hot inlet water, the temperature must not exceed 60°C.

5. Drain hose

- Connect the drain hose to a ventilated siphon or to a standpipe; make sure that the connection is firm.

6. Electrical connections

- Electrical connections must be carried out by a qualified electrician in compliance with the manufacturer's instructions and local safety regulations.
- Voltage information, power consumption and electrical fusing data are supplied on the front panel behind the door frame.
- The appliance must be connected to the mains exclusively by means of a socket with an earth connection in accordance with established regulations. The appliance must be earthed by law. The manufacturer declines all liability for possible damage to property or injury to persons or pets deriving from failure to observe the a/m directions.
- Do not use extension leads or multi sockets.
- Before any maintenance on the washing machine disconnect the power plug or switch off the power supply.
- Access to the mains plug or to disconnection from mains supply via a double-pole switch must be ensured at all times after the installation, in order to assure an immediate deactivation of the washing machine in case of emergency.
- Do not operate the washing machine if it has been damaged during transport. Inform the After-Sales Service.
- Mains cable replacement is only to be carried out by After-Sales Service.

7. Sound level


- sound pressure level, Lpa <70 dBA (Kpa: +/- 2,5 dBA)

PRECAUTIONS AND GENERAL RECOMMENDATIONS

1. Safety Instructions

- This washing machine is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children must not be allowed to play with the washing machine or climb into the drum (see also following chapter "Door Lock").
- Other appliances must NOT be placed on the washing machine's worktop (e.g. tumble dryer, water heater etc.).
- The washing machine is appropriate for indoor use only.
- Do not operate the washing machine at temperatures below 5°C.
- Do not leave the appliance plugged in when not in use.
- Turn off the tap when not in use.
- Before any cleaning and maintenance, switch off the machine and disconnect it from the mains.
- Never open the door forcibly or use it as a step.
- Do not store or use flammable fluids near the washing machine.
- Do not wash laundry which is treated with solvents or flammable fluids.
- Never use the filter cover, the front panel or the detergent dispenser to lift the appliance.
- If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.
- Only use original spare parts from our After-Sales Service or your specialist dealer.

2. Packaging


- The packaging is 100% recyclable and is marked with the recycling symbol . Adhere to current local regulations when disposing of packaging material.

3. Disposing of packaging and old appliances

- This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human

health, which could otherwise be caused by inappropriate waste handling of this product.



The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

- Before scrapping, pull out the mains plug and cut off the power cable so that the washing machine becomes unusable.
- The detergent residues should also be removed from the detergent dispenser, the drum, the water drain hose and pump before the washing machine is scrapped. The detergent residues might otherwise get into the groundwater during the disposal process and contaminate it.

4. Frost

- Do not place the washing machine in a room prone to frost. If you must, make sure that the washing machine is completely drained after each wash:
- Remove inlet hose(s) from water tap and let the water flow out completely.
- Remove drain hose from siphon or handwash basin and let the water flow out completely.
- Empty residual water inside the machine by following the instructions in the chapter "Draining Residual Water".

The Manufacturer is not liable for any damage to laundry resulting from inadequate or incorrect fabric care instructions which have been provided with the garment or article.

INSTALLATION

Remove the transit bolts

1. Slacken the four bolts with the spanner supplied.
2. Unscrew the bolt by hand.
3. Grip the bolt and remove it through the large aperture.
4. Seal the resulting holes using the plastic caps supplied.
To do this, insert the caps in the wide part of the hole in the direction of the arrow and push them into the narrow groove until they click into place.
5. **Keep the transit bolts for future use.**
 - Whenever the appliance is transported, the transit bolts must be refitted:
 1. Raise the plastic covers with a screwdriver, slide them in the opposite direction of the arrow and remove.
 2. Insert the transit bolts in the reverse order.





Adjust the feet

Small unevennesses in the floor can be compensated for by screwing the four appliance feet up or down (never use pieces of wood, cardboard or similar material):

1. The washing machine must be installed horizontally in width and depth. Use a spirit level.
2. Loosen the locknut clockwise using the wrench provided.
3. Adjust the height of the feet by hand; take care not to screw out the feet by more than 20 mm.
4. Tighten the locknut anti-clockwise to the washing machine.

If the appliance is to be installed on a wooden floor, distribute the weight by placing it on a 70 x 70 cm sheet of plywood at least 3 cm in thickness. Screw the plywood sheet to the floor.

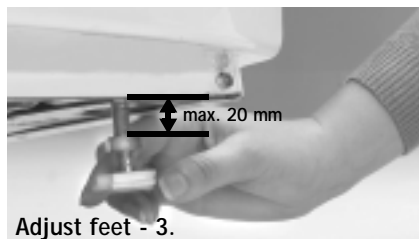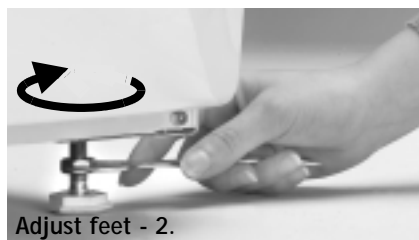

Connect the water supply hose(s) (A or B, depending on the model)

- If your washing machine has one inlet hose and one inlet valve on the back: connect to cold water supply ("C") only.
- If your washing machine has two inlet hoses and two inlet valves on the back: connect to cold ("C") and hot ("H") water supply, or to cold water supply only by using the Y-piece connector. Both inlet valves must be connected to the water supply. Observe the detailed instructions in your programme chart.

1. Carefully screw the hose connection onto the tap, preferably by hand.
2. Make sure there are no kinks in the hose.
3. Check water-tightness of tap and appliance connections by turning the tap completely on.

The appliance **must not be** connected to the mixing tap of a non-pressurized water heater.

The appliance can be connected without a non-return valve.

If the flexible hose is damaged, unplug the appliance from the mains immediately.

If the hose is too short, replace it with a longer length of "Water Stop" hose (available from After-Sales Service or specialist dealer).

Mount the new hose professionally on the washing machine and the tap.

Note that the Aquastop/Water Stop safety function is no longer guaranteed once the hose coating is damaged.

Connect the water drain hose


1. Connect the drain hose to a ventilated siphon or to a standpipe. For fixing the drain hose to a standpipe, use the "U-bend" delivered with the washing machine (picture "C"). - Make sure that the hose is firmly fixed and that there are no kinks.

If you need to add an extension, use a hose of the same type. Secure the connections with clips.

Max. drain hose length: 2.50 m

Max. drain height: 1.25 m

Min. drain height: 0.70 m

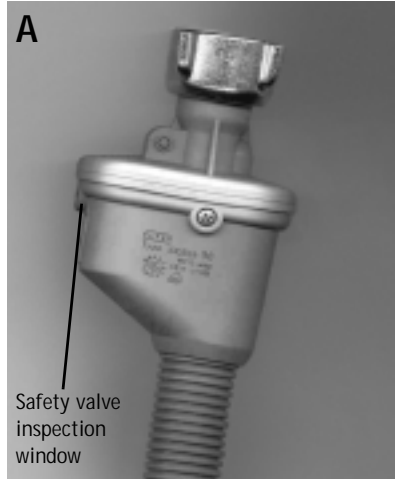

ELECTRICAL CONNECTION

For Great Britain only

Warning - this appliance must be earthed

Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:

1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.


For the Republic of Ireland only

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.

Socket outlet / plug (valid for both countries)

If the fitted plug is not suitable for your socket outlet, Please contact After-Sales Service for further instruction.

Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified technician in compliance with the manufactures instructions and current standard safety regulations.

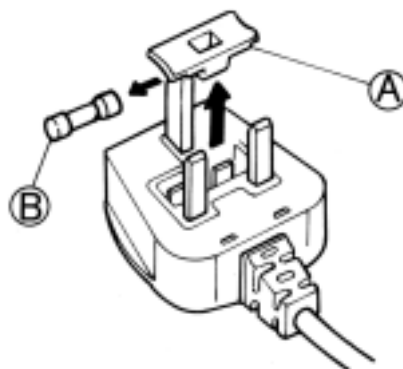

DESCRIPTION OF THE WASHING MACHINE

1. Worktop
2. Control panel
3. Detergent dispenser
4. After-Sales Service sticker (on the front panel behind the door frame)
5. Door
6. Door handle
 - To open the door pull the handle
 - Close the door by pushing it firmly (the lock will click into place)
7. Adjustable feet
8. Filter behind the cover



DOOR LOCK

We are pleased that you have chosen our washing machine with the extra-large capacity drum and wide door. They may also appeal to young children, so we have taken special measures to protect youngsters who decide to play in or around the machine. Remember that children should never play with the machine, whether it is running or not.

Door Opening

The door has NO special interlock, so it can be opened from inside without much force by a small child if the machine is **not in operation**. If the machine is switched on, the door is locked so that hot water or laundry cannot be thrown out.

Door lock

After having started the programme, the door is locked and the drum turns once; the door is then unlocked again for a few seconds. Afterwards it remains locked until the end of the programme.


The "Door Locked" warning light goes on if the door is locked. If the door has to be opened during a programme, press the "Start (Pause)" button. The "Door Locked" warning light goes out and the "Start (Pause)" indicator blinks. The door can now be opened. The machine can be started again by shutting the door and pressing the "Start (Pause)" button.

In certain stages of the wash cycle, the door can never be opened, e.g. when the water is very hot or could run out. In such cases the door remains locked and the "Door Locked" warning light goes on again after the "Start (Pause)" button has been pressed. If you have an urgent need to open the machine, do not pull the plug out but press and hold the "Reset/Drain" button for a few seconds. This drains all the water out, and the door can then be opened.

FIRST WASH CYCLE

We recommend that the first wash cycle be made without laundry.

This will remove any residual water used by the manufacturer in testing your washing machine.

1. Turn on the tap.
2. Close the appliance door.
3. Add a small amount of detergent (maximum 1/3 of the quantity the detergent manufacturer recommends for lightly soiled laundry) to the main wash chamber  of the detergent dispenser.
4. Select and start programme "Synthetics" at 60°C (see separate programme chart).
5. Press the "Start (Pause)" button.

DETERGENTS AND ADDITIVES

Pouring in detergents and additives


- ➔ Pull out the detergent dispenser to its full extent.
- ➔ Pour in detergent:

Chamber 


- Detergent for the pre-wash

Chamber 


- Detergent for the main wash
- Stain remover
- Water softener

For use of powder detergent :

Push the grey slider of the divider insert to the left (picture 2); a gap remains between the divider insert and the bottom of the main wash chamber.

For use of liquid detergent :

Push the slider of the divider insert to the right (picture 3); the divider insert touches the bottom of the main wash chamber.

Chamber 



- Fabric Softener
- Liquid starch


Only add fabric softeners and conditioners up to the "Max" mark.


- ➔ Slide the detergent dispenser in until it clicks shut.


Using chlorine bleach

- Wash your laundry in the desired programme (Cotton, Synthetics), adding an appropriate amount of chlorine bleach to the SOFTENER chamber (close the detergent dispenser carefully). Do not add softener when using chlorine bleach.
- Immediately after end of programme, start the "Rinse and Spin" programme to eliminate any residual bleach smell; if you want, you can add softener.

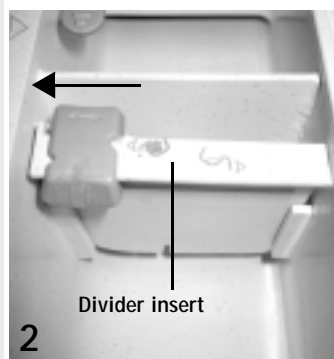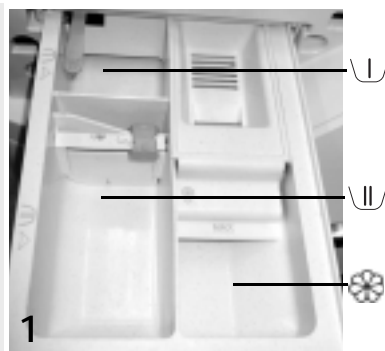
 



powder detergent -
push slider to the left 

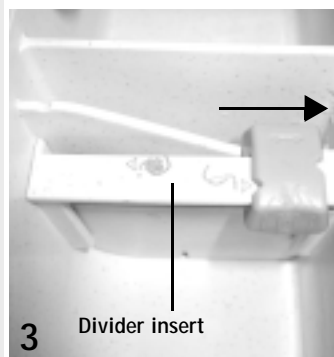

liquid detergent -
push slider to the right 



Note:

- Keep detergents and additives in a dry place and out of reach of children.
- If you use descaling agents, dyes or bleaches, make sure they are suitable for washing machine use. Descaler could contain components that can damage parts of your washing machine.
- Do not use solvents (turpentine, benzine, etc.)
Do not machine wash fabrics that have been treated with solvents or flammable fluids.
- You can use liquid detergent in the “Prewash” phase for programmes with this option. In this case put only powder detergents in the compartment for the main wash .
- When using concentrated fabric softeners, dilute with water in the detergent dispenser up to “MAX” level mark.
- To prevent dispensing problems when using highly concentrated powder and liquid detergents, use the special detergent ball or bag supplied with the detergent and place it directly inside the drum. If you use gel-type detergent, please use the powder detergent insert setting.
- For “Start delay”, only use powder detergent. Powder detergent remains in the detergent dispenser until the programme starts, but liquid detergents might run out of the detergent dispenser.
- If you use powder starch, observe the starch manufacturer’s information and proceed as follows:
 1. Wash your laundry using the desired wash programme.
 2. Next mix the starch according to the starch manufacturer’s instructions.
 3. Set the “Rinse and Spin” programme, reduce the spin speed to maximum 800 rpm and start the programme.
 4. Pull the detergent dispenser out until you can see about 3 cm of the main wash chamber .
 5. While the water is running into the detergent dispenser, pour the starch solution into the main wash chamber .
 6. If there are starch residues in the detergent dispenser after the end of the programme, clean it (see “Care And Maintenance”).

DRAINING RESIDUAL WATER

Residual water should be removed:

- before moving a washing machine (relocation),
 - when installing in areas prone to frost and
 - before removing the filter.
1. Before emptying the residual water, switch the appliance off and unplug it from the mains socket. Make sure that the water has cooled before draining.
 2. Turn the slot through 180° by means of a coin, so that the dot points to the open lock. The cover bends down to the floor.
 3. Remove the hose, place a low container underneath and pull the cap from the hose.
 4. Drain the residual water until no more flows out. Then close the residual water emptying hose.
 5. Put the hose in the cover, fold the cover up and close the cover using a coin. The dot points to the closed lock.
 6. Pour about 1 l of water into the detergent dispenser to reactivate the ecosystem. You must also plug the mains plug back into the socket-outlet.
 7. Now you can fill the washing machine and run the desired programme.

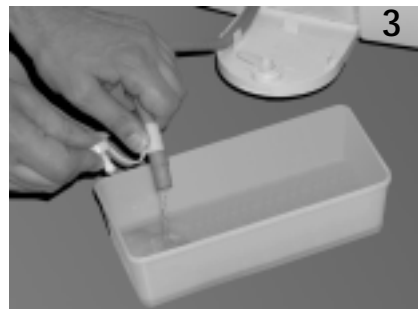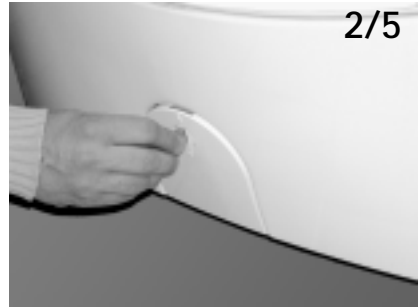


CLEANING THE FILTER

The filter must be taken out if:

- the washing machine does not drain properly,
- small items, e. g. buttons and coins rattle in the pump and
- 2 to 3 times a year for inspection.

You must remove the residual water before taking out the filter. Carry out the steps in the “Draining Residual Water” section, but only up to point 4. Then follow the points given below.

1. Open the filter but do not withdraw it completely. Slowly turn the handle anticlockwise until the water drains out. Make sure that the water has cooled before letting it drain.
2. Wait until all the water has drained out.
3. Now unscrew the filter completely and extract it.
4. Clean the filter and the filter chamber.
5. Insert the filter with the guide pin upwards and screw it in clockwise.
6. Lay the hose in the cover, fold the cover up and close it using the detergent dispenser insert or a coin. The dot points to the closed lock.
7. Pour about 1 l of water into the detergent dispenser to reactivate the Eco System. You must also put the plug back into the socket.
8. You can now load the washing machine and start the desired programme.

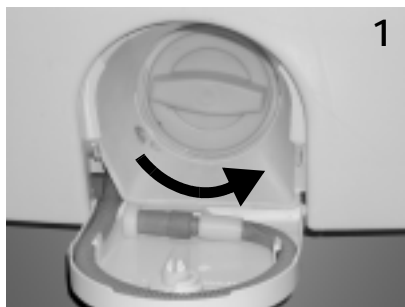

CARE AND MAINTENANCE

Before any maintenance, always disconnect the washing machine from the mains.

Appliance exterior and control panel

- Clean using a neutral household detergent and a damp cloth (do not use abrasive products or solvents).
- Dry with a soft cloth.

Appliance interior

- If you never or seldom wash your laundry at 95°C, we recommend to occasionally run a 95°C programme without laundry, adding a small amount of detergent, to keep the interior of the appliance clean.
- Leave the door and the detergent dispenser open for some time after each washing so that the interior can dry.

Do not use flammable fluids for cleaning the appliance.

Door seal

- Clean occasionally with a damp cloth.
- Check the seal folds for foreign bodies periodically.

Filter

- Check and clean the filter regularly, at least two or three times a year (see “Cleaning The Filter”).

Water supply hose

- Check the hose regularly for brittleness and cracks and replace it if necessary using a new hose of the same type (available from After-Sales Service or specialist dealer).

Detergent dispenser

Clean the dispenser drawer and the dispenser compartment regularly, at least three or four times a year, to prevent detergent build-up.

1. Press the release lever in the prewash compartment down and pull out the dispenser (see downward arrow).
2. Remove the inserts from the detergent dispenser (see upward arrows).
3. Clean all parts under running water.
4. Replace the separate parts in the detergent dispenser and slide the dispenser back into the dispenser compartment.

Periodically check and clean the mesh filters in the water connection.

1. Turn off the tap.
2. Unscrew the water inlet hose from the tap.
3. Clean the internal filter.
4. Screw the supply hose back onto the tap.
5. Unscrew the supply hose from the washing machine.
6. Clean the mesh filter in the washing machine.
7. Screw the supply hose back on to the machine.
8. Turn on the tap and ensure that the connections are water-tight.



TROUBLESHOOTING GUIDE

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately.

Often, however, the faults detected are small enough to be solved in a matter of minutes.

For example:

The appliance will not start; no lamp lights up.

Check whether:

- The appliance is plugged in.
- The wall socket is functioning correctly (use a table lamp or similar to test).
- The washing machine is switched on.

The appliance will not start, and the “Start (Pause)” lamp blinks.

Check whether:

- The appliance door is properly closed (child lock);
- The programme has been changed.
- The water tap is turned on. If not, turn the tap on and press the “Start (Pause)” button.

After having started a programme, it takes some time until the programme really starts and water enters into the washing machine.

- In the beginning of each programme, the drum turns once and the door unlocks again for safety reasons (see paragraph “Door Lock”).
- There is a reset phase to set the sensors back to their starting position before the selected programme will start.

The appliance stops during the programme.

Check whether:

- The “Rinse Hold” lamp blinks. Terminate this option by pressing the button again;
- Another programme has been selected. Reselect the desired programme and press the “Start (Pause)” button.
- The appliance safety system has been activated. See fault description table.

Detergent and additives incorrectly washed in.

Check whether:

- The slider of the divider insert in the detergent dispenser is adapted to the use of powder or liquid detergent.
- The detergent dispenser inserts are incorrectly located (see “Care And Maintenance”).
- Enough water is being supplied. The mesh filters in the water connection could be blocked (see “Care And Maintenance”).

The appliance vibrates during the spin cycle.

Check whether:

- The appliance is levelled and solidly installed on all four feet (see “Installation”).
- The transit bolts have been removed. Before using the washing machine you must remove the transit bolts (see “Installation”).

Final spin results are poor:

The appliance has an imbalance detection and correction system. If individual heavy articles are loaded (bathmat, bathrobe, etc.) this system may reduce the spin speed automatically to protect the appliance or even interrupt the spin cycle altogether, if the imbalance is too great even after several spin starts.

- If the laundry is still too wet at the end of the cycle, add other articles of laundry and repeat the spin cycle.
- Excessive foam formation may prevent spinning. Ensure correct amount of detergent is used.
- Check whether the spin speed has been reduced to 0.

No water or insufficient water pressure for appliances with safety hose:

- The appliance has a safety hose and the safety valve has opened (red indicator in the safety valve inspection window; see “Installation”/ “Connect the water supply hose(s) (A or B, depending on the model)”).

In this case replace it with a new safety hose.

The programme time indicated on the display “jumps” suddenly up or down by several minutes, or the programme duration shown at the start increases/ decreases by some time:

This is a normal adaptation action by the washing machine to factors that can affect the duration of the wash programme, e.g.

- Excessive foaming.
- Load imbalance from individual, heavy items of laundry.
- Longer heating time from correspondingly cold water supply.

Because of such influences, the time remaining in the programme is recalculated and updated if necessary. In addition, the washing machine determines the amount of the load during the filling phase and adjusts the initially indicated programme duration appropriately if necessary.

What should I do when the automatic safety system detects a malfunction?

The programme is interrupted and various indicators (if available) point to the source of the fault.

Fault description table

Indication on display	Problem	Possible origin	Remedy See under
AH	No or not enough water inlet.	<ul style="list-style-type: none"> Water tap is not open. Water supply pressure is too low. Water supply hose is kinked. Water supply hose is frozen up. Mesh filter in water inlet hose is obstructed. 	a
FP	Waste water is not pumped out.	<ul style="list-style-type: none"> Drain hose is kinked. Drain hose is frozen. The pump or filter is blocked. 	b
Fod	Too much foam during the wash programme.	<ul style="list-style-type: none"> Too much detergent added. Overdosing of detergent concentrates. 	c
FA	Water enters into the Aquastop tray in the washing machine's bottom.	<ul style="list-style-type: none"> A leak inside the washing machine. 	d
F1 to F99 or FH	Failure of electrical component.	<ul style="list-style-type: none"> Can be diagnosed by a qualified technician only. 	e
FdL	Door cannot lock.	<ul style="list-style-type: none"> Can be diagnosed by a qualified technician only. 	f
FdU	Door cannot unlock.	<ul style="list-style-type: none"> Can be diagnosed by a qualified technician only. 	g

a. No or not enough water inlet

- Open the water tap and check whether the water supply pressure is sufficient.
- Remove kinks in the water supply hose.
- Make sure that the room temperature is not too low to avoid freezing up of water in the hoses.
- Check and clean the mesh filter in the water tap connection of the water supply hose.

b. Waste water is not pumped out

Switch off the washing machine by pressing "On/Off" and unplug it.

- Remove kinks in the drain hose.
- Make sure the room temperature is not too low to avoid freezing up of water in the hoses.
- Clean filter and check pump (see "Draining Residual Water"/"Cleaning The Filter"); **make sure the water has cooled down before draining.**

Plug in the appliance again, reselect the desired programme and press "**Start (Pause)**" to continue the wash process (do not add any more detergent).

c. Too much foam

- When too much foam occurs, the washing machine starts an automatic foam reduction process. During this process, "Fod" appears on the display and the countdown of the remaining programme time is paused.

d. Water enters into the washing machine's Aquastop tray

An audible tone sounds; the pump is active.

Switch off the washing machine by pressing "On/Off", unplug it and close the water tap.

Inform After-Sales Service and describe the fault (see "After-Sales Service").

e. Failure of electrical component

- Press and hold "Reset/Drain" for a few seconds.
- Reselect the desired programme and press the "**Start (Pause)**" button to continue the programme.

f. Door cannot lock

- Press and hold "Reset/Drain" for a few seconds.
- Try to close the door again.

g. Door cannot unlock

- Press and hold "Reset/Drain" for a few seconds.
- Try to open the door again.

If any of the faults described above persist, switch off the washing machine, unplug it and contact our After-Sales Service (see "After-Sales Service").

AFTER-SALES SERVICE

Before contacting After-Sales Service:

1. Try to remedy the problem yourself (see "Troubleshooting Guide").
2. Restart the programme to check whether the problem has solved itself.
3. If the machine continues to function incorrectly, call After-Sales Service.

Specify:

- The nature of the problem.
- Appliance and model No. as well as service code (number after the word SERVICE).

SERVICE 0000 000 00000



The After-Sales Service sticker is on the front panel behind the door frame.

- Your full address.
- Your telephone number and area code. After-Sales Service phone numbers and addresses are given on the guarantee card or consult the local dealer.

TRANSPORT AND HANDLING

For moving the washing machine, use a sack barrow. Place the sack barrow on the rear of the washing machine to lift it. - This requires at least 2 persons.

1. Make sure that the washing machine is switched off.
2. Pull out the power plug.
3. Turn off the tap.
4. Check that machine door and detergent dispenser are properly closed.
5. Remove the water supply and drain hose from the service connection.
6. Empty the water supply hose and the water drain hose completely.
7. Always fit the transit bolts (see "Installation"/"Remove the transit bolts").

ACCESSORIES

You can obtain via our After-Sales Service or your specialist dealer a Pedestal Drawer which can be installed beneath your washing machine. It raises the washing machine to allow for more comfortable loading and unloading, as you no longer need to bend as far to reach the door. Furthermore, it offers a great space-management tool and storage solution.

manufactured by

Bauknecht Hausgeräte GmbH
Gottlob-Bauknecht-Str. 1-11
D-73614 Schorndorf
Germany

Ecological Paper

