



Chefmaster Insect Trap Instruction Manual


Model

HEF217 – Chefmaster Insect Trap

Thank you for purchasing your Chefmaster Insect Trap. To make full use of the product please read this manual carefully before using the product and keep it safe for future reference.

Safety Tips

 - If you find any damage when the product is unpacked, contact your Chefmaster supplier within 24 hours of receipt of goods
- Repairs should always be carried out by a qualified technician
- Do not use this product outside
- Install out of reach of Children
- Install at least 1m away from food preparation areas
- Do not use near flammable objects
- Always switch off and unplug the unit before cleaning
- If the power cord becomes damaged it must be replaced by a qualified technician
- This product is not designed to be used by persons with reduced physical or mental capabilities, lack of experience or knowledge, unless they are given suitable supervision, this includes children.
- This product is designed for indoor use only.



Pack Contents

- 1 x Chefmaster Insect Trap with Glue Board

 
Before Use

- Remove all packaging including all protective plastic, from your Chefmaster Insect Trap
- For best results install your Insect Trap in the darkest part of the room, 1m way from any food preparation areas

Operation

- Plug in the Insect Trap
- The light will then come on to attract insects
- Switch off by unplugging the unit after use

Changing the UV-A tube or Glue Board

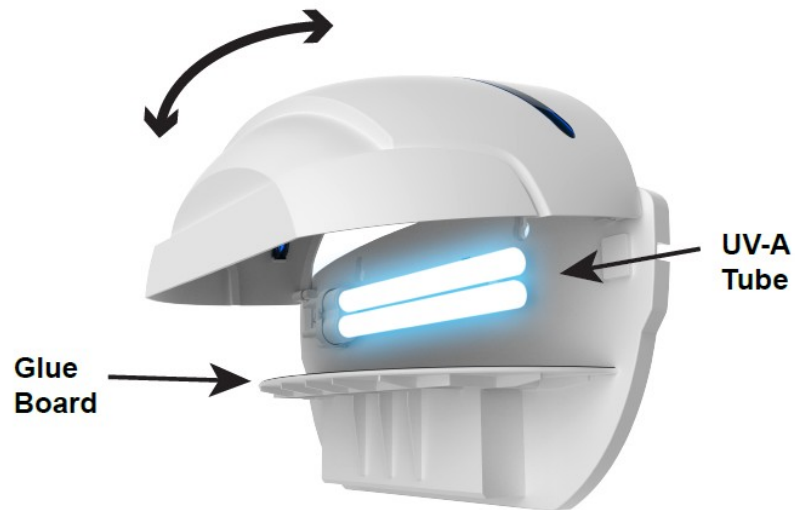

- Disconnect the Insect Trap from the electricity supply
- Lift up the front cover
- Remove UV-A Tube and replace if it has blown out
OR
- Remove Glue Board and replace if it is full

Cleaning & Maintenance

- Disconnect the Insect Trap from the electricity supply before cleaning
- Clean the outer casing with damp cloth
- DO NOT submerge the Insect Trap in water or use water sprays to clean it

Troubleshooting

Fault	Possible Cause	Solution
Unit is not working	The unit is not plugged in The plug or lead are damaged The fuse has blown Bulb is not working	-Check the unit is plugged in -Contact your Chefmaster distributor -Replace the fuse -Replace the bulb

Transportation and Storage

Please handle your Insect Trap with care to prevent any damage to the unit and internal parts. The Insect Trap should be stored somewhere which is ventilation and non-corrosive gas.

Do not store any flammable objects near the equipment.

Technical Information

HEF217 – Chefmaster Insect Trap

Voltage 230V~ 50/60Hz

 
Power 18watt

Weight 1kg

Dimensions 375 x 140 x 196mm

- Chefmaster Insect Trap is supplied with a 3 pin plug and lead with a 13 amp fuse
- If in doubt contact a qualified electrician or your Chefmaster distributor

Disposal



Under WEEE regulations this product must not be disposed of as household waste. To prevent damage to the environment and humans this product must be disposed of in an approved and environmentally friendly recycling process. For more information on how to dispose of this correctly please contact your Chefmaster distributor or local authority responsible for waste disposal.

Compliance



All Chefmaster parts and products have under gone a stringent testing process to ensure that comply with all European standards and specifications.
All Chefmaster products carry the CE approval symbol.