# HEF606 Vegetable preparation unit



## Troubleshooting Guide - Appliance unplugged and clean.

Unit not working / dead	Check/replace the plug fuse.
	Check socket and mains power supply are working and switched on.
	Check power cable and plug for condition
	Ensure all components are installed correctly
	Check micro switches / safety interlocks are engaged
Indicator is illuminated but unit is not	Perform the above checks
working.	Check all components are positioned correctly
Appliances stops during use	Ensure all components are installed correctly.
	Close any covers/lids
	Lower handle in accordance with standard operation
	Ensure unit is not overloaded or blocked.
Vegetables are not ejecting	Unit is blocked internally. Unplug, empty the chute or cutting bowl

### HEB632 / 633 / 634



## **Chefmaster Planetary Mixers**

#### Capacities Table (maximum) **Product** Tool <u>Minimum</u> <u>Maximum</u> Speed Range **Dry Flour** Hook 250g 800g 1-4 Water 180g 480g 1-4 Hook Cookies / Fillings Beater 350g 1000g 1-8 0.3L 1.3L Cream Whisk 1-11 Egg Whites Whisk 2 25 1-11