














Machine	Explode	Code	Description
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	1		Espr-4 Body
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	2		Front Panel/E4
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	3		Inner Assy/E4
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	4		Heat Shield Assy/E4
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	5		Finger Bar/4P
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	6		Back Panel/E4
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	7		Fixed Plate/4P
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	8	AK221	Power Cord
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	9		Power Cord Buckle
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	10		Wire Bushing
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	11	AK222	Fuse Holder
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	12		Fuse
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	13	AK223	Thermostat Cut Out
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	14	AK224	Position Selector
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	15	AK225	Indicator
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	16	AK587	Selector Knob
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	17	AK227	Timer-old version
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	18	AK228	Timer Knob-old version
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	17	AK239	Timer-From 5121585-UK
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	18	AK240	Timer Knob-From 5121585-UK
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	19		Screw/Nut
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	20	AK229	Feet (set 4)
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	21	AK230	Nut
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	22		Spring
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	23		Elector bar
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	24		Sphere Knob
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	25		Guard Wire
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	26	AK231	End Element 310W
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	27	AK232	Middle Element 400W
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	28	AK233	Element Link
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	29	AK234	Crumb Tray/E4
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	30		Base Plate/E4
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	31		Casting Chrome
CY994 - Rowlett Esprit 4 Slot Toaster Chrome	32		Casting Chrome