



User Instructions

Centre Tables and Wall Benches

L6009WB, L6012WB, L6015WB, L6018WB,
L6506WB, L6509WB, L6512WB, L6515WB,
L6518WB, L6506CT, L6509CT, L6512CT,
L6515CT, L6518CT

Please make a note of your product details for future use:

Date Purchased: _____

Model Number: _____

Serial Number: _____

Dealer: _____

Dear Customer

Thank you for purchasing this **Lincat** product.

With correct use and careful maintenance as described in these instructions, your **Lincat** product will give years of trouble free use.

We produce over 450 different items of catering equipment and our range is constantly being extended and improved. Find out more about **Lincat** products from your local distributor or direct from us.

CONTENTS

SAFETY INFORMATION.....	2
TABLE PACK CHECKLIST	3
INSTALLATION.....	4
CLEANING	4
MAINTENANCE.....	4
SAFETY INFORMATION.....	<u>5</u>
GUARANTEE	<u>5</u>



SAFETY INFORMATION

To prevent injury to yourself or your staff and to avoid damaging the product, please read and follow these safety precautions before setting up and using the unit:

- Ensure that you have a clear space to work in.
- You will need a 13mm and an 8mm spanner.
- Remove all plastic coatings before assembly.
- Clean the unit before use.
- Do not try to modify the unit.
- Keep these instructions in a safe place for future reference.

COUNTERTOP AND WORKBENCH CHECKLIST

If an item is missing please contact your dealer.

Item	Quantity varies with table size	
	Up to 1500mm	1800mm
Top	1	1
Shelf	1	2
Leg	4	6
Leg clamp	4	6
IN38 M8 Threaded leg insert		
M8 x 16 Set screw	8	12
M8 Flat Washer	16	24
M8 Lock Washer	16	24
M8 Nut	8	12
M5 x 10 Set Screw	N/A	2
M5 Washer	N/A	2
M5 Lock Washer	N/A	2
M5 Nut	N/A	2
M8 adjustable foot (FE10)	4	6

ASSEMBLY

Tools required:

13mm spanner, 8mm spanner

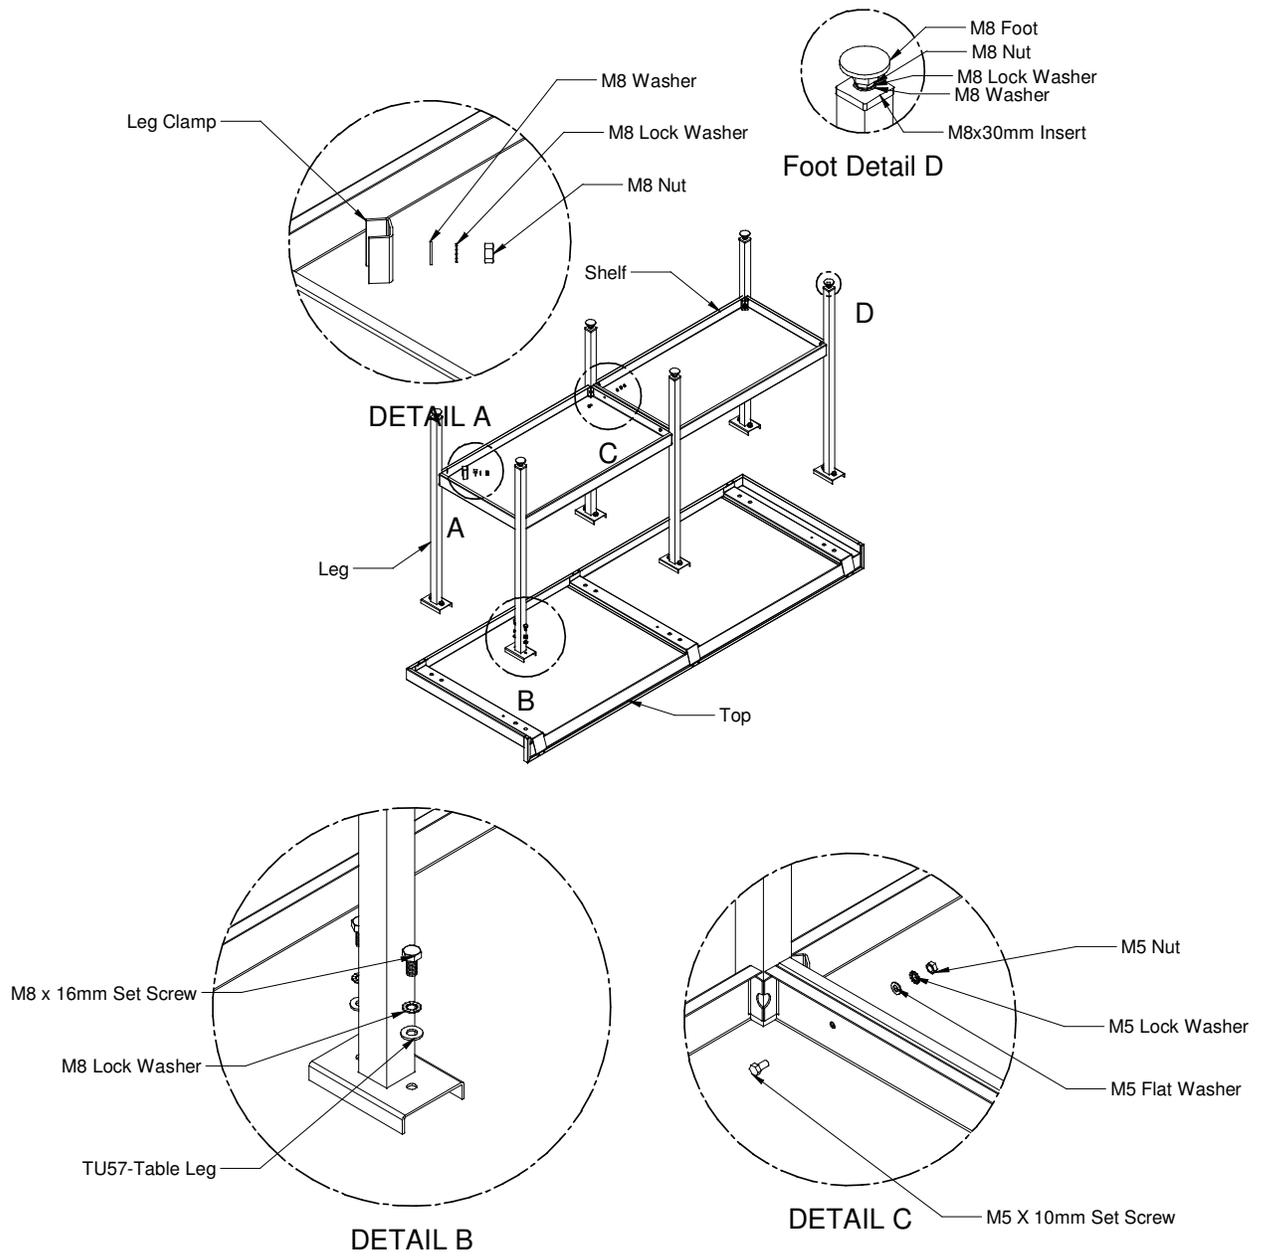


Figure 1: General layout

ASSEMBLY

- 1 Place the Table top upside down as a convenient height.
- 2 Fit the feet to the legs with locknut, lockwasher, and washer. *See detail d*
- 3 Place one leg at a time in position as shown, do not tighten the bolts fully at this point but leave slack to enable the shelf to be position over the splayed leg shelf studs. *See detail b*
- 4 Position the shelf in place - retaining with leg clamps, flat washers, locking washers and nuts. *See detail a*
- 5 1800mm tables have split shelves the second shelf fastens to the first shelf with 2 x 5mm screws flat washers locking washers & nuts. *See detail c*
- 6 Finger tighten all screws and nuts first; then tighten using spanners. Tighten the M5 fasteners last.
- 7 Place the table in position and adjust the feet to ensure the top of the tables is level. Lock in place with the locknut.

CLEANING

- Use a mild detergent in hot water and a soft cloth.
- Do not use abrasive creams or scourers.

MAINTENANCE

Ensure screws and nuts are tight .

SERVICE INFORMATION

For help regarding the installation, maintenance and use of your **Lincat** equipment, please contact our service department:

☎ UK: 01522 875520

All service work, other than routine cleaning should be carried out by one of our authorised service agents. We cannot accept responsibility for work carried out by other persons.

To ensure your service enquiry is handled as efficiently as possible, please tell us:

Brief details of the problem

• Product code	Serial plate details
• Type number	
• Serial number	

Lincat reserve the right to carry out any work under warranty during normal working hours, ie Monday to Friday, 08:30 a.m. – 17:00 p.m.

GUARANTEE

This unit carries a comprehensive UK twelve-month warranty. The guarantee is in addition to, and does not diminish your statutory or legal rights.

The guarantee does not cover:

- Accidental damage, misuse or use not in accordance with the instructions in these instructions
- Consumable items
- Damage due to incorrect installation, modification or unauthorised service work
- The manufacturer disclaims any liability for incidental, or consequential damages