

Operating- and servicemanual MIDI - UK

Item number: 765042494

Release date: 12.02.21

Released by: JABP

Revision date:

Revision no.: 000

Gram Professional ApS
Aage Grams Vej 1
6500 Vojens
Denmark
CVR-No. 43 12 21 93

Content

MPC 46 and the menu's.....	4
When servicing the product.....	5
Start-up sequence.....	5
Defrosting.....	8
Temperature control and regulation:.....	8
Keylock.....	9
Error codes.....	9
Reminder of cleaning the condenser air filter.....	9
Resetting the FILTER alarm.....	9
Compressor counter time setting.....	10
<i>Reset to factory setting</i>	10
User menu.....	11
Visual and acoustic settings.....	13
Settings for running cycle.....	14
Test program for relays and electrical components.....	16
Display of current sensor inputs.....	17
Reset the controller to factory setting.....	17
Parameter settings in commercial variants.....	18
Reversing door hinge side.....	19
Plug connections onboard the controller.....	27
Intended use.....	31
Safety information.....	32
Location.....	33
Optimizing the energy consumption.....	34
General description.....	35
Refrigerant / GWP value.....	35
Climate / temperature class.....	36
Electrical connection.....	36
General use.....	38
Operating the product.....	39
Errors and alarms.....	40
User menu.....	42
Troubleshooting.....	46
Keylock.....	47
Defrosting.....	47
Defrost water.....	48

Door closing mechanism	49
Power failure	49
Cleaning	49
Door gaskets	50
Long term storage	50
Service	50
Disposal.....	51
EC-Declaration of conformity	52
EC-Declaration of conformity	53
UKCA-Declaration of conformity	54
UKCA-Declaration of conformity	Fejl! Bogmærke er ikke defineret.
Wiring diagram	55
Piping diagram	56
Notes	59


MPC 46 and the menu's

The menus are divided up in two main menus.

A menu for presentations of values in the display and settings for alarms parameters, and another menu for technical, practical or physical settings to a normal refrigerator or freezer.

In each main menu there exist smaller submenus.

These submenus are divided up in specific menu for kind of cycles as defrosting or the settings for running the evaporator fan.

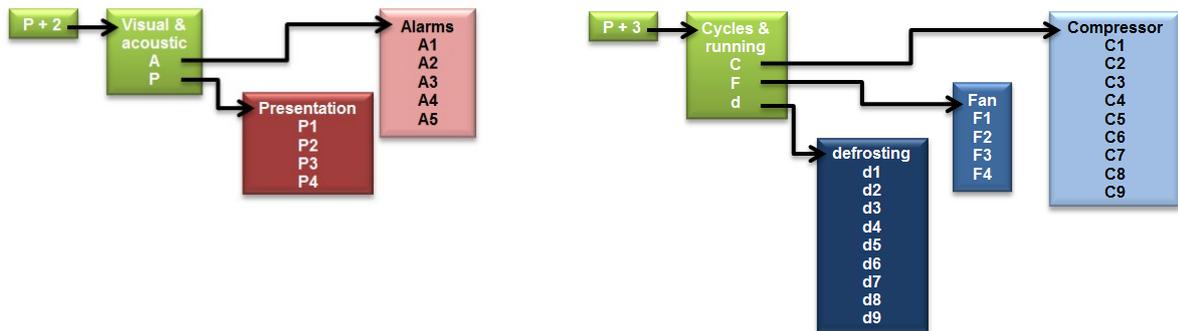




When servicing the product.

Make sure the appliance is switched off at the socket before service is performed on electrical parts. It is **not** sufficient to switch off the cabinet by the START/STOP key as there will still be voltage to some electrical parts of the cabinet.



Start-up sequence

When the product switches ON, the software is loaded into the MPC-46. The display shows multiple informations, see below:

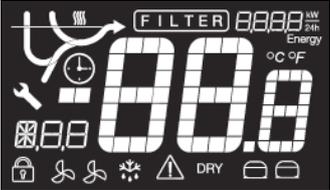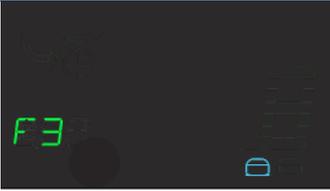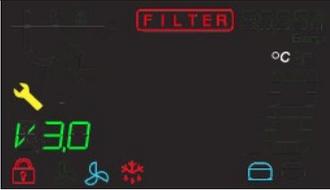Text	Display
<p>Second 0-3: Software is loaded into MPC-46 on start-up</p>	 <p>All segments light up white. Control, is everything ok? The display has recognized <u>version 3.0</u> and awaits more information....</p>
<p>Approx. 3rd second and 3-4 seconds forward:</p>	 <p>Now the Maxi display recognizes programme variant F3+ version 3.0. The display recognizes that the product is equipped with one compressor.</p>
<p>Approx. 7th second and 3-4 seconds forward:</p>	 <p>The display recognizes which control lamps are needed according to the programme variant F3+, and the appropriate lamps are lit. The version number is displayed.</p>
<p>Approx. 10th second and 3-4 seconds forward:</p>	 <p>All control lamps are turned off, except the compressor lamp. The large display is displayed ready for use.</p>

Start up after power on – hot product.

On hot products or if the product has just been unpacked and connected to mains power, the temperature is so high that the defrosting cycle is cancelled, and refrigeration starts immediately.

Because the product has not been running before, the setpoint is displayed and not the current temperature.

Text	Display
Normal operation after start-up phase has ended	 <p data-bbox="316 613 1394 645">Only +5 °C is displayed, which is the standard setpoint for a refrigerator.</p>
Situation 1: Refrigerator Less than a second later compressor starts.	 <p data-bbox="316 898 1394 929">The compressor starts. The color is cyan, and lights constantly.</p>
Situation 2: Extended refrigerator Less than a second later compressor starts.	 <p data-bbox="316 1182 1394 1214">The compressor starts. The color is cyan, and lights constantly.</p>
Situation 3: Freezer Less than a second later compressor starts.	 <p data-bbox="316 1467 1394 1525">Standard setpoint for a freezer is -18 °C. The compressor starts. The color is cyan, and lights constantly.</p>

Start up after power on – cold product.

On cold products, or if the product has been turned off for a short while, and the evaporator temperature is still below the freezing point, a defrosting cycle will be activated, and refrigeration starts later.

Because the product has not been running before, the setpoint is displayed and not the current temperature.

Tekst	Maxi Display
<p>Normal operation after start-up phase has ended</p>	 <p>Only +5 °C is displayed, which is the standard setpoint for a refrigerator.</p>
<p>Situation 1: Refrigerator</p> <p>Less than a second later, defrosting starts, and uses the evaporator fan for the defrosting process.</p>	 <p>Because defrosting is running, but with evaorator fan, both control lamps are lit.</p> <p>Defrost mode: Air (Evaporator fan running 100 %)</p>
<p>Situation 2: Extended refrigerator</p> <p>Less than a second later, defrosting starts, and uses the evaporator fan for the defrosting process.</p>	 <p>Because defrosting is running, but with evaorator fan, both control lamps are lit.</p> <p>Defrost mode: Automatic (Controller selects acc. to setpoint whether fan or electrical heater is to be used.) If electrical defrosting is selected, the control lamp for fan will not light up</p>
<p>Situation 3: Freezer</p> <p>Less than a second later, defrosting starts, and uses the electrical heater.</p>	 <p>Defrost mode: Electrical (Heater below evaporator)</p>

Defrosting

The defrosting cycle runs 4 times each day. If the cabinet is operating under severe load (frequent door opening and frequent replenishment) manual defrosting can become necessary.

To start manual defrosting: Push  +  for more than 3 seconds.

Refrigerator: Control lamps for fan  and defrosting  light up.

Extended refrigerator: Control lamp for defrosting  light up, and lamp for fan  light up depending on setpoint.

Freezer: Control lamp for defrosting  light up.

Shortly after defrosting has ended, the compressor starts, and the compressor symbol  lights blue.

The number defrosts can be changed. See chapter "User menu".

Temperature control and regulation:

- Keep  pressed. When doing this, the setpoint temperature is displayed. While  is kept pressed, the setpoint can be changed by pressing  or .
- Each time  or  is pressed the temperature will change one degree. The new value flashes in the display
- When the required setpoint has been set, let go of the keys, a short beep sounds, and the settings are saved.

Keylock

The keypad can be locked by simultaneously pushing  +  for more than 5 seconds.

 lights to indicate that the keys are locked, and a short beep sounds. Now it is not possible to use the keys for temperature setting etc.

The same code is to be used for unlocking the keypad again.

Error codes

OP The door is open. The alarm system is activated, if the door is not closed within a certain time. The user is reminded that the door is not properly closed.

F1  Cabinet sensor error. In the meantime the cabinet itself will maintain the set temperature by the memory of the controller. Service assistance is required.

F2  Evaporator sensor error.
The cabinet will keep running until the error has been mended. Service assistance is required.

F3/F4  Condenser sensor error. The cabinet will keep running, until the error has been mended. Service assistance is required.
Applies only to cabinets with built-in compressor.

F7  Indicates that the condenser temperature is too high. The cause might be a clogged condenser, or too high ambient temperature.
If the condenser or air filter needs cleaning, the cabinet must be disconnected at the mains power. Cleaning of the condenser is done with a brush or a vacuum cleaner.
The air filter can be removed and cleaned in a dishwasher at max. 50°C.
If the ambient temperature is too high, the placement of the cabinet might be wrong, and an alternative place should be found. Ventilation might help.
If this does not help, request service assistance.
Applies only to cabinets with built-in compressor.

Reminder of cleaning the condenser air filter

After 600 compressor running hours the filter must be cleaned and it is indicated by warning lights:   .
If the cleaning is not completed within 650 hours, the warnings continue, and an acoustic alarm sounds.

Resetting the FILTER alarm

After cleaning the air filter, the controller must be reset to remove the alarms.
It can only be reset by using a certain key combination.

- Push  three times followed by pushing  three times.  alarm will disappear after 1 minute.

Compressor counter time setting

The default time value for the compressor counter is 600 hours.

The value can be changed in intervals of 50 hours.

Minimum value = 200 hours

Maximum value = 2000 hours

To change the value, proceed as follows:

- Keep keys 4 and 5 pressed for 3 seconds.
- The **FILTER** indicator flashes, and the value 600 is displayed.
- Press the + key, until the right value is displayed.
- Press P to confirm the setting.
- The **FILTER** indicator is turned off.

Reset to factory setting

To reset the controller to factory setting:

- Press $\text{P} + \text{1} + \text{3}$ for at least 5 seconds.
- **RES** flashes in the display.
- Press P to confirm, **RES** lights up for 2-3 seconds, and the buzzer gives a short signal.
- The controller then returns to normal display.

User menu


Push on **P** and **1** buttons at the same time in more than 3 sec. and the first Setup menu appears in the display.

With **+** and **-** buttons its possible to look through each menu items in the "User menu". Push on **P** button to activate the desired item and adjust the setting with **+** and **-** buttons.

To confirm the new setting, push **P** button. Leave the menu item and user menu with the **0** button.

Menu access P+1 →	↓	→		
Dry refrigeration	DC			Activation of dry refrigeration. [ON/OFF]
Rapid thaw	UF			Activation of rapid thaw. [ON/OFF]
Local alarm setting	LAL	LHL	[° C]	Setting the upper alarm limit. At alarm, the display shows: [A2].
		LLL	[° C]	Setting the lower alarm limit. At alarm, the display shows: [A3].
		Lhd	[min.]	Time delay for the upper alarm limit.
		LLd	[min.]	Time delay for the lower alarm limit.
		DA	On/off	Activation of local door alarm. At alarm, the display shows: [A1]. [on/off]
		DAd	[min.]	Time delay for the door alarm.
		BU	On/off	Activation of buzzer. The buzzer sounds at alarms [A1], [A2], [A3]. [1=on / 0=off]
External alarm setting	EAL	EhL	[° C]	Setting the upper alarm limit At alarm, the display shows: [A4].
		ELL	[° C]	Setting the lower alarm limit . At alarm, the display shows: [A5].
		Ehd	[min.]	Time delay for upper alarm.
		ELd	[min.]	Time delay for lower alarm.
		DA	On/off	Activation of local door alarm. At alarm, the display shows: [A1]. [on/off]
		DAd	[min.]	Time delay for the door alarm.
		BU	On/off	Activation of buzzer. The buzzer sounds at alarms [A1], [A4], [A5]. [1=on / 0=off]
	ALL			Activation of escorting alarm limits. [FAS]= fixed limits / [ESC] = limits following the setpoint.
	DEF			Number of defrosts in 24 hours.

User menu overview:

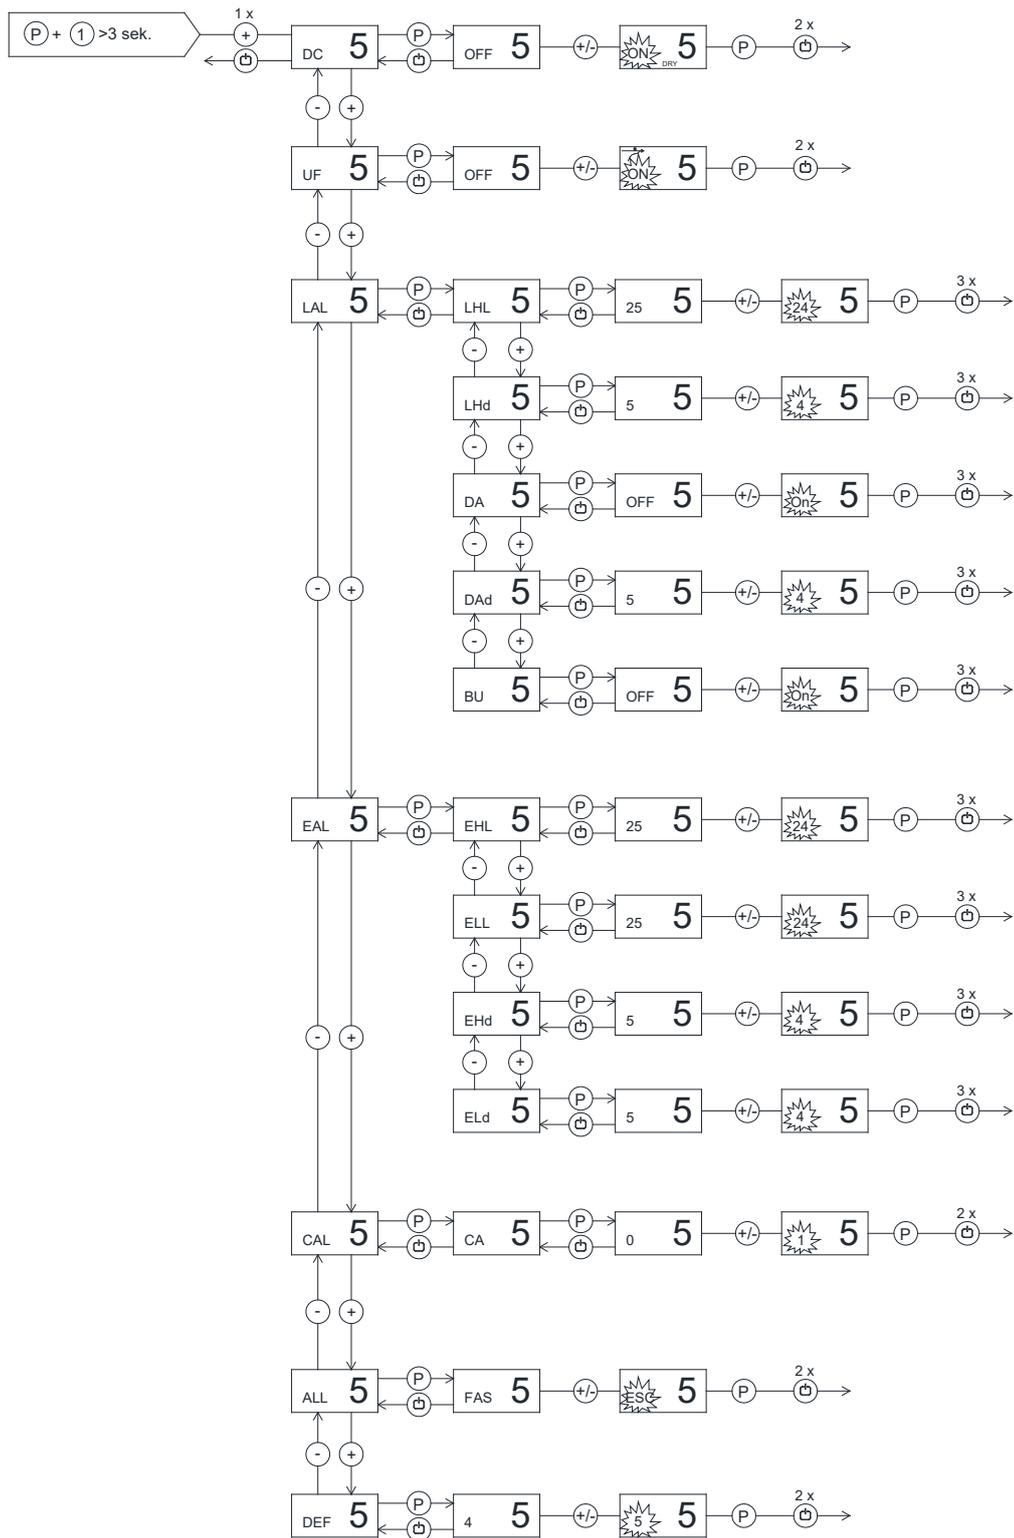

Visual and acoustic settings


Push on **P** and **2** buttons at the same time in more than 6 sec. and the menu item [**A**] appears in the display.

With **+** and **-** buttons it's possible to look through the main menu item [**A**] and [**P**]. Push on **P** button to enter the submenu from the main menu items.

With **+** and **-** buttons it's possible to look through the submenus menu items. Push on **P** button to enter the desired menu item and adjust the setting with **+** and **-** buttons.

To confirm the new setting, push **P** button. Leave the menu item and submenu with the **←** button.

Menu access P+2 →	↓	→		
Alarm setup	A	A1	[° C]	In case of condenser overhear, compressor protection cycle is started.
		A2	[° C]	Condenser temperature, which disconnects the compressor protection cycle.
		A3	[min.]	Re-enter time for acoustic alarm (min.)
Display presentation	P	P1	[min.]	Temperature freeze after defrosting end.
		P2	[° K]	Temperature freeze around setpoint. Temperature fluctuation filter.
		P3	[sec.]	Display updating frequency.
		P4		Selection of Celsius or Fahrenheit temperature scale.

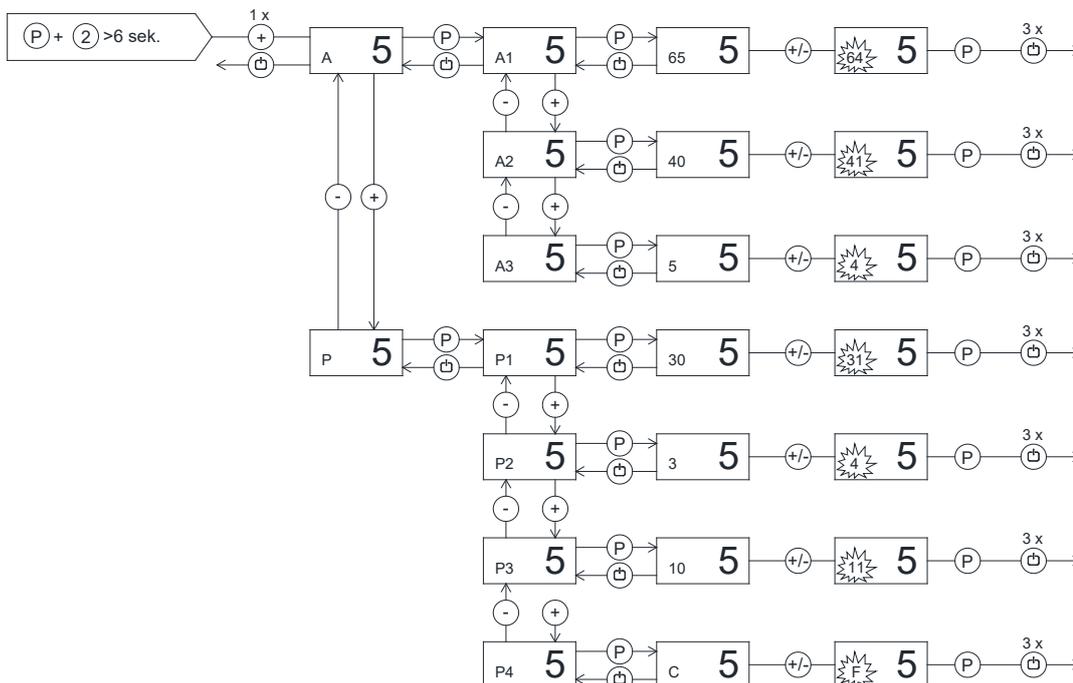

Settings for running cycle


Push on **P** and **3** buttons at the same time in more than 6 sec. and the menu item [**C**] appears in the display.

With **+** and **-** buttons it's possible to look through the main menu item [**C**], [**F**] and [**d**]. Push on **P** button to enter the submenu from the main menu items.

With **+** and **-** buttons it's possible to look through the submenus menu items. Push on **P** button to enter the desired menu item and adjust the setting with **+** and **-** buttons.

To confirm the new setting, push **P** button. Leave the submenu and main menu item with the **⏪** button..

Menu access P+3 →	↓	→		
Compressor setup	C	C1	[° K]	Differential for compressor cut-in and cut-out.
		C2	[° C]	Highest allowed temperature limit for the cabinet.
		C3	[° C]	Lowest allowed temperature limit for the cabinet.
		C4	[min]	Forced pause time for compressor between cut-out and cut-in.
		C5		Number of condenser sensors connected.
		C6	[min]	Compressor stop by open door.
		C7	[° K]	Soft differential for cool/heat cut-out (kelvin)
		C8	[° C]	Setpoint for condenser fan
		C9	[° K]	Cut-out differential for condenser fan (kelvin)
Evaporator fan	F	F1	[° C]	Temperature allowing the evaporator fan to start after defrosting.
		F2	[min.]	Pause time of evaporator fan, while the compressor is stopped.
		F3	[sek.]	Running time of evaporator fan, while the compressor is stopped.
		F4	[° K]	Stop temp. of LT compressor i cascade evaporator (celcius)
Display presentation	D	D1		Number of defrosts / 24h
		D2	[° C]	Defrost stop temperature measured at the evaporator.
		D3	On/off	Activation of defrost by start-up sequence [1=on / 0=off].
		D4	[min.]	Maximum defrosting time.
		D5		Selection between automatic- [1], air- [2] or electric defrosting [3].
		D6	[min.]	Dripping time after defrosting
		D7	[° C]	Temperature limit deciding the defrosting method, when d5 = [1]
		D8	[° C]	Evaporator temperature starting an extra defrosting cycle.

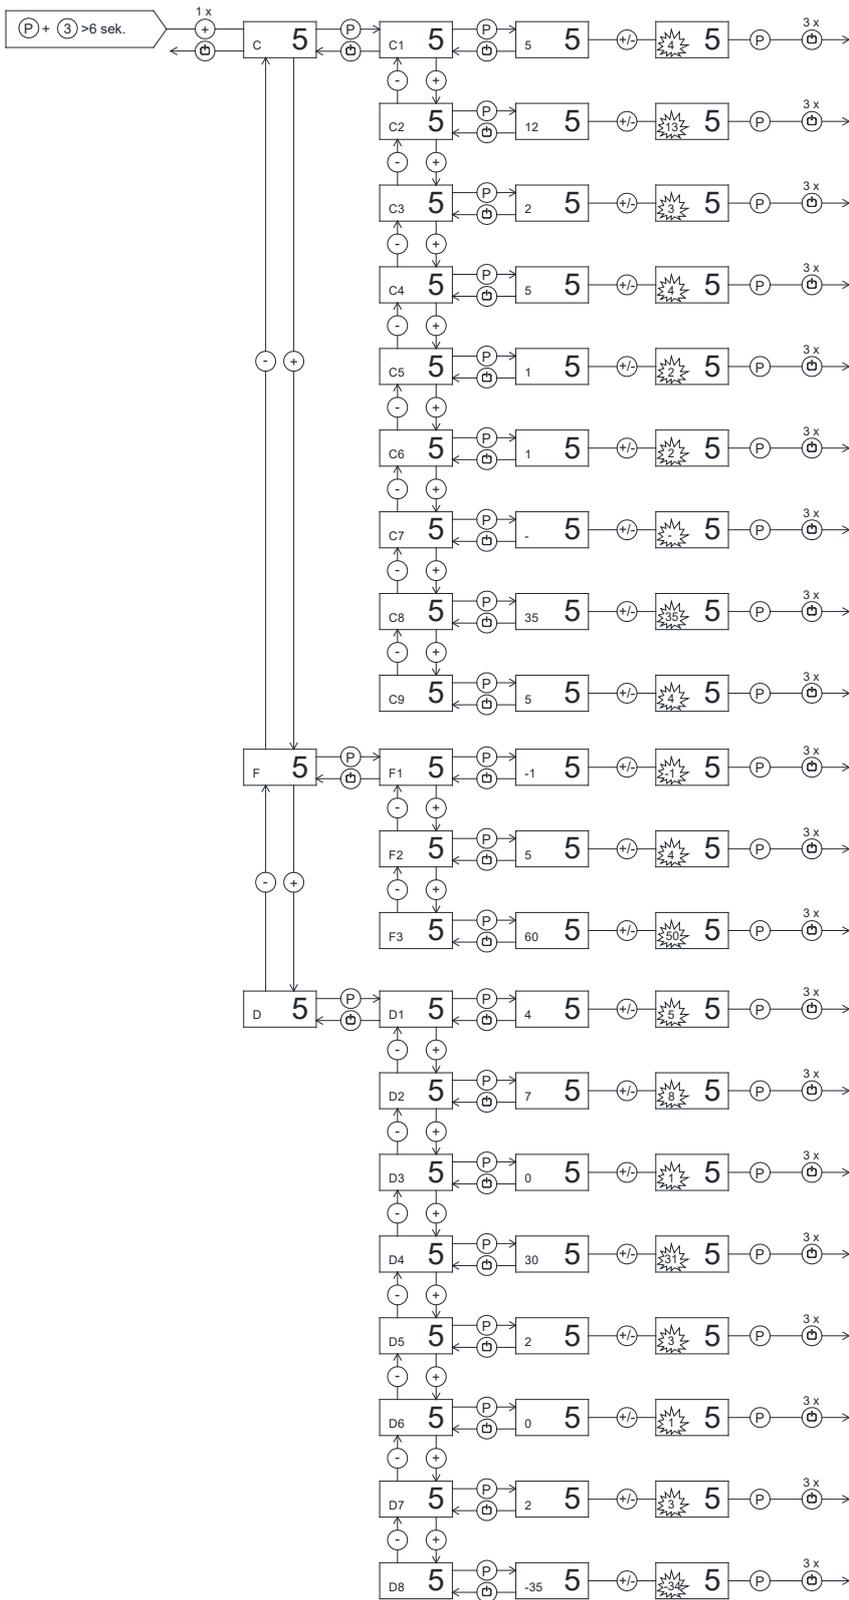

Test program for relays and electrical components


Push on **P** and **4** buttons at the same time for more than 6 sec. and the menu item [**tC**] appears in the display.

Note: When this test program is started, all outputs are de-activated, which means the cabinet is turned off. It might be experienced that the compressor does not start again after leaving the program, because the compressor protection "forced pause" takes effect.

With **+** and **-** buttons its possible to look through each menu items in the "Service program". Push on **P** button to activate the desired relay and the display glows with [**on**]. The desired relay conducts now power to the electrical component.

Push the **⏻** button to switch off the power from the electrical component. Leave the service program with the **⏻** button.

Menu access P+4 →↓	↓	P-key → [on]
Compressor	TC	Compressor is running, and if a condenser fan is present, it runs too.
Evaporator fan	TF	Evaporator fan is running
Defrost heater	Td	Defrost heater is turned on. Warning: the heater might be very hot. Danger of burn!
Light	TL	Light is switched on.
Alarm output	TA	Activation of voltage free contact. Alarm output.
Display test	TdP	All LED's light up for 1 sec. and the buzzer sounds. Then the software revision number is displayed.

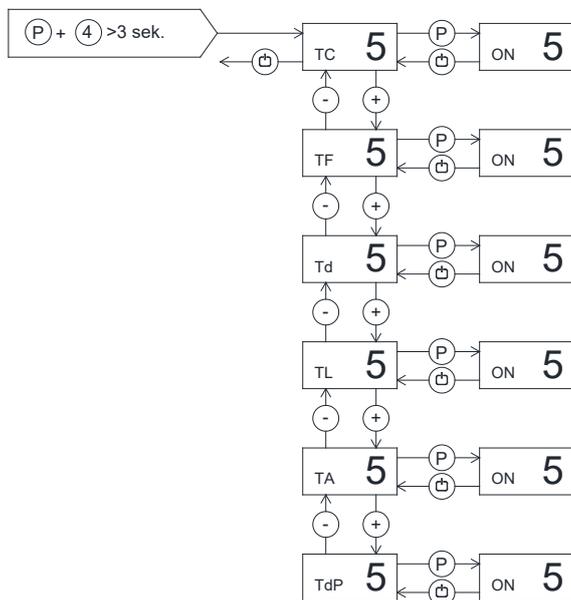


Display of current sensor inputs

Push on **P** and **5** buttons at the same time in more than 6 sec. and the menu item [**P-A**] appears in the display.

With **+** and **-** buttons its possible to look through each menu items to check each sensor in the cabinet. Push on **P** button to activate the actual sensor and the display shows the actual temperature.

Leave the program with the **⏏** button.

Menu access P+5 →	↓	P-key → [° C]	Display message and cause	
Room sensor	P-A	Room sensor measurement is displayed	F1	Room sensor error
Evaporator sensor	P-b	Evaporator sensor measurement is displayed	F2	Evap.sensor error
Condenser sensor 1	P-C	Condenser sensor 1 measurement is displayed	F3	Condenser sensor 1 error
Condenser sensor 2	P-d	Condenser sensor 1 measurement is displayed	F4	Condenser sensor 2 error
*			F7	Overheated condenser 1 and 2
An overheated condenser could be caused by a clogged air filter. Can be triggered by both C and d sensor.			-0-	Open door symbol
By open door this symbol is displayed. In event of a too long door opening, an alarm is triggered [A1].				

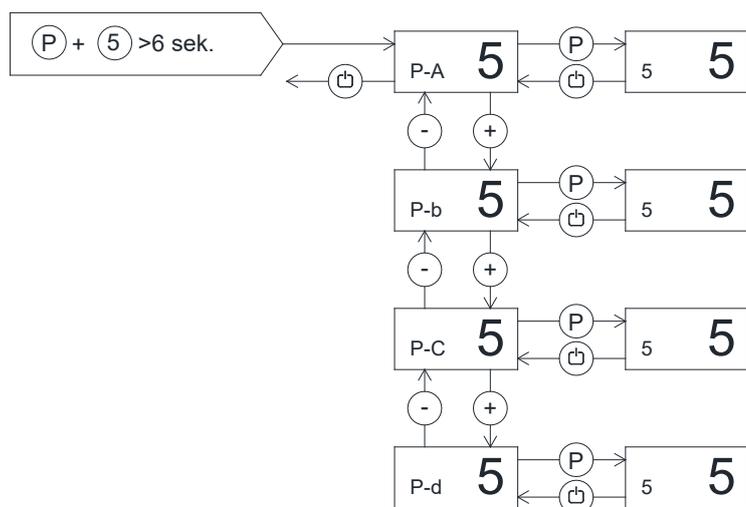

Reset the controller to factory setting

To reset the controller to factory settings:

Push **P** + **1** + **3** for more than 6 seconds. The display shows [**RES**].

Push **P**, and a beep sounds for confirmation”.

Reversing door hinge side


The door can be reversed from left hand-hinged to right hand hinged or vice versa.

Example: Reversing from right hand to left hand hinged door.




Disconnect the cabinet from mains power !


1

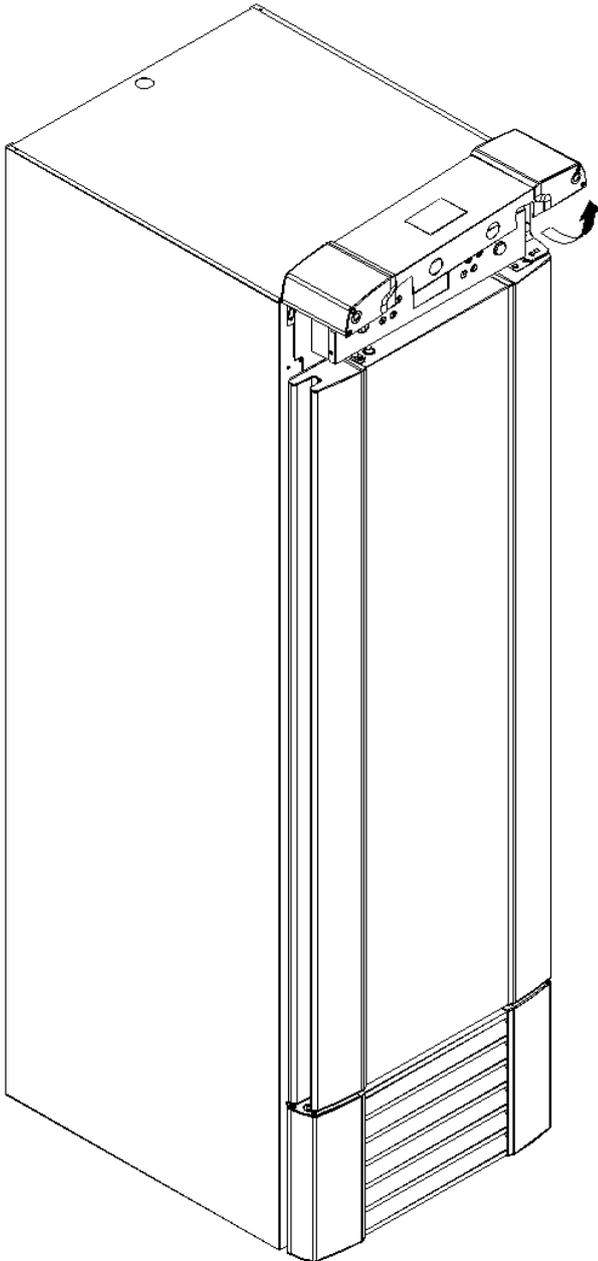


2

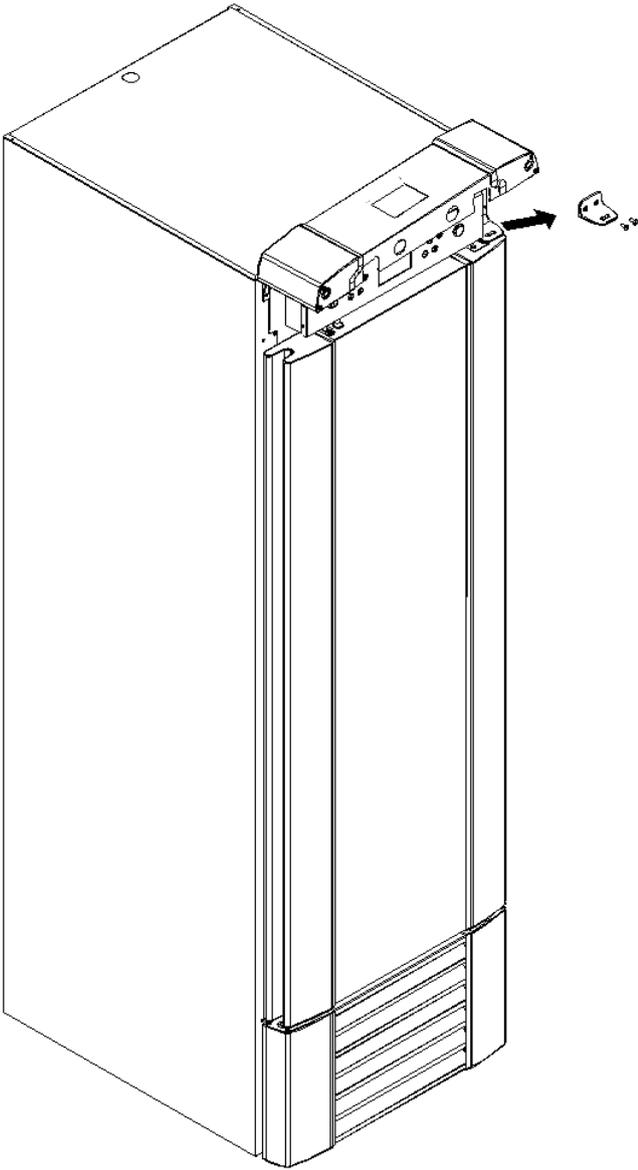


3

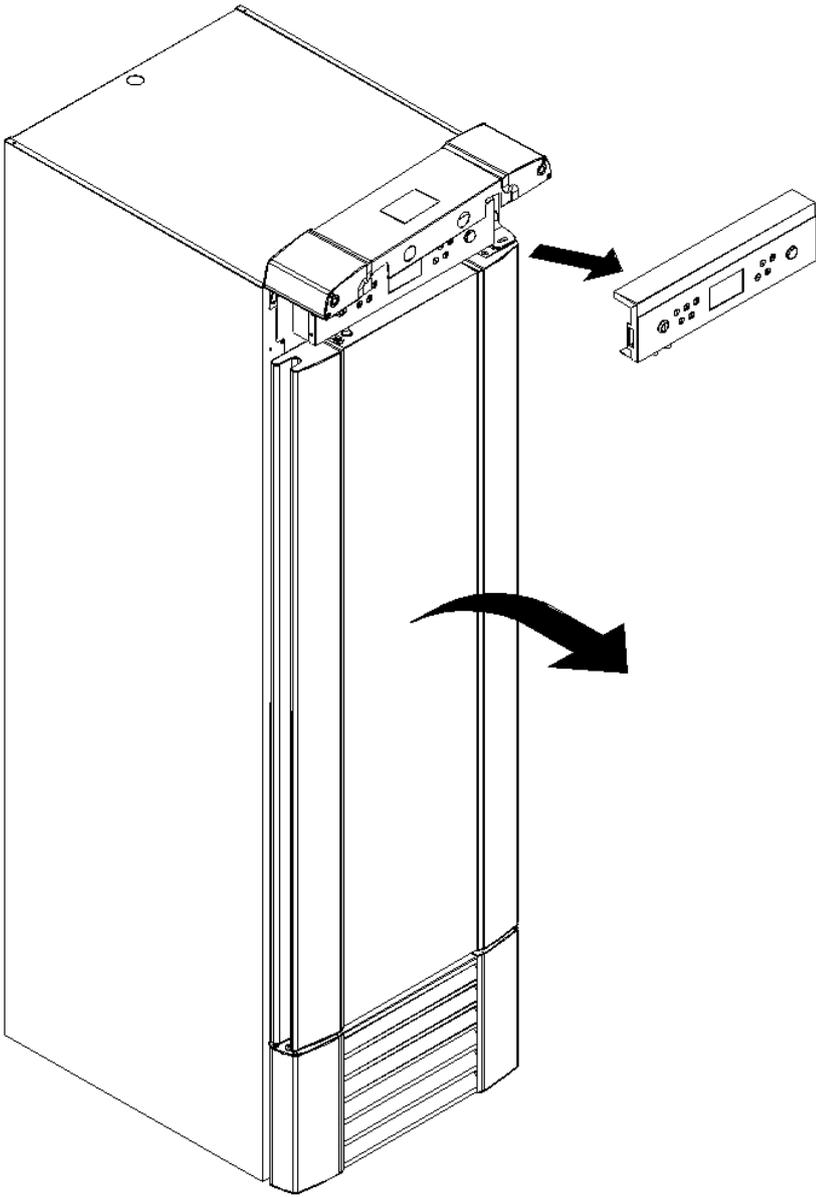


4

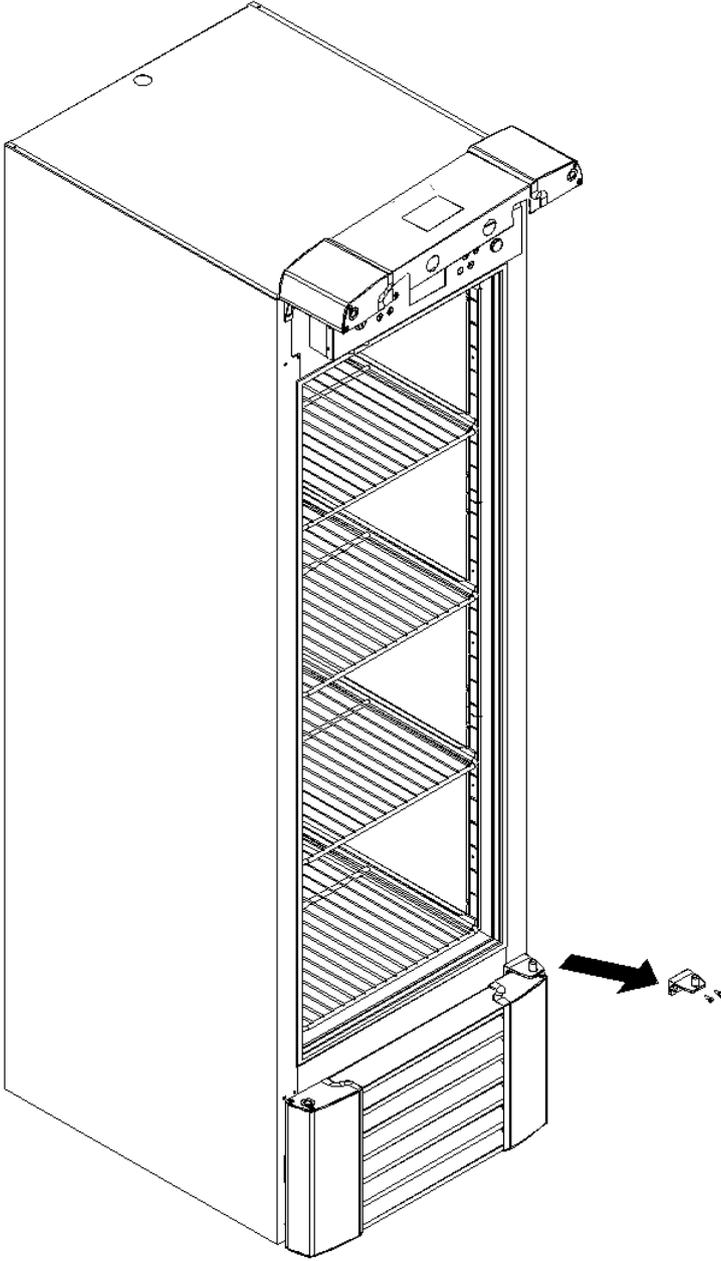


5

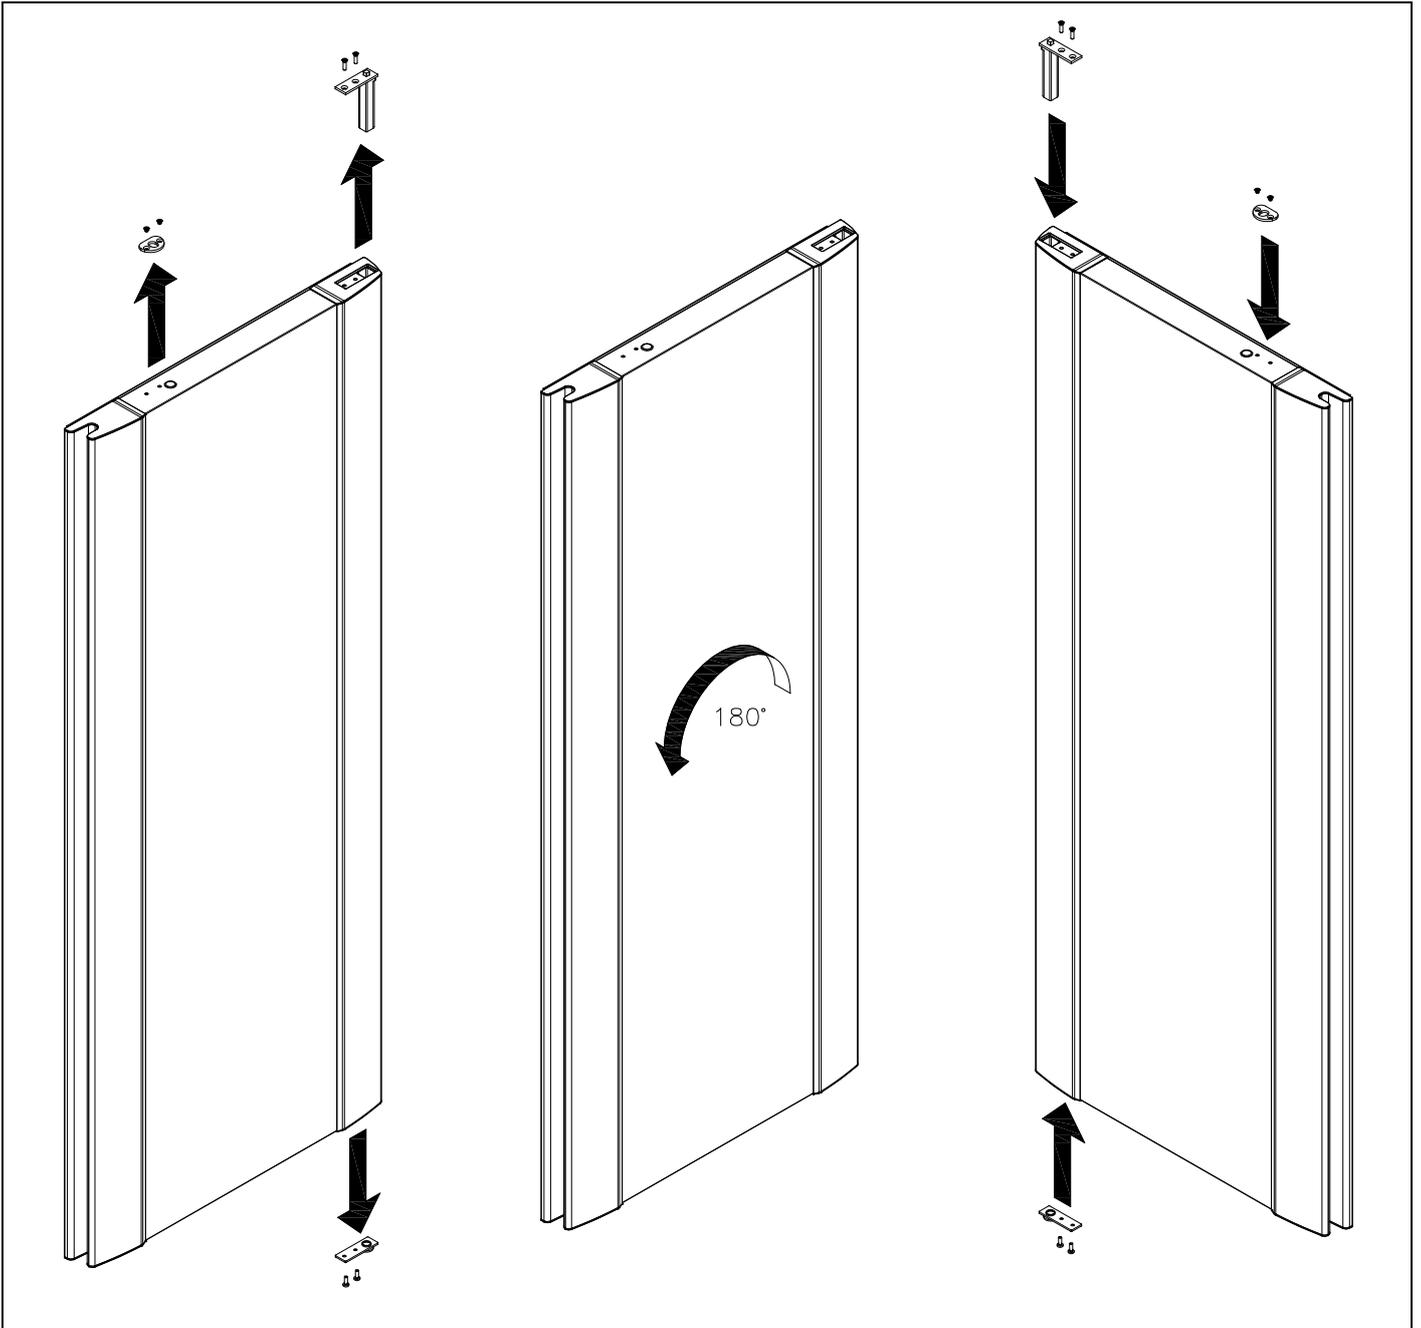


6

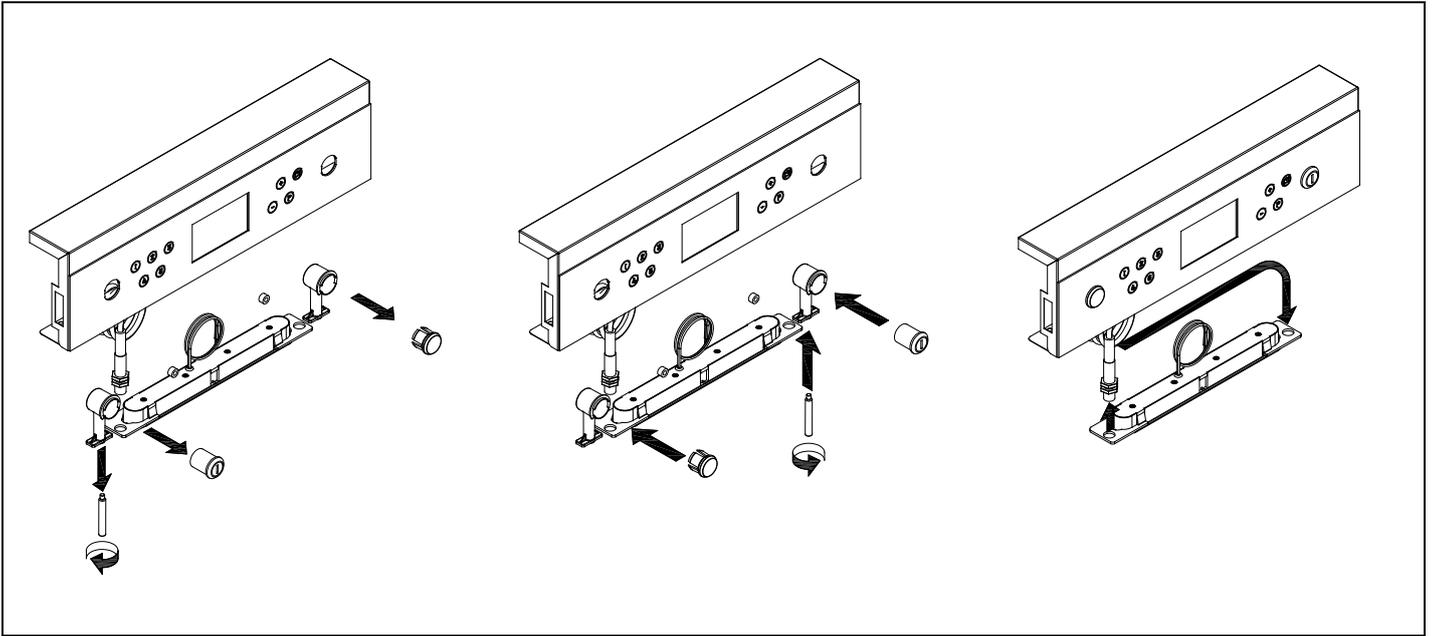

7

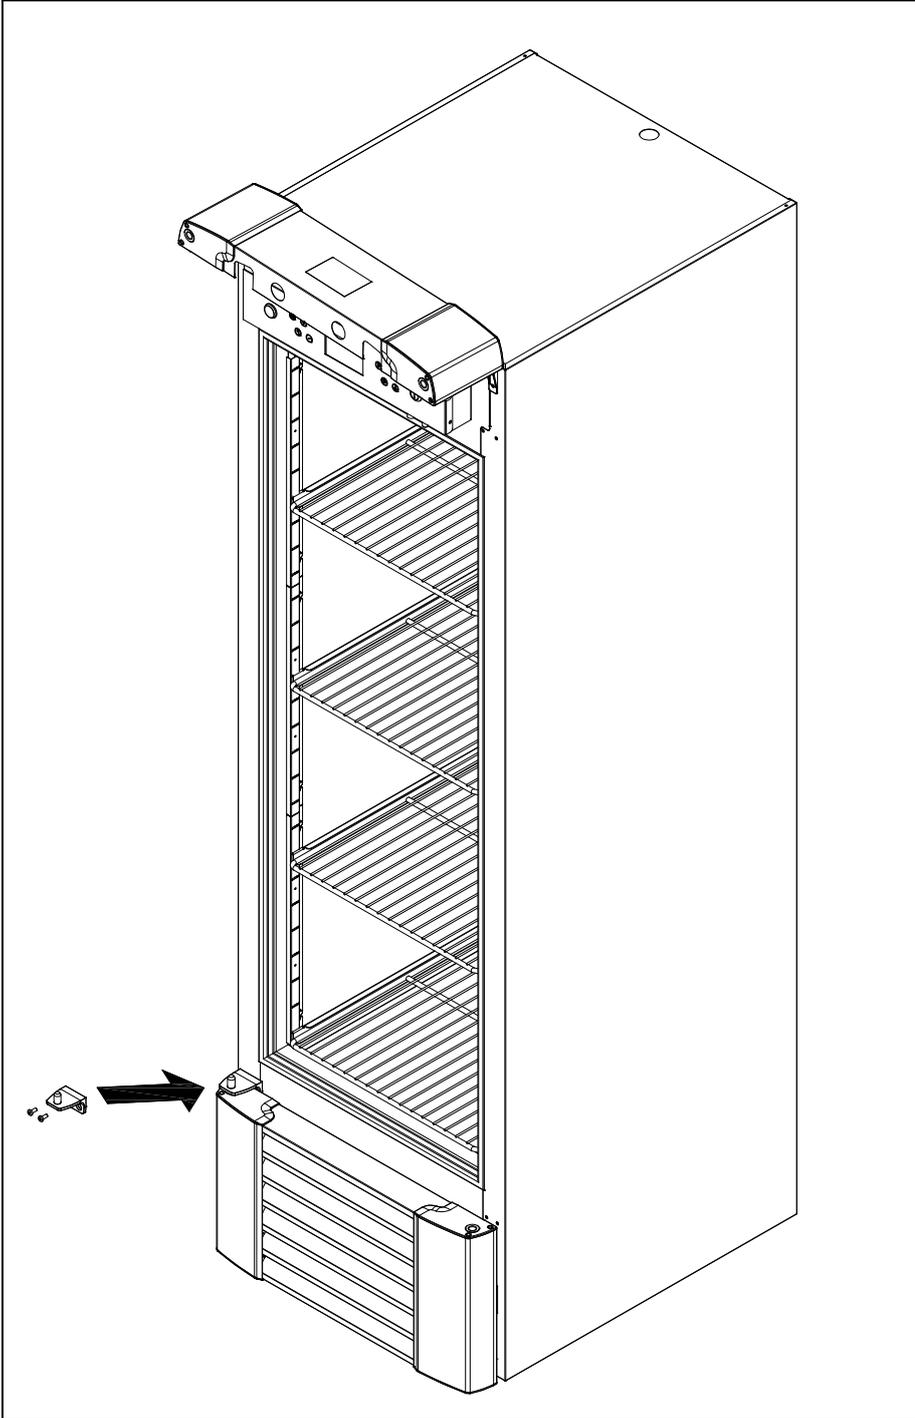


9

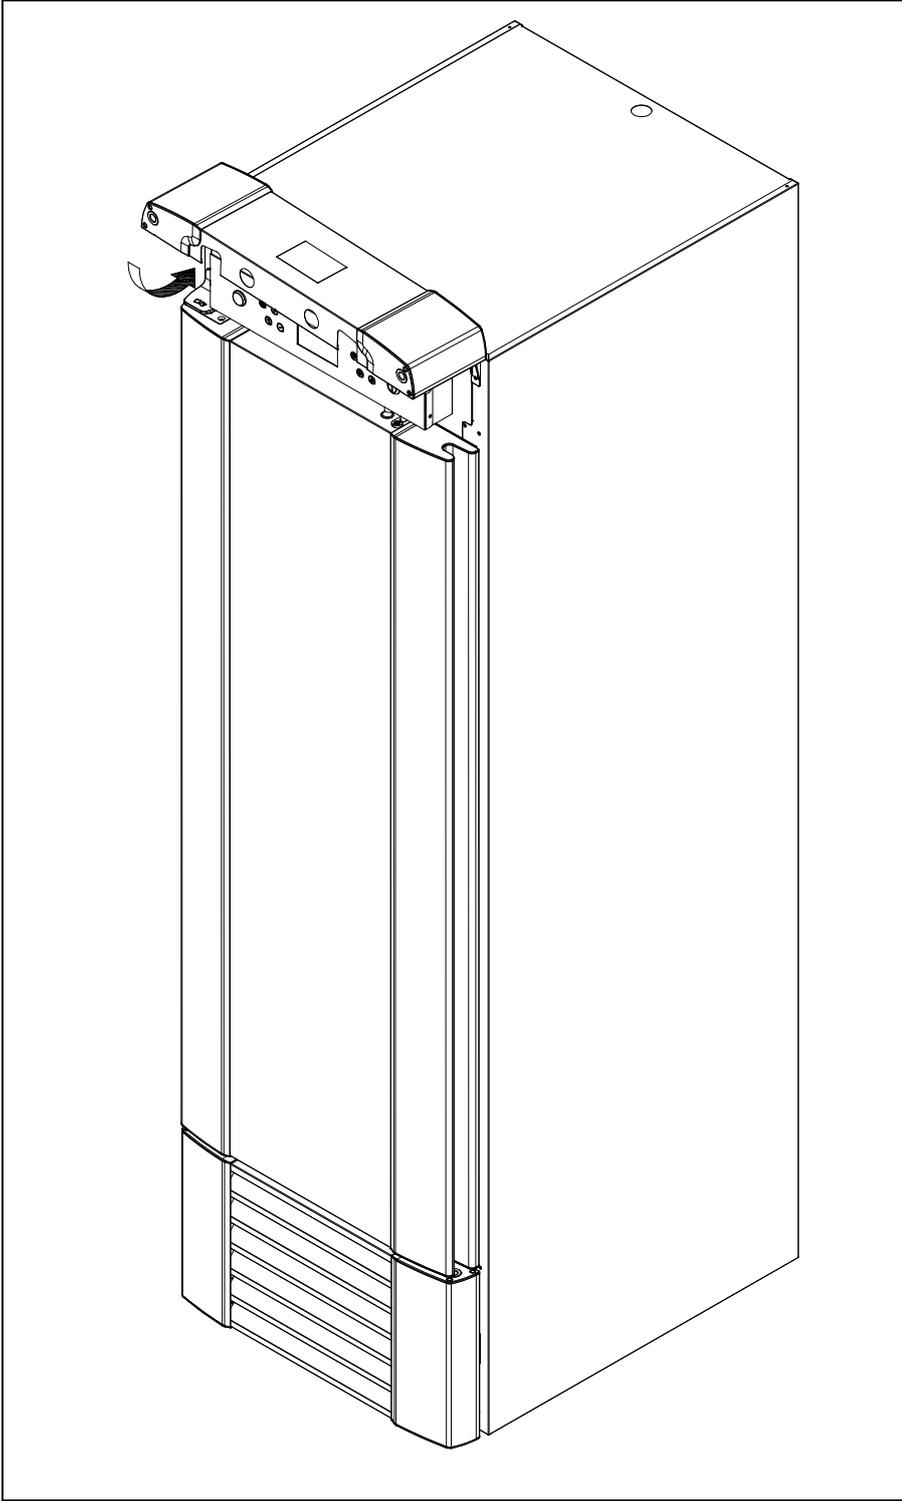

Plug connections onboard the controller

The description here below explains the plugs or terminals to each special function and relay.

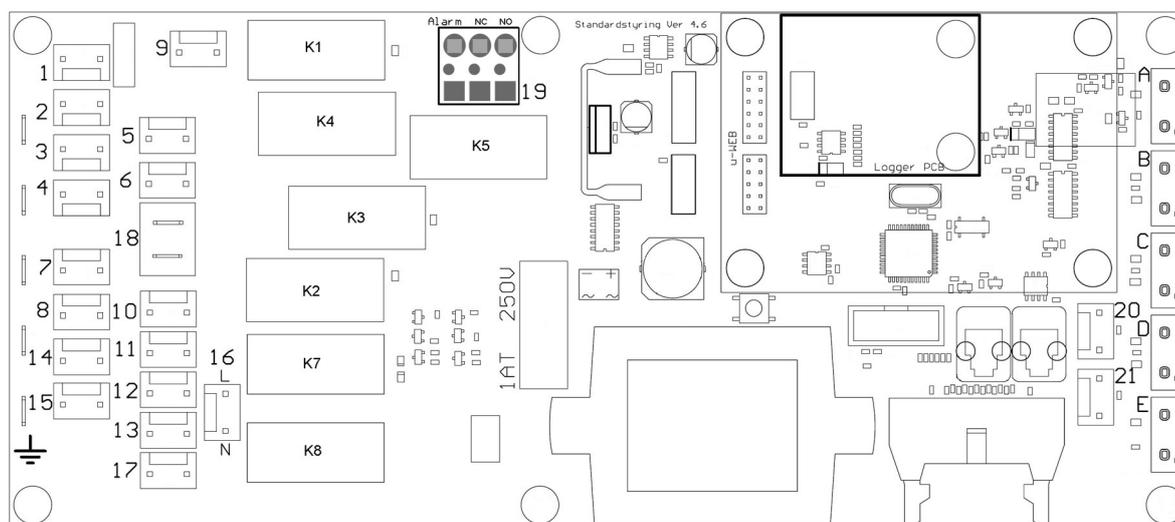

Plug	Electrical component	Description
1	230 Volt relay – K1	The relay supplies the compressor and the condenser fan with power.
2		
3		
4		
5	230 Volt relay – K3	The relay supplies the evaporator fan with power.
6		
7	230 Volt relay – K2	The relay supplies the defrosting heating element and the drip water heating element with power
8		
14		
15		
9	230 Volt relay – K4	The relay supplies the halogen light transformer with power (230V/12V).
10	230 Volt relay – K7 and K8	The relay supplies the front frame heater, re-evaporating heating element, and the condensing pump with power. When the cabinet is switched on, the power is constantly viable.
11		
12		
13		
17		
18	Plug connection for the safety thermostat	The plug is connected in series with the defrosting heating element.
19	230 Volt relay – K5	The potential free alarm relay. The relay changes position when the cabinet switches the power on. By alarms and by power failure the relay switches back to normal position.
16	230 Volt input	These terminals are the power input connection with 230 V to the controller.

20	Digital input from the door contact	When these terminals are not in use, the controller lets the evaporator fans keep running. By shortcutting the terminals, the fan stops.
21		
A	Room sensor input	NTC sensor
B	Evaporator sensor input	NTC sensor
C	Condenser sensor input 1	NTC sensor
D	Condenser sensor input 2	NTC sensor
E	Sensor input for a extra sensor	NTC sensor

GRAM MIDI



User manual



Gram Professional ApS
Aage Grams Vej 1
6500 Vojens
Denmark
CVR-No. 43 12 21 93

ENGLISH

Thank you for choosing a quality product from Gram Professional.

This manual will advise you how to install, use and maintain your new product.

Before our products leave the factory, they undergo a full function and quality test.

Should you nevertheless experience problems with the product, then contact your local dealer. Gram Professional representatives and dealers placed all over the world are ready to help you.

Please refer to your dealer for information about the warranty coverage of your new product.

Any warranty is subject to correct use according to specifications in this user manual, where e.g. common maintenance and eventual repairs are carried out by authorized technicians with proper knowledge of the product and only using original spare parts.

Changes in installation and other use of the product than prescribed in this manual, might affect the operation and durability of the product.

The manual is written according to our current technical knowledge. We constantly work on updating this information, and we reserve the right to make technical changes.

Intended use

Applies to R/C/F 450 and R/C/F 650:

The product is intended for the storage of foodstuffs in non-household environments but not for the display to or access by customers.

Applies to GR/GF 60 and GR/GF 650:

The product is intended for the display and sale of foodstuffs in non-household environments with access by customers.

The product is designed for usage at a constant temperature and not be used for chilling down or freezing hot/fresh foodstuff.

The product is only to be used for the purpose for which it has been expressly designed. Any other use could cause that the foodstuff stored in the product is not kept at the correct temperature or even damage the product.

The product is not suited for storing blood plasma, laboratory samples, pharmaceuticals or similar substances.

The manufacturer will not be held liable or responsible for any damage caused by improper, incorrect or unreasonable use of the product.

Safety information

Important

Description of symbols used in this manual.



Warning Lacking observation to these instructions might result in accidents with personal injury.



Important If these instructions are not observed, the product might be damaged or destroyed.

Be aware that Gram Professional has taken precautions to ensure that the safety of the product is in order.

Please read carefully the following information regarding safety.



It is important, that everyone who are to use or install the product, to have access to this manual.



This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



Children should be supervised to ensure that they do not play with the appliance.



The appliance might contain parts with sharp edges in the compressor compartment, and in the inside compartment.



The appliance is not to be transported on a sack truck, there is a danger of loosing the balance, causing danger to persons.



Do not pull the power cord to dicconnect the appliance, or when moving the appliance.

Location

When receiving the product, check the packaging material for damage.

If any damage occurs at the packaging material, it should be considered if the product might have been damaged too. If the damage is substantial, please contact your dealer.

The transport pallet can be removed by loosening the screws that fasten the pallet to the product.



This task requires at least 2 persons. The heaviest part of the product is at the bottom. Be aware of this, when removing the transport pallet.

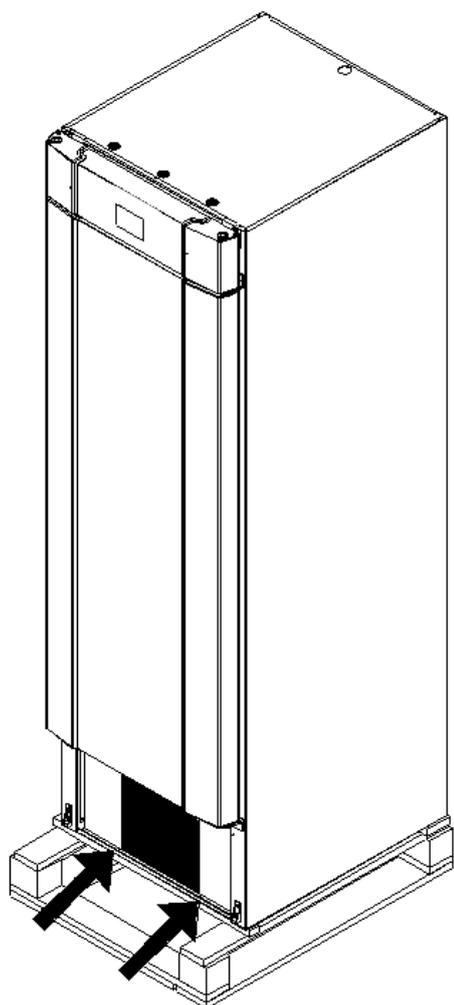


Fig.1



If the cabinet has been transported in horizontal position it must stand upright at least 2 hours before it is started to allow the oil from the compressor to run back.



Because of the heavy weight of the product, the floor might be damaged or scratched when moving the product.



Correct set up gives the most effective operation.

The product should be located in a dry and adequately ventilated room.



To ensure efficient operation, it may not be placed in direct sunlight or against heat-emitting surfaces. The product is designed to operate in an ambient temperature between +16°C and +40°C.



Avoid placement of the product in a chlorine/acid-containing environment (swimming bath etc.) due to risk of corrosion.

The product and parts of the interior is equipped with a protecting film, which should be removed before use.

Clean the product with a mild soap solution before use.

The set up place must be level and horizontal.

For versions with legs, use the adjustable legs to make sure that the product stands level and upright.

For versions with castors, the locking devices of the two front castors must be activated, when the product is in place. The base must be level, and the product may not be placed on frames or the like.

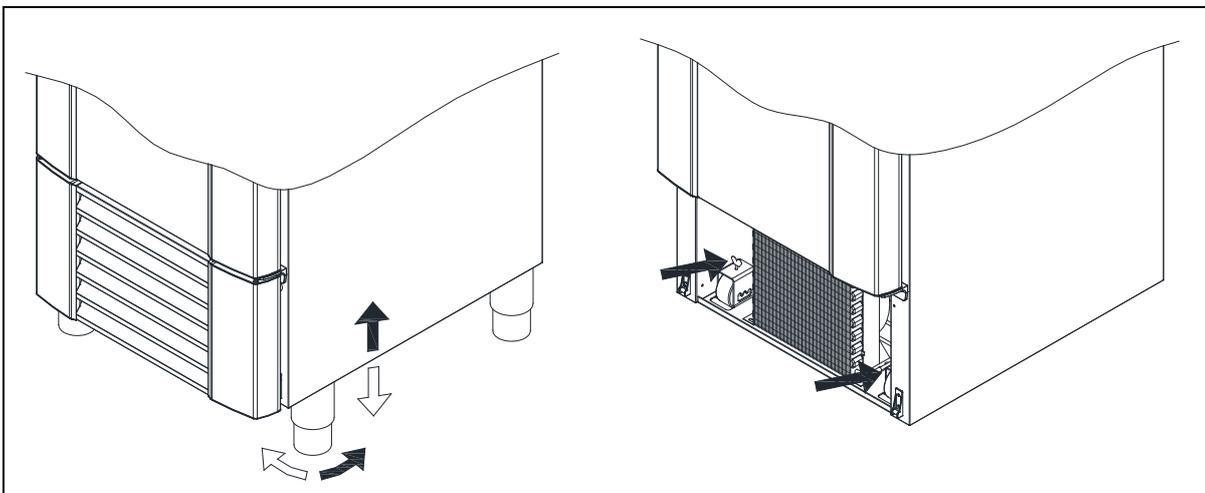


Fig. 2

Optimizing the energy consumption

- Correct set up gives the most effective operation.
- The product should be located in a dry and adequately ventilated room.
- To ensure efficient operation, it may not be placed in direct sunlight or against heat-emitting surfaces. The product is designed to operate in an ambient temperature between +16°C and +40°C.
- Do not keep the door open for too long.
- Keep the condenser filter clean – to be cleaned at least every 2 weeks.
- Do not set the temperature setpoint too low.

General description

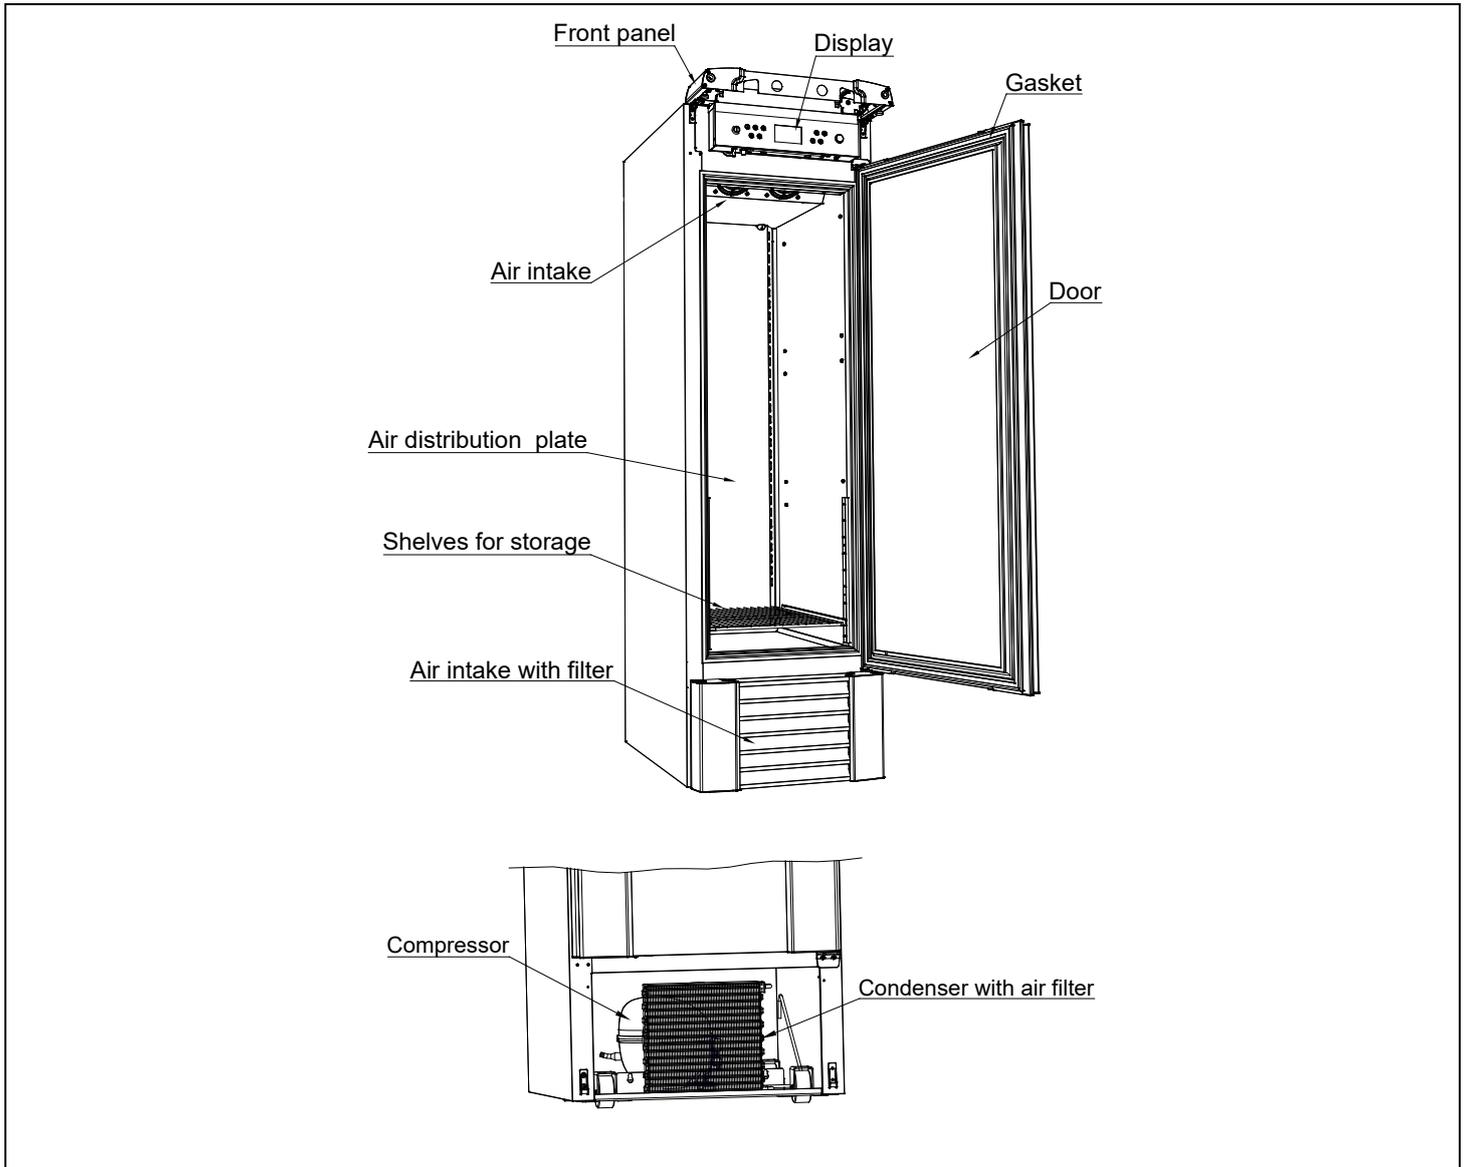



Fig. 3

Refrigerant / GWP value

Refrigerators	Refrigerant	Charge kg	GWP	CO ₂ equivalent t
MIDI R/C 450 G	R290	0,090	3	0,000270
MIDI R/C 650 G	R290	0,113	3	0,000339
MIDI GR 650 G	R290	0,123	3	0,000369
Freezers				
ECO MIDI F 450 G	R290	0,080	3	0,000240
ECO MIDI F 650 G	R290	0,100	3	0,000300

Climate / temperature class

Products are tested according to the following climate and temperature classes. Information about the product's climate and temperature class can be found at the name plate (see fig.7).

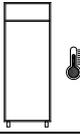Climate class	
3	25°C / 60 % RH
4	30°C / 55 % RH
5	40°C / 40 % RH

Temperature class	
L1	-18°C
M1	+5°C

Electrical connection

Read the text below thoroughly before electrical connection.



The product is intended for connection to alternating current. The connection voltage (V) and frequency (Hz) are shown on the name plate in the cabinet (see Fig. 7). Only the supplied cord is to be used.



Never use an extension cord for this appliance!
If a wall socket is placed in a longer distance than the length of the supplied power cord, contact an electrician to establish a wall socket within the range of the supplied power cord.



If the product is defective, it must be examined by an authorized technician with proper knowledge of the product during the guarantee period, if it is a product with built-in compressor.

If it is a product connected to an external compressor unit, it must be examined by the company who has connected the product to the unit.

Outside the guarantee period, it is advisable to use the service advised by your dealer. If this is not the case, assistance is required from an authorized technician with proper knowledge of the product.

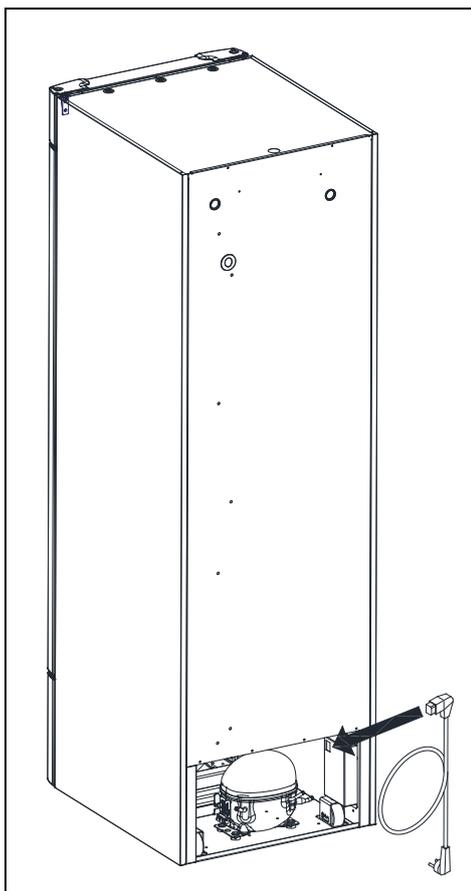


Fig. 4

Always disconnect the power if interruptions in power supply occur, and when electrical parts are removed/put on, and before cleaning and maintenance of the product.

Repairing of electrical/technical parts may only be performed by authorized technicians with proper knowledge of the product.

Do not use the product before all coverings are installed, so that live or rotating machine parts can not be touched.

The product is not to be used outdoor.

All earthing requirements stipulated by the local electricity authorities must be observed. The plug and wall socket should then give correct earthing. If necessary, contact an electrician.



Make sure the product is switched off at the socket before service is performed on electrical parts. It is not sufficient to switch off the product by the START/STOP key as there will still be voltage to some electrical parts of the product.

General use



Do not block vent holes in the front panel.



Do not damage the refrigeration system parts.



During normal operation, some parts of the refrigeration system in the compressor compartment might reach high temperatures, and could therefore cause burns if touching these components.



Do not use electrical devices inside the product.



To ensure correct and efficient air flow in the cabinet, the shaded areas must be kept free of items. (see Fig. 5)



All items to be stored, that are not wrapped or packed, must be covered in order to avoid unnecessary corrosion of the inner parts of the cabinet.



If any controller parameters are changed from default, this could cause that the product is not functioning normally, and harmful temperatures could damage items that are kept inside the product.



If the product is turned off, wait minimum 3 minutes before turning it on again. This is to protect the compressor from damage



Maximum loading of wire shelf: 40 kg




Do not store explosive substances such as aerosol cans with flammable propellant in this appliance.

Fig. 5

R/C/F 450/650

GR 450/650

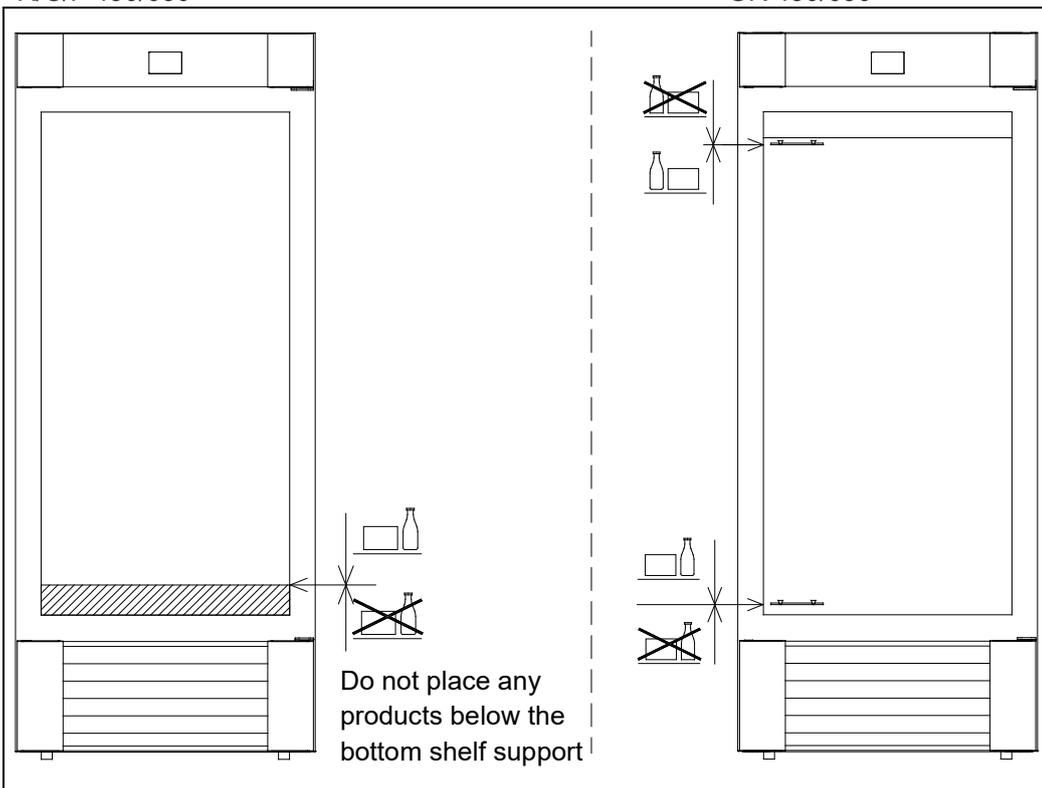

Operating the product

Control elements:



Primary display		Display of temperature
Secondary display		Display of error codes, alarms, settings etc.
Control lamps		These lamps indicate, which components/functions are active.
Warning lamps		These lamps only lights up if something is wrong, or action is required.
Control keys		On/off key. Used for turning the appliance on or off, and exiting the menu.
		P key. Used as selection key and for activation of a menu in combination with other keys.
		+/- keys. Up/down in setting.
		Numeric keys. Setting of parameters.

Starting up:

Plug in the appliance.

- Push  to turn on the appliance.

The display shows the software version, and relevant control lamps light up.

On cold cabinets, or if the cabinet has been turned off for a short time, and the evaporator temperature is still below the freezing point, a defrost will be activated.

See the chapter “Defrosting”.

Temperature setting:

- Keep  pressed. When doing this, the setpoint temperature is displayed. While  is kept pressed, the setpoint can be changed by pressing  or .
- Each time  or  is pressed the temperature will change one degree. The new value flashes in the display
- When the required setpoint has been set, let go of the keys, a short beep sounds, and the settings are saved.

Light:

When the door opens, the light is turned on in the product, and is turned off again when the door is closed.

On KG/FG versions with glass door, the light is turned on by pressing  for approx. 5 seconds, even by closed door.

The light is turned off again, by pressing  for approx. 5 seconds.

Errors and alarms

Display code	Description
OP	The door is open.
A1 / OP 	Door alarm, if the door remains open, or is not closed correctly.
A2 	Local high temperature alarm.
A4 	External high temperature alarm

Applicable to all alarms: press  to confirm the alarm. The display returns to normal operation.

Display code	Description
F1 	<u>Room sensor error.</u> Error display will continue until the error has been mended. Service assistance is required.
F2 	<u>Evaporator sensor error.</u> Error display will continue until the error has been mended. Service assistance is required.
F3* 	<u>Condenser sensor 1 error.</u> Error display will continue until the error has been mended. Service assistance is required.
F4* 	<u>Condenser sensor 2 error.</u> (only on products with 2 refrigeration circuits) Error display will continue until the error has been mended. Service assistance is required.
F7*  FILTER	<u>Too high condenser temperature.</u> The code is displayed until the condenser temperature returns to normal. The cause might be a clogged condenser, or too high ambient temperature. If the ambient temperature is too high, the placement of the cabinet might be wrong, and an alternative place should be found. Ventilation might help. If this does not help, request service assistance.

* Applies only to cabinets with built-in compressor.

Reminder of cleaning the condenser air filter:

After 600 compressor running hours the filter must be cleaned and it is indicated by warning lights: **FILTER**



If the cleaning is not completed within 650 hours, the warnings continue, and an acoustic alarm sounds.

Resetting the **FILTER alarm:**

After cleaning the air filter, the controller must be reset to remove the alarms.

It can only be reset by using a certain key combination.

- Push  three times followed by pushing  three times. **FILTER** alarm will disappear after 1 minute.

User menu

User menu overview:

Menu access P + 1 →	↓	→	+ / -	Description
1. Dry refrigeration	DC	ON/OFF		Activation of dry refrigeration. (on/off)
2. Rapid thaw	UF	ON/OFF		Activation of rapid thaw. (on/off)
3. Local alarm setting	LAL	LHL	°C	Setting the upper alarm limit. At alarm, the display shows: A2
		LHd	min.	Time delay for the upper alarm limit.
		DA	On/off	Activation of local door alarm. At alarm, the display shows: A1 (1=on / 0=off)
		DAd	min.	Time delay for the door alarm.
		BU	On/off	Activation of buzzer. The buzzer sounds at alarms A1, A2. (1=on / 0=off)
4. External alarm setting	EAL	EHL	°C	Setting the upper alarm limit. At alarm, the display shows: A3
		ELL	°C	Setting the lower alarm limit. At alarm, the display shows: A4
		EHd	min.	Time delay for upper alarm.
		ELd	min.	Time delay for lower alarm.
5. Temperature offset (sensor calibration)	CAL	CA	K	-5...+5 K
6. Alarm limits	ALL	FAS/ESC		Setting of alarm limits. Fixed/escorting. FAS = fixed limits / ESC = limits following the setpoint
7. No. of defrosts	DEF	4		Number of defrosts in 24 hours.


Note: The numbers at each menu item refer to the numbers in the descriptions on the following pages.

If a change of the setting is required, get access to the menu by pushing $\textcircled{P} + \textcircled{1}$ for more than 3 seconds. The values are changed by pushing the $\textcircled{+}$ or $\textcircled{-}$ keys. The new setting is saved by pushing \textcircled{P} . To exit the menu, push $\textcircled{\square}$.

1. Setting of dry refrigeration

Note : Applies only to products equipped with dry refrigeration.

- Press $\text{P} + \text{1}$ for more than 3 seconds. The secondary display shows **DC**.
- Press P , the secondary display shows **OFF**, because the program is off.
- Press + , **ON** flashes in the display.
- Press P to confirm, **ON** lights constantly, and the control lamp **DRY** lights.
- Press ☐ twice to exit the user menu. Dry refrigeration is now active.
- De-activation of dry refrigeration is done in the same way.

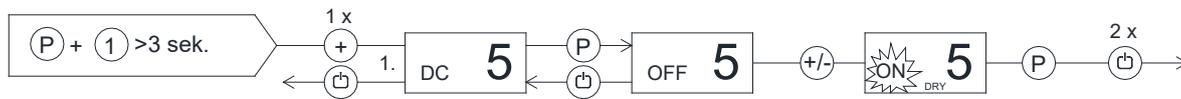


2. Setting of rapid thaw

Note: Applies only to products equipped with rapid thaw. The temperature setpoint must be set between +2°C and +8°C in order to activate rapid thaw.

- Press $\text{P} + \text{1}$ for more than 3 seconds.
- Press + . The secondary display shows **UF**.
- Press P , the secondary display shows **OFF**, because the program is off.
- Press + , **ON** flashes in the display.
- Press P to confirm, **ON** lights constantly, and the control lamp  lights.


At the same time the thaw symbol is displayed: 

- Press ☐ twice to exit the user menu. Rapid thaw is now active. The control lamp  flashes, simultaneously the color of the arrow runs from the bottom to the top.
- When the rapid thaw ends,  and  are turned off and the controller returns to normal operation.

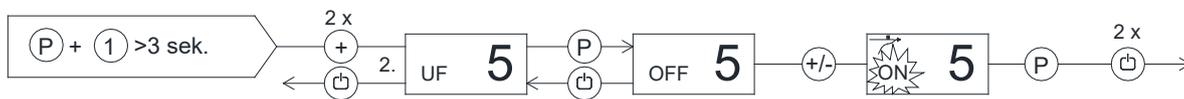


3. Local alarm setting

- Press $\text{P} + \text{1}$ for more than 3 seconds.
- Press + , until the secondary display shows **LAL**.
- Press P , select menu option **LHL**, **LHd**, **DA**, **DAd** or **BU** with the + key.
- Press P to confirm.
- Change the value by using the + or - key.
- Press P to confirm.
- Press Esc 3 times to exit the user menu.

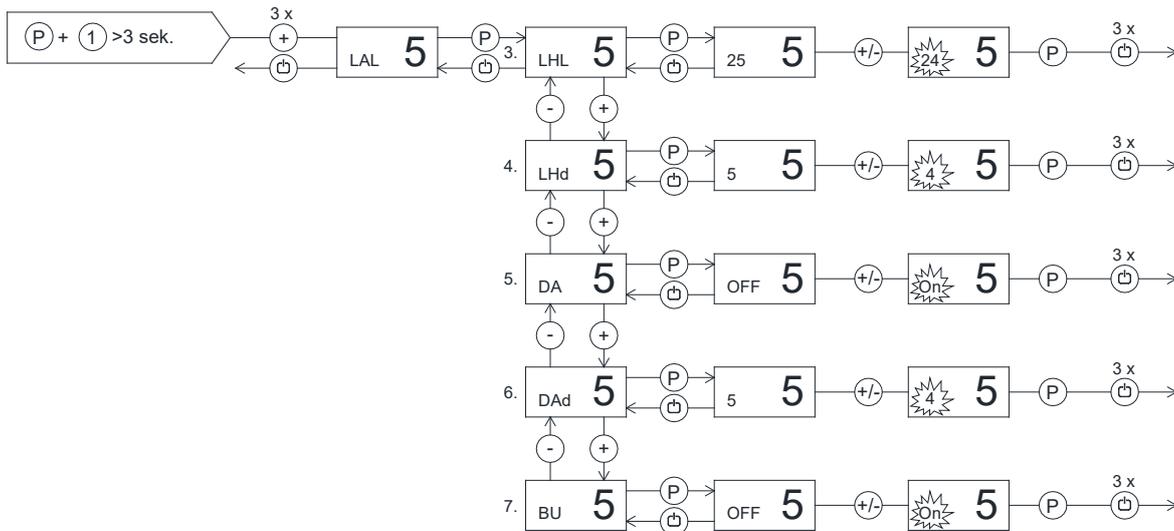

4. Local alarm setting

- Press $\text{P} + \text{1}$ for more than 3 seconds.
- Press + , until the secondary display shows **EAL**.
- Press P , select menu option **EHL**, **ELL**, **EHd**, or **ELd** with the + key.
- Press P to confirm.
- Change the value by using the + or - key.
- Press P to confirm.
- Press Esc 3 times to exit the user menu.

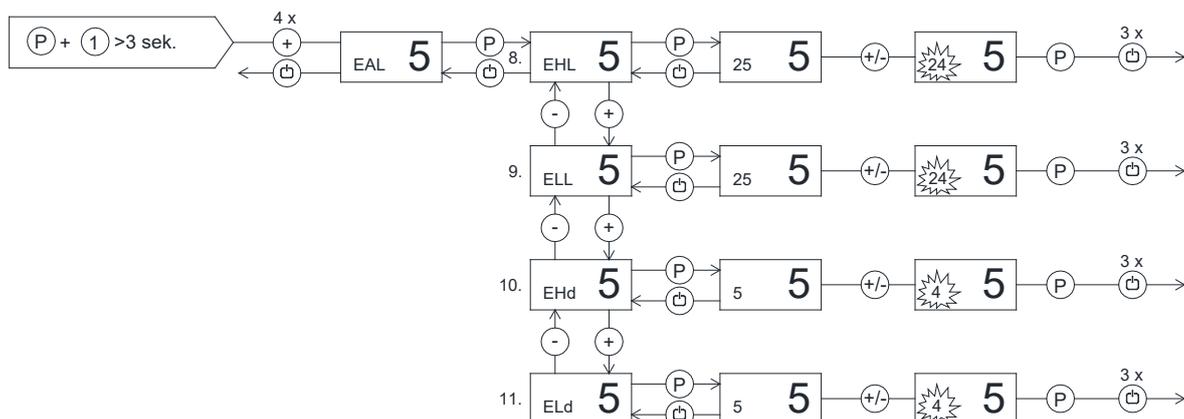


5. Temperature offset

- Press $\text{P} + \text{1}$ for more than 3 seconds.
- Press + , until the secondary display shows **CAL**.
- Press P , the secondary display shows **CA**.
- Change the value by using the + or - key.
- Press P to confirm.
- Press ESC 3 times to exit the user menu.




6. Alarm limits

- Press $\text{P} + \text{1}$ for more than 3 seconds.
- Press + , until the secondary display shows **ALL**.
- Press P , the secondary display shows **FAS**.
- Change the value by using the + or - key.
- Press P to confirm.
- Press ESC twice to exit the user menu.

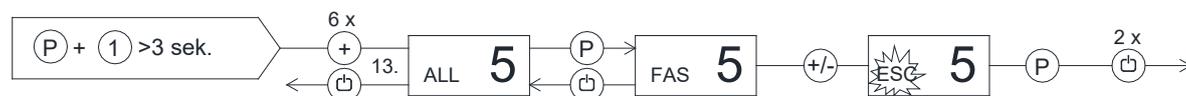

7. Number of defrosts

- Press $\text{P} + \text{1}$ for more than 3 seconds.
- Press + , until the secondary display shows **DEF**.
- Press P , the secondary display shows the current no. of defrosts (4 is default).
- Change the value by using the + or - key.
- Press P to confirm.
- Press ESC twice to exit the user menu.

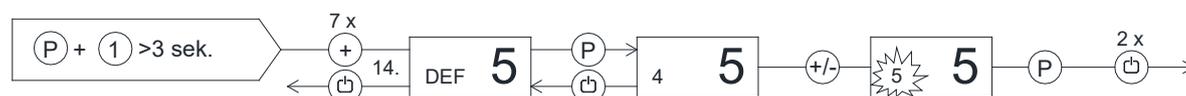

Troubleshooting

Noise:

- If abnormal noise occurs, request service assistance.
- Operating sounds from compressor, condenser fan and interior fan are normal. Some models are equipped with a drain pump.
- If sheet metal parts, front panels or panels in front of the compressor compartment are making noise, these might be open. Close the panels.

Frosting inside compartment:

- Ambient humidity too high.
- The door is opened too often.
- The door is left open for too long.
- Damaged door gasket. Check it thoroughly for damages.

Poor cooling performance:

- Ambient temperature too high.
- The door is opened too often and/or open for too long.
- The door is left open.
- Damaged door gasket.
- Temperature setting too high.
- Product too packed with foods - air inlet/outlet blocked.
- Condenser air filter is clogged.
- Warm or hot foods inside the product.
- Defrost in progress. The cabinet temperature may rise temporarily during the defrost cycle, but it will not affect the foods inside. The defrost symbol  is displayed.

Some of the foods are frozen:

- Product too packed with foods - air inlet/outlet blocked.
- Temperature setpoint too low.
- Evaporator fan might be defective.

Condensation around the door:

- Ambient humidity too high.
- The door is not closed tightly.
- Damaged door gasket.

Draining water or ice formation inside the back wall / bottom:

- Check that the drain is not stopped.
- Check and clean the water trap in the re-evaporation tray.

Too high energy consumption:

- Ambient temperature too high.
- The door is opened too often and/or open for too long.
- The door is left open.
- Damaged door gasket.
- Temperature setpoint too low.
- Product is too packed with foods - air inlet/outlet blocked.
- Condenser air filter is clogged.
- Warm or hot foods are brought into the product.
- Product is placed in direct sunlight or close to heat-emitting surfaces.
- The default settings have been changed.

Keylock

The keypad can be locked by simultaneously pushing  +  for more than 5 seconds.

 lights to indicate that the keys are locked, and a short beep sounds. Now it is not possible to use the keys for temperature setting etc.

The same code is to be used for unlocking the keypad again.

Defrosting

Defrosting is automatically performed 4 times every 24 hours. If the product is operating under severe load (frequent door opening and frequent replenishment), manual defrosting can become necessary.

Starting manual defrosting: push  +  simultaneously for more than 3 seconds.

Refrigerator: Control lamps for fan  and defrosting  are alight.

Extended refrigerator: Control lamp for defrosting  is alight, and lamp for fan  is alight depending on temperature setpoint.

Freezer: Control lamp for defrosting  is alight.

Shortly after the defrosting period has ended, the compressor starts and the compressor symbol  is alight.

It is possible to change the number of defrosts. Find further information on:
www.gram-commercial.com



Do not use sharp or pointed objects to accelerate the defrosting process.

Defrost water

Defrost water is led through a tube in the insulation, to a tray in the compressor compartment.

A re-evaporation pipe from the refrigeration system, placed in the tray, evaporates the defrost water.



It is recommended to clean the tray and corresponding parts at least once a year.
Remember to disconnect the cabinet before cleaning.
Be careful not to damage piping parts and heating element during cleaning.

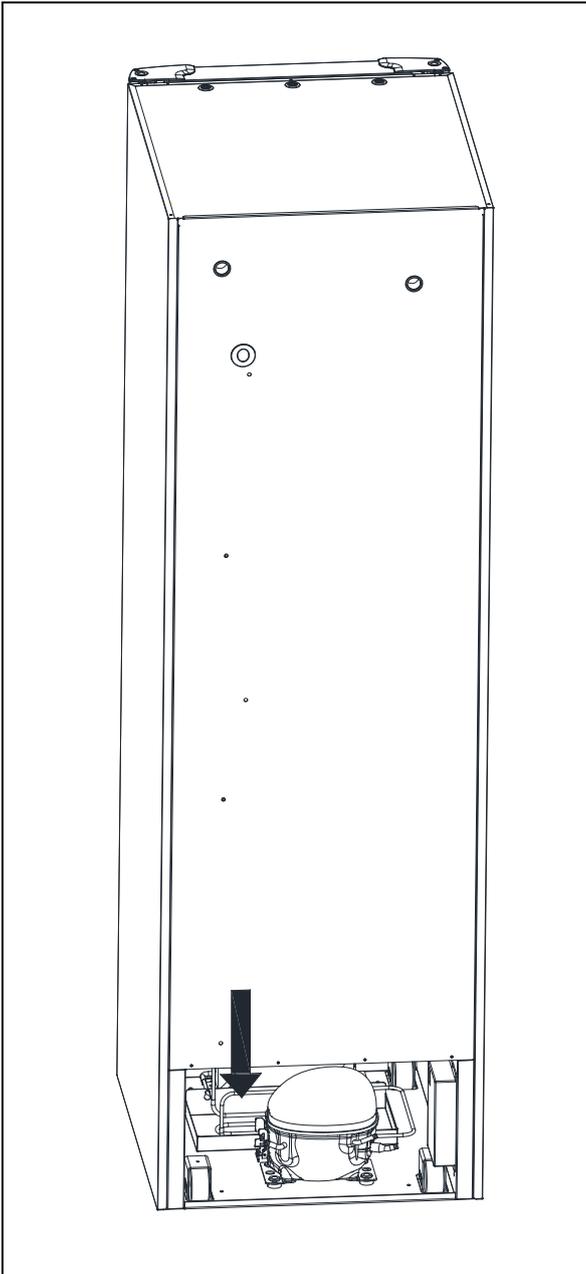


Fig. 6

Door closing mechanism

The door is equipped with a self-closing system. If the door is opened less than 90°, it will close by itself. If the door is opened more than 90°, it will stay open.

The door can be opened by using the foot pedal. This leaves both hands free when placing foodstuffs the cabinet.

Power failure

In the event of a power failure, the control remembers the temperature setting and restarts the product when power is restored. If the power failure persists for some time, the control might revert to the factory setting.

Cleaning

Insufficient cleaning will cause that the product will not work at optimum performance, or eventually it will be defective.



Before cleaning, the product should always be disconnected.



Do not flush the product with water, do not use water jet or steam hose as this may cause short-circuits in the electrical system.



Cleansing agents containing chlorine or compounds of chlorine as well as other corrosive means, **are not to be used**, as they might cause corrosion to the stainless panels of the cabinet and the evaporator.



The compressor compartment and in particular the condenser must be kept free from dust and dirt. This is best done with a vacuum cleaner and a brush.

The air filters on the condenser and the front panel can be removed and cleaned in a dishwasher at max. 50°C.



For the external maintenance – use stainless steel polish.



The product should be cleaned internally with a mild soap solution at suitable intervals and checked thoroughly before it is put into operation again.

Door gaskets

This chapter deals with the importance of a well-functioning door gasket.

Gaskets are an important part of a refrigerator/freezer. Gaskets with reduced functionality, reduces the tightness of the cabinet. Reduced tightness might cause increased humidity, internal icing, an iced up evaporator (leading to reduced refrigeration capacity), and in worst case reduced lifecycle of the cabinet.



Therefore it is important to be aware of the condition of the gasket. Regular inspection is recommended.

The gasket should be cleaned regularly with a mild soap solution.

If a gasket needs replacement, contact your supplier.

Long term storage

If the product is taken out of operation, and need to be prepared for long-term storage, clean the inside compartment, the door and door gasket thoroughly with a hot soapy damp cloth. Eventual remnants of food could create mould.

Service

The refrigerating system and the hermetically sealed compressor require no maintenance - they merely must be kept clean.

If refrigeration fails, first investigate whether the unit has been unintentionally disconnected or switched off at the socket, or whether a fuse has blown.

If it is not possible to find the cause of the refrigeration failure, please contact your dealer.

When reporting a malfunction please state the type and serial number (S/N) of the cabinet. This information is found on the name plate, see Fig. 7.

Location of the name plate:

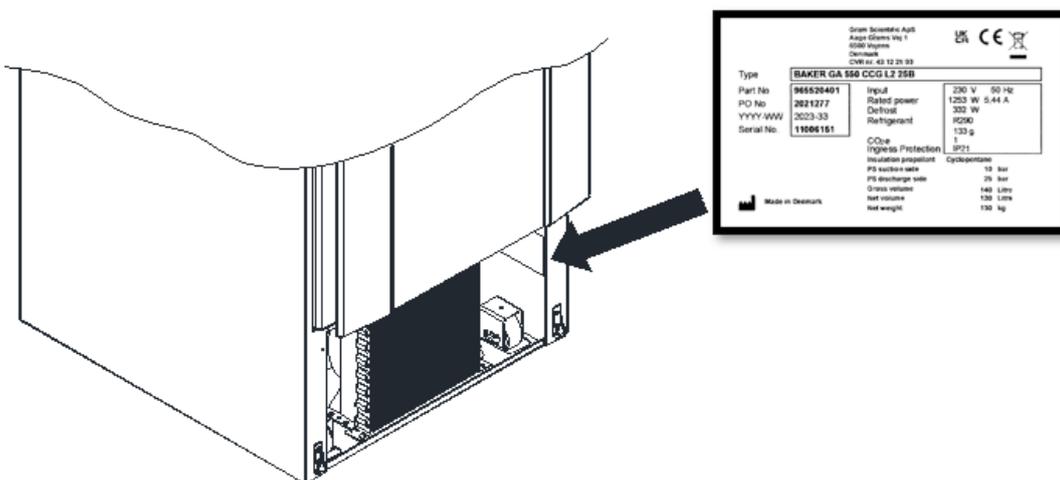


Fig.7

Disposal

Electrical and electronic equipment (EEE) contains materials, components and substances that can be dangerous and harmful to human health and the environment if the waste (WEEE) is not disposed of properly.

Products that are labelled with a “crossed-out wheelie bin” is considered electric and electronic equipment. The crossed-out wheelie bin symbolizes that waste of this type cannot be disposed of with unsorted municipal waste but must be collected separately.

Contact your local dealer when the product needs to be disposed of.


Please be aware of not damaging the refrigeration system and piping when a product is taken out of use. This will prevent the uncontrolled escape of the refrigerant from the refrigeration system.

The below only concerns the United Kingdom.

Disposal of an old cabinet is only available when we are delivering a new one at the same time. Cabinets must be fully defrosted and emptied prior to collection.

Gram recognises that our products for the catering market are considered as WEEE when they become obsolete. To ensure that Gram’s responsibilities are handled correctly and environmentally friendly, we are signed up the largest Business to Business compliance scheme in the UK – B2B Compliance <http://www.b2bcompliance.org.uk>

B2B Compliance will on our behalf deal with all areas of our responsibilities when collecting and disposing of equipment which fall under the UK WEEE regulations. B2B Compliance can be contacted on telephone number 01691 676124.

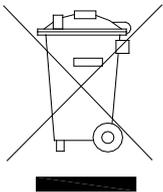

EC-Declaration of conformity

Producer Name: Gram Professional ApS. (CVR No. 43122193)
Adress: Aage Grams Vej 1, 6500 Vojens
Tel.: 0045 73 20 13 00

Product Model: R450, C450, F450, GR450
R650, C650, F650, GR650
Refrigerant: R290
Year: 2023

Directives The product is in compliance with all the essential health- and safety requirements and provisions in:

Directive for Machinery 2006/42/EF

The product is where relevant in compliance with the following other directives:

Electromagnetic Compatibility Directive – 2014/30/EU

Design of energy related products 2009/125/EF

Regulation 2015/1095

Energy labelling directive 2010/30/EU

FCM regulation 10/2011

Regulation 1935/2004

RoHS 2 - 2011/65/EU

RoHS 3 - (EU) 2015/863

Standards The following standards are used to the extent necessary to comply with the relevant directives:

DS/EN 12100:2011 - Safety of machinery -- General principles for design -- Risk assessment and risk reduction

DS/EN 60335-1:2012 – Household and similar electrical appliances. Safety. General requirements

DS/EN 60335-2-89:2010 – Household and similar electrical appliances. Safety. Particular requirements for commercial refrigerating appliances with an incorporated or remote refrigerant condensing unit or compressor

Person responsible for technical dossier Company: Gram Professional ApS. (CVR No. 43122193)
Adress: Aage Grams Vej 1
Name: John Lund

Signature Vojens 05/10-2023 R&D Manager




EC-Declaration of conformity

Producer	Name: Gram Professional ApS. (CVR No. 43122193) Address: Aage Grams Vej 1, 6500 Vojens Tel.: 0045 73 20 12 00
Product	Model: R450, C450, F450, GR450 R650, C650, F650, GR650 Refrigerant: R290 Year: 2023
Directives	<p>The product is in compliance with all the essential health- and safety requirements and provisions in:</p> <p>Directive for Machinery 2006/42/EF</p> <p>The product is where relevant in compliance with the following other directives:</p> <p>Electromagnetic Compatibility Directive – 2014/30/EU</p> <p>Design of energy related products 2009/125/EF</p> <p>Regulation 2015/1095</p> <p>FCM regulation 10/2011</p> <p>Regulation 1935/2004</p> <p>RoHS 2 - 2011/65/EU</p> <p>RoHS 3 - (EU) 2015/863</p>
Standards	<p>The following standards are used to the extent necessary to comply with the relevant directives:</p> <p>EN 12100:2011 - Safety of machinery -- General principles for design -- Risk assessment and risk reduction</p> <p>EN 60335-1:2012 – Household and similar electrical appliances. Safety. General requirements</p> <p>EN 60335-2-89:2010 – Household and similar electrical appliances. Safety. Particular requirements for commercial refrigerating appliances with an incorporated or remote refrigerant condensing unit or compressor</p>
Responsible	Company: Gram Professional ApS. (CVR No. 43122193)
Technical File	Name: R&D Manager John Lund
Signature	Vojens 05/10-2023 


UKCA-Declaration of conformity

Producer	Name: Gram Professional ApS. (CVR No. 43122193) Address: Aage Grams Vej 1, 6500 Vojens Tel.: 0045 73 20 12 00
Product	Model: R450, C450, F450, GR450 R650, C650, F650, GR650 Refrigerant: R290 Year: 2023
Directives	<p>The product is in compliance with all the essential health- and safety requirements and provisions in:</p> <p>Directive for Machinery 2006/42/EF</p> <p>The product is where relevant in compliance with the following other directives:</p> <p>Electromagnetic Compatibility Directive – 2014/30/EU</p> <p>Design of energy related products 2009/125/EF</p> <p>Regulation 2015/1095</p> <p>FCM regulation 10/2011</p> <p>Regulation 1935/2004</p> <p>RoHS 2 - 2011/65/EU</p> <p>RoHS 3 - (EU) 2015/863</p>
Standards	<p>The following standards are used to the extent necessary to comply with the relevant directives:</p> <p>EN 12100:2011 - Safety of machinery -- General principles for design -- Risk assessment and risk reduction</p> <p>EN 60335-1:2012 – Household and similar electrical appliances. Safety. General requirements</p> <p>EN 60335-2-89:2010 – Household and similar electrical appliances. Safety. Particular requirements for commercial refrigerating appliances with an incorporated or remote refrigerant condensing unit or compressor</p>
Responsible	Company: Gram Professional ApS. (CVR No. 43122193)
Technical File	Name: R&D Manager John Lund
Signature	Vojens 05/10-2023 

Wiring diagram C

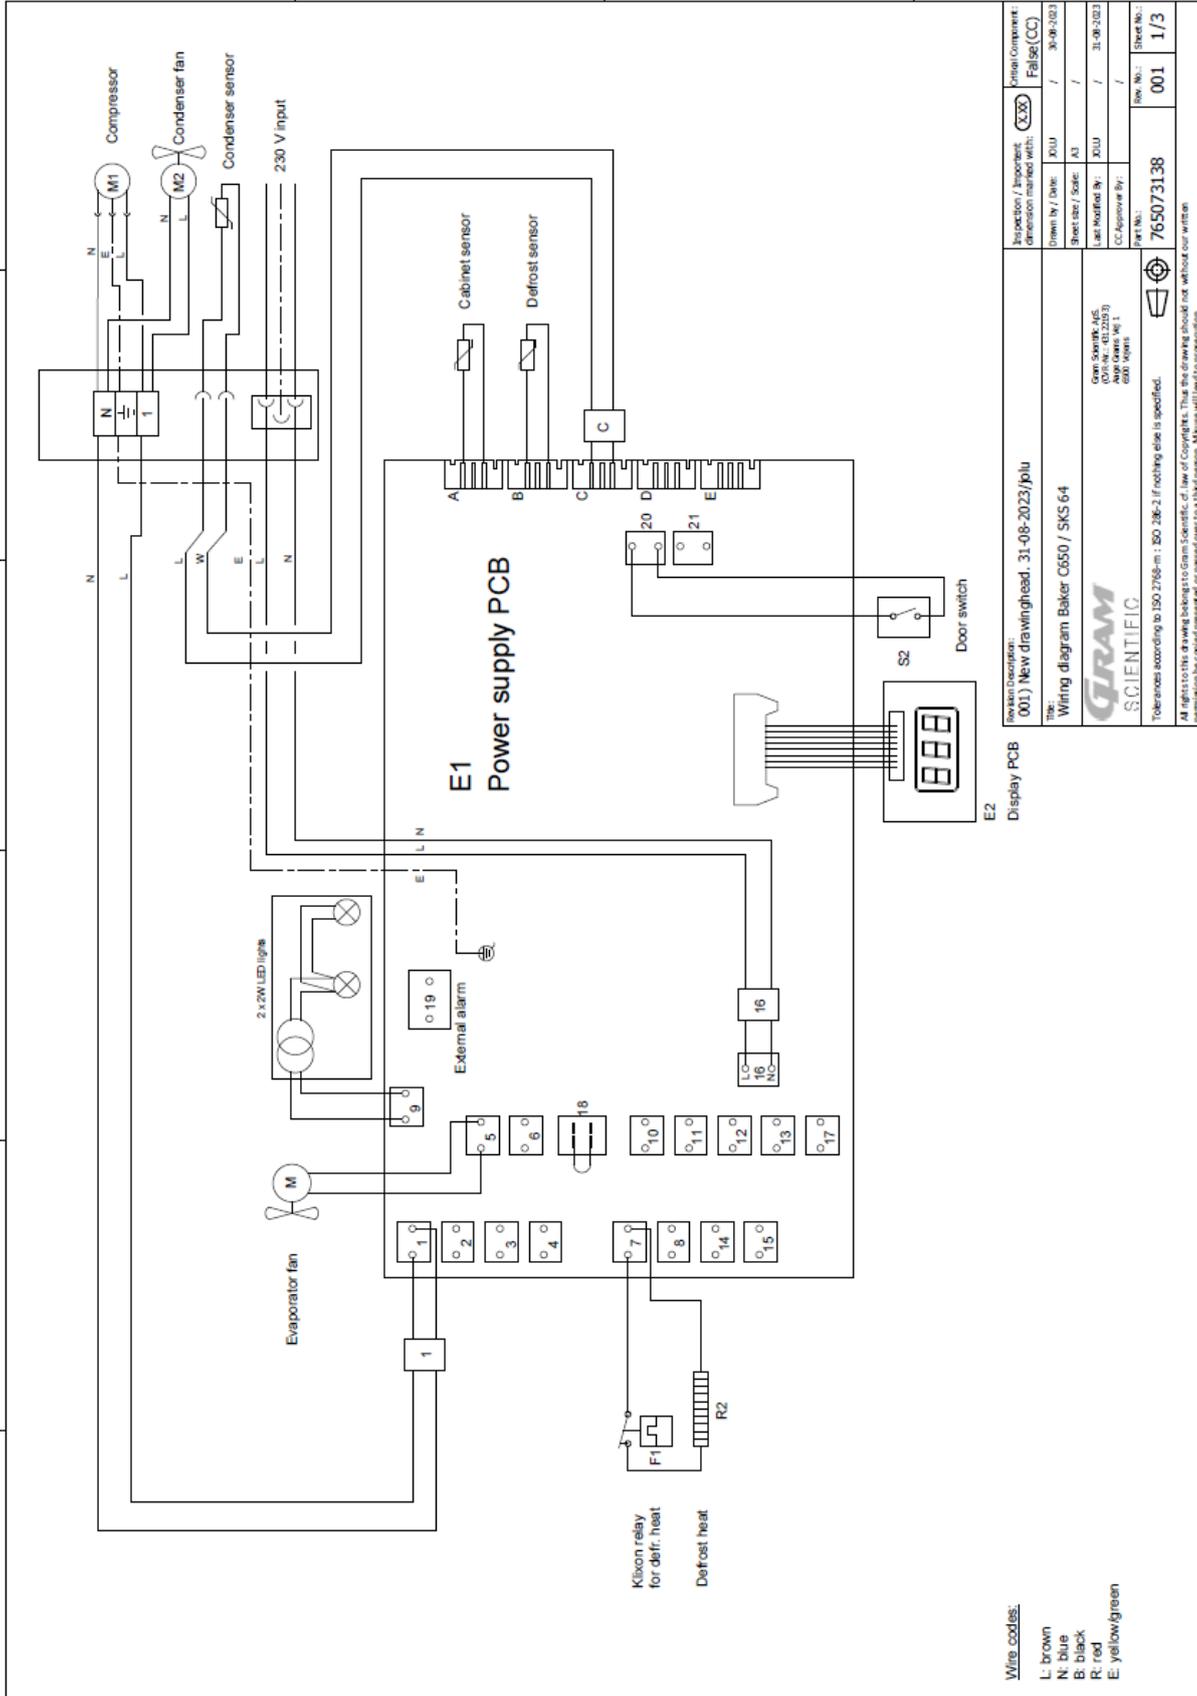


Wiring diagram F

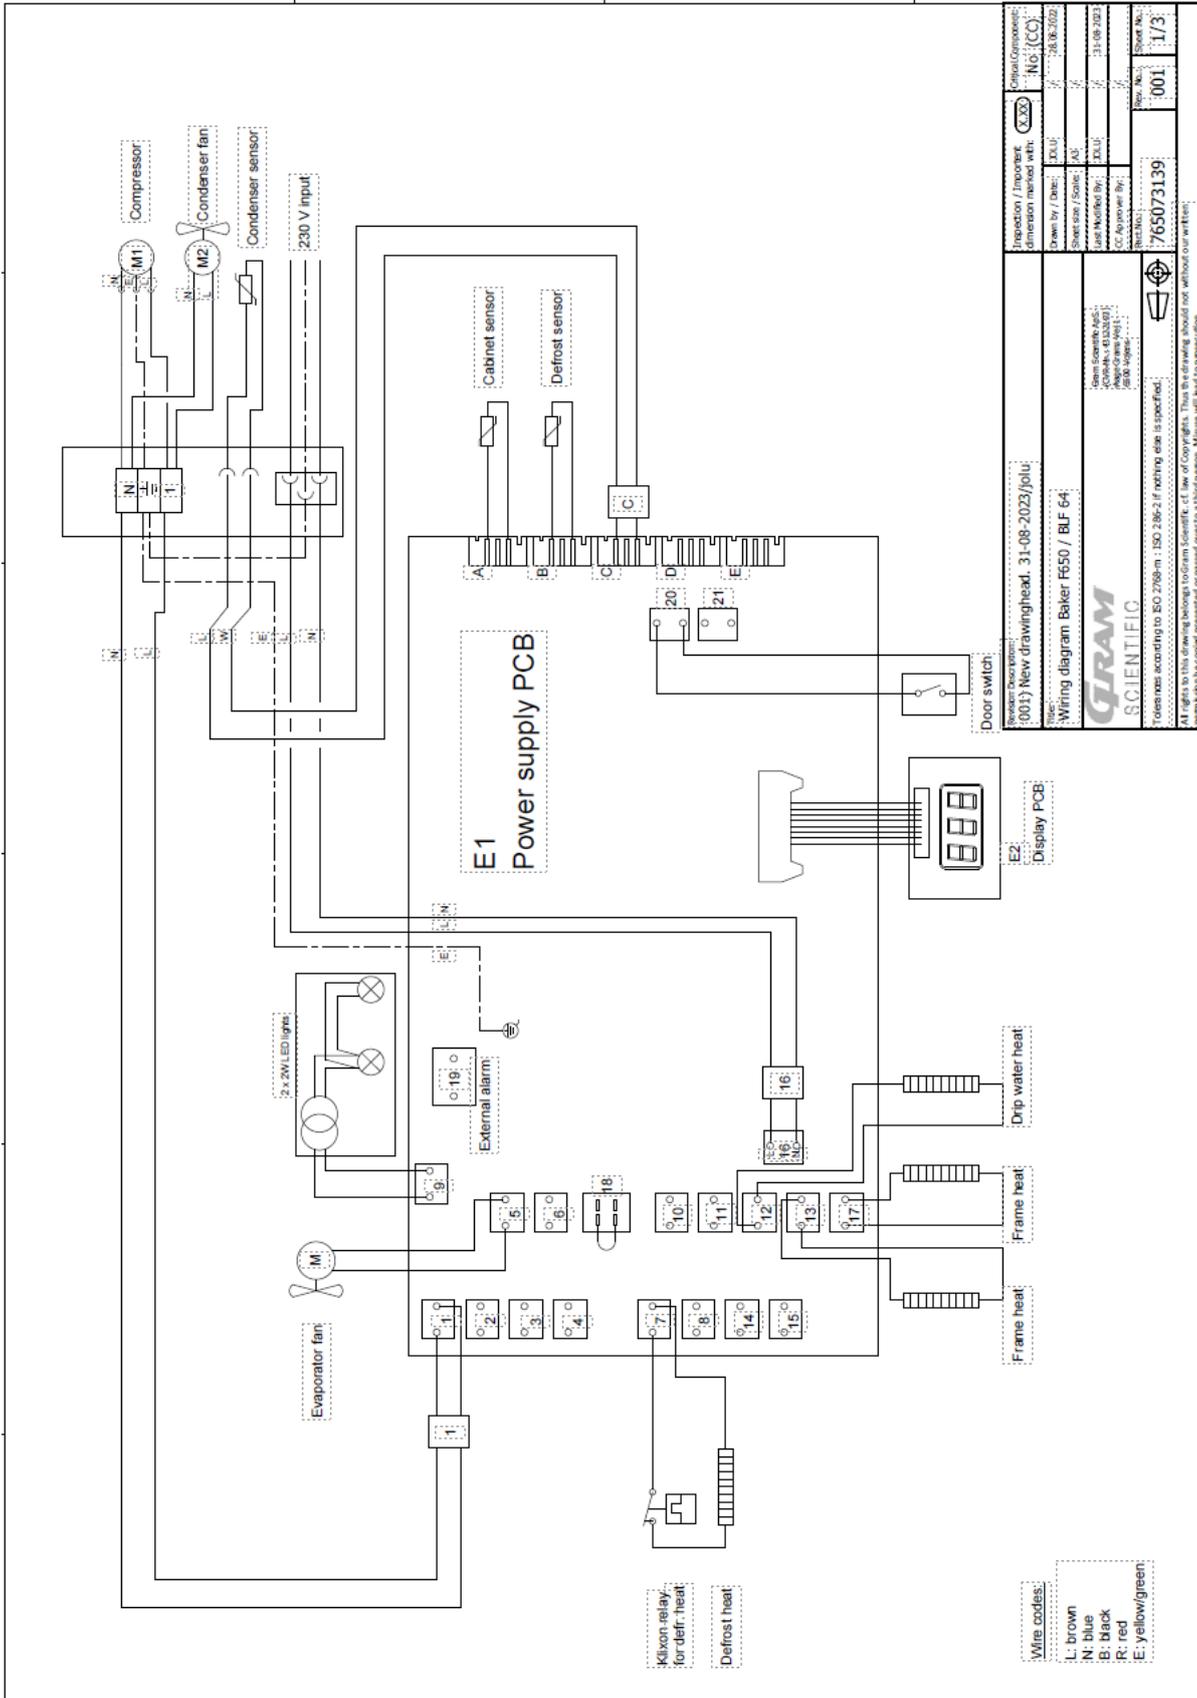


Revision description:	001: New drawinghead: 31-08-2023/joli	Original Component:	NG (CC)
Drawn by / Date:	J.L.U. / 28.08.2023	Checked by / Date:	J.L.U. / 28.08.2023
Sheet size / Scale:	A0 / 1:1	Approved by:	
Lead Modified By:	J.L.U. / 31-08-2023	Part No.:	001
Part Name:	765073139	Sheet No.:	1/3
Team Scientific Adv. (02646 - 43.03.00) www.gram-scientific.com 8008 Ingelheim		Gram Scientific 765073139 To be used according to ISO 2798-2, if nothing else is specified.	
All rights to this drawing belong to Gram Scientific, c.f. law of Copyrights. This drawing should not be used without our written consent.			

Wiring diagram GR

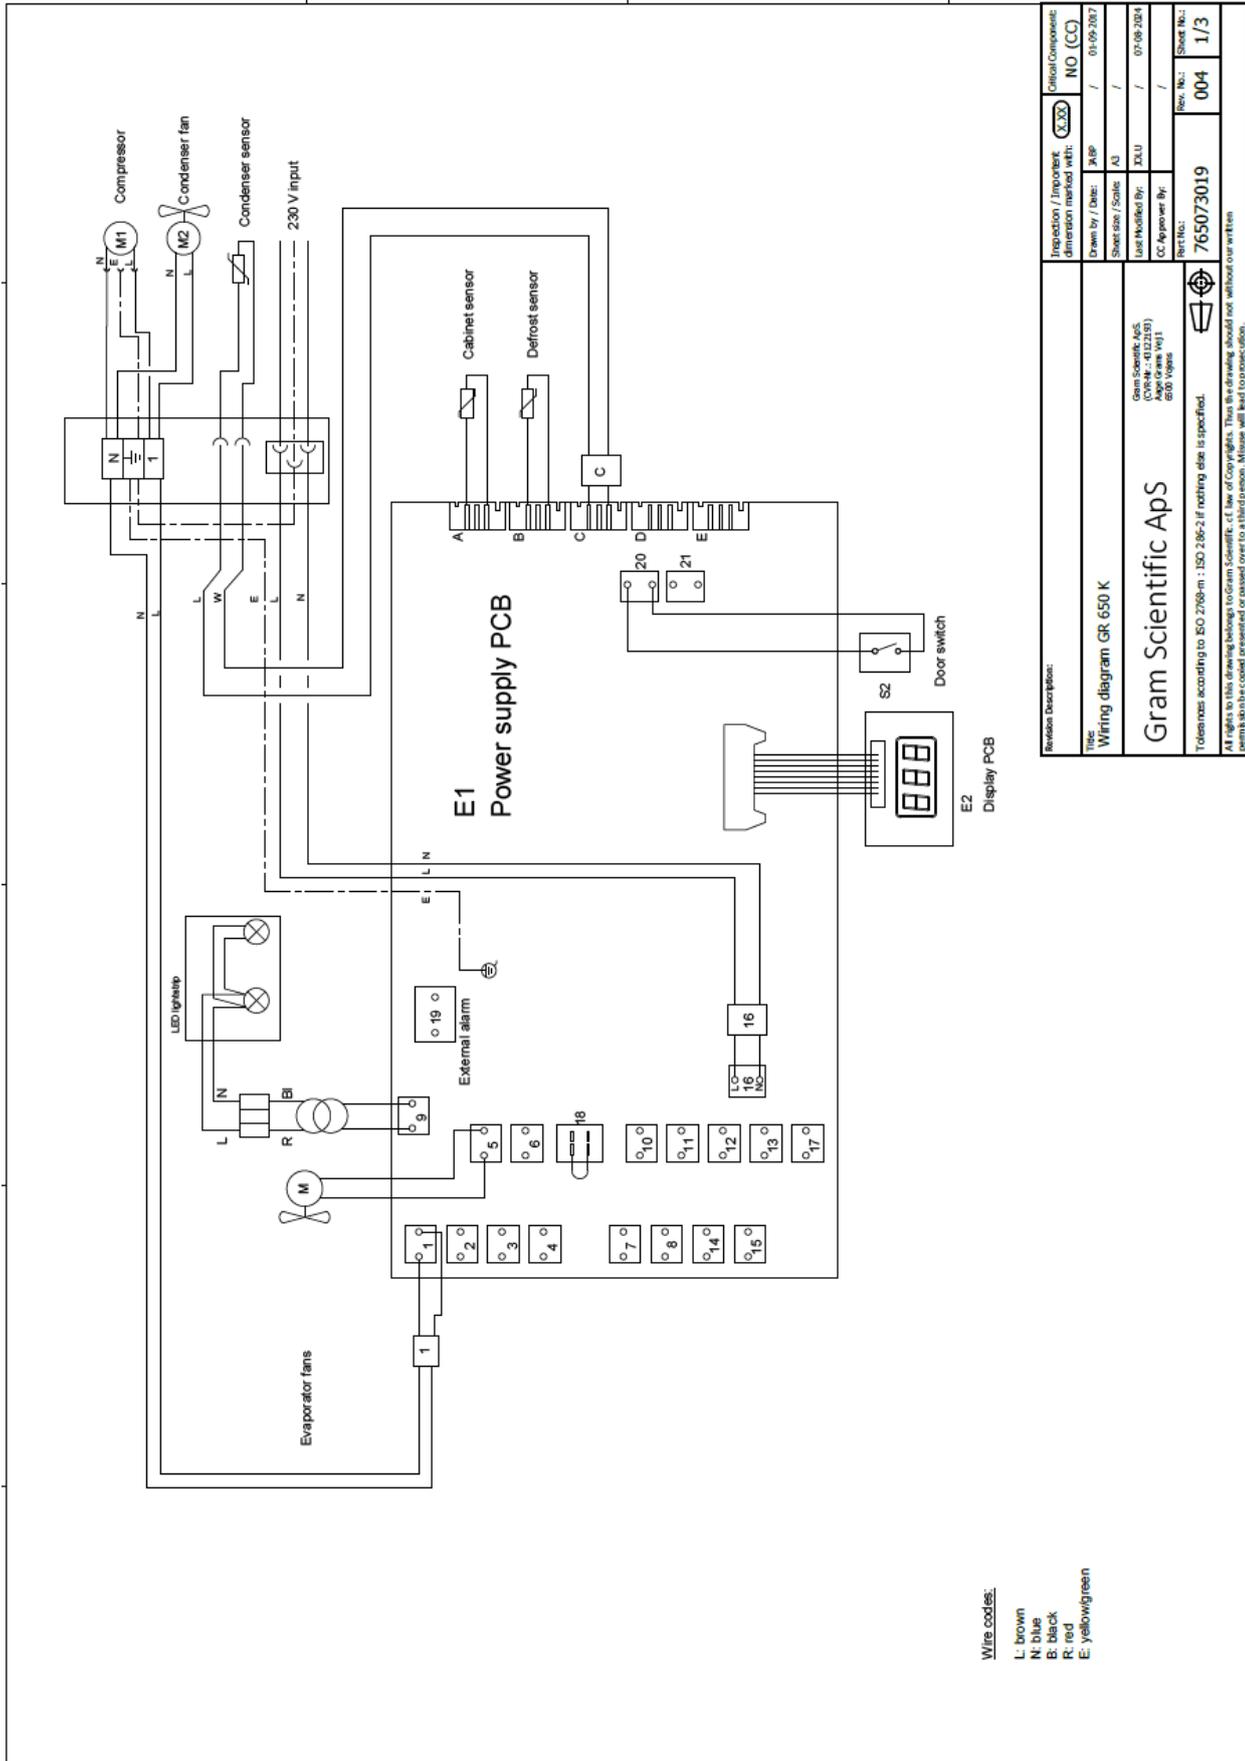

Piping diagram

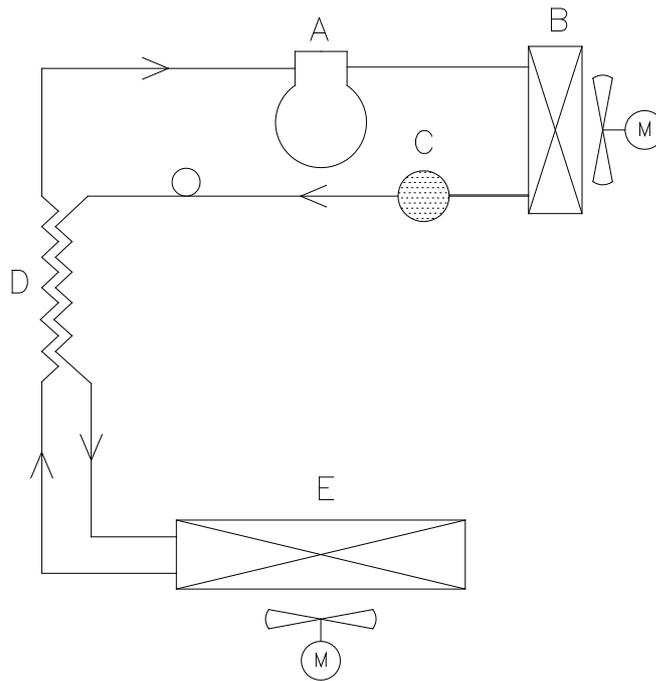

	DK	GB	D
A	Kompressor	Compressor	Kompressor
B	Kondensator	Condenser	Verflüssiger
C	Tørrefilter	Filter drier	Trockenfilter
D	Varmeudveksler	Heat exchanger	Wärmeaustauscher
E	Fordamper	Evaporator	Verdampfer

Notes
