



Assembly Instructions

Opus 800 Floor Stand
OA8950, OA8951 & OA8952

Fitting Instructions of Chargrill to Floor Stand

Please make a note of your product details for future use:

Date Purchased: _____

Model Number: _____

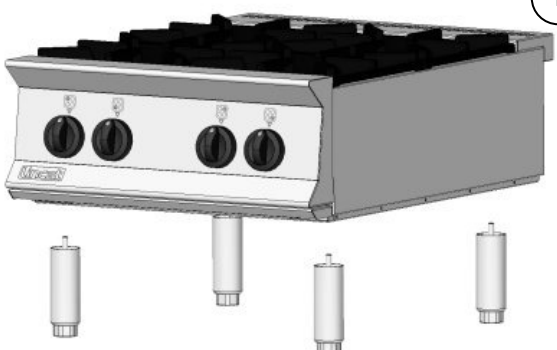
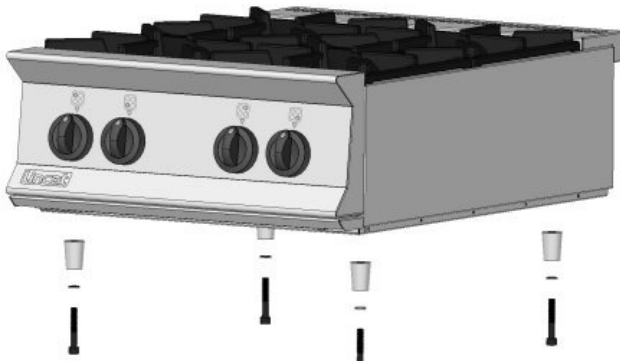
Serial Number: _____

Dealer: _____

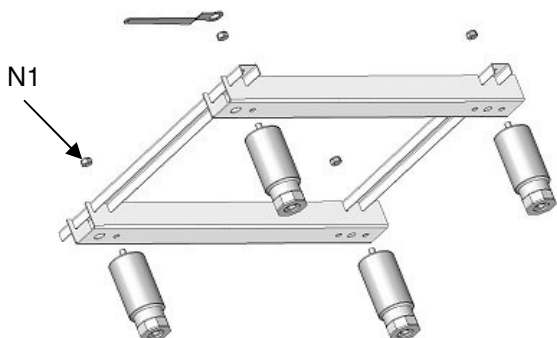
Opus **800**

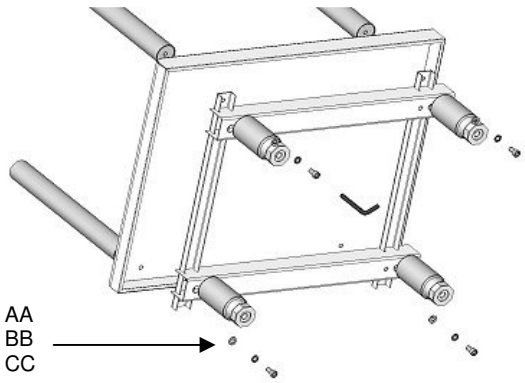
Opus 800 Floor Stand Assembly

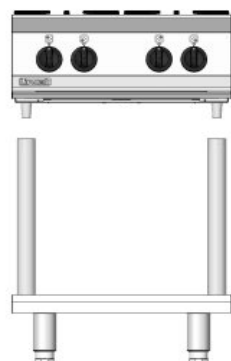
Remove all protective packaging before assembling parts

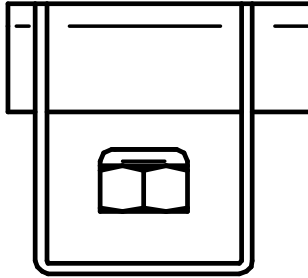
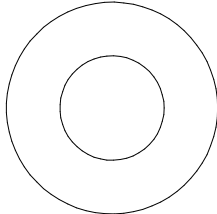
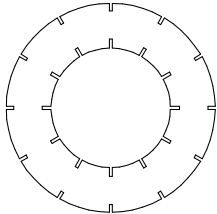
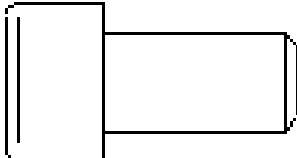
 <p>1</p>	
<p>Remove each leg from the appliance and discard</p>	<p>Fit plugs to the base of the appliance</p>

OG8003 shown for clarity

<p>2</p> <p>Secure the new adjustable feet to the lower sub-frame as detailed using nuts N1 Note the hole positions to be used</p> <p>For floor stands with castors the braked castors are fitted to the front and the plain castors are fitted to the rear in the same manner at the adjustable feet</p>	 <p>N1</p>
---	---

<p>3</p> <p>Secure the sub-frame and lower shelf to the columns as detailed Note the radius of the shelf is to the front of the appliance Note orientation of sub-frame to shelf – cross brace group of 3 holes are at rear</p>	 <p>AA BB CC</p>
---	--

<p>4</p> <p>Lower the appliance onto the columns (OG8003 shown for clarity)</p>	
---	---

<p>N1 – M10 self locking nut placed inside of channel as in instruction 2</p>	
<p>AA – M10 Flat washer as in instruction 3</p>	
<p>BB – M10 Shake proof washer as in instruction 3</p>	
<p>CC - M10 Cap screw as in instruction 3</p>	

Parts List		
Description	OA8950 & OA8951 QTY	OA8952 QTY
Adjustable leg	4	6
Swivel Castors (where applicable) Option	4	N/A
Tubular column	4	6
Lower shelf	1	1
Sub- frame	1	1
M10 Shake proof washers	8	12
M10 Flat washers	4	6
M10 Self locking nut	4	6
M10 Cap screw - short	4	6
M10 Cap screw - long	4	6
Tapered Plugs	4	6
Spanner	1	1
Allen key	1	1

Assembly of Appliance to Floor Stand

Remove all protective coating from appliance and floor stand shelf

Remove splash-back, branding grids, radiant caps and drawer(s) to reduce lifting weight

Note: Manual handling assessment should be observed

Remove the adjustable feet from the appliance

Secure the tapered plugs to the base of the appliance

Fit the new adjustable feet to the sub-frame

Using the cap screws and washers provided screw the appliance through the lower shelf to the columns, securing fully with the allen key provided.

Place the appliance onto the assembled floor stand

Replace the radiant caps, splash back, branding grids and drawer.

Adjust the floor stand legs to level the appliance

