


K40

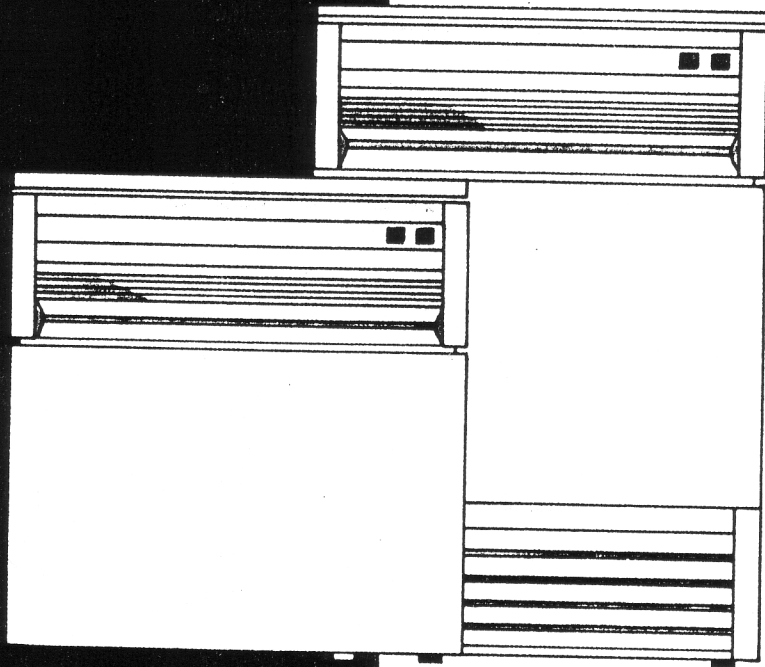

SERVICE 851202415090
309630048637

ENVIRONMENTAL HINTS

Packing

Do not throw the packing into the garbage: first sort out the different materials (i.e.: steel, cardboard, polystyrene) following local regulations.

Conformity declaration

This appliance incorporates parts intended to come into contact with foodstuffs in compliance with EEC directive 89/109/CEE.

INSTALLATION

In the ice bin of this appliance you will find the following accessories: instructions for use, an envelope containing an ice pallet, a funnel with hose for periodical cleaning, 4 adjustable feet and washers.

- Fit the feet into the receptacles, proceeding as follows:
- Screw the 4 threaded supports on the bottom front and screw the adjustable feet on the supports (**Fig. 1**).
- Place the ice maker on a stable, level surface and adjust the feet if necessary.
- Do not install the unit close to a heat source, in a niche, or leaning against a wall on one side; air must be free to circulate through the ventilation grids (vicinity not less than 6 cm).
- In rooms with an ambient temperature lower than +10°C or higher than +32°C, ice cubes production is not guaranteed. However, at ambient temperatures from +16°C to +32°C, ice cubes production can be guaranteed if a tropicalized unit is installed.

ELECTRICAL CONNECTION

Check that the voltage on the rating plate corresponds to the voltage in your home (**Fig. 2**).

Connect the appliance to the mains and ensure that it is working correctly before storing food.

The earthing of this appliance is compulsory by law.


- The electrical and plumbing connection must be carried out by a qualified technician, in compliance with local safety regulations. The manufacturer will accept no liability for damage to persons or objects arising from the non-observance of this requirement.

ELECTRICAL INFORMATION

"WARNING - THIS APPLIANCE MUST BE EARTHED"
(For Great Britain only)

Fuse replacement.

If the mains lead of this appliance is fitted with a BS 1363A 13 amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:

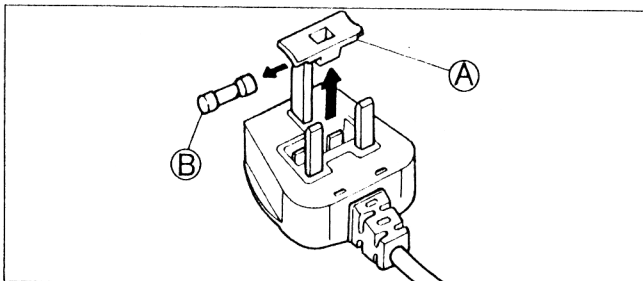

1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

IMPORTANT: The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug. Replacement fuse covers are available from your local electrical store.

CONNECTION TO A REWIREABLE PLUG


If the fitted plug is not suitable for your socket outlet, then it should be cut off and disposed of in order to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere. A suitable alternative plug should then be fitted to the cable. The wires in this mains lead are coloured in accordance with the following code;

BLUE - "NEUTRAL" ("N")

BROWN - "LIVE" ("L")

GREEN AND YELLOW - "EARTH" ("E")

1. The GREEN AND YELLOW wire must be connected to the terminal in the plug which is marked with the letter "E" or by the Earth symbol \perp or coloured green or green and yellow.
2. The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured black.
3. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured red.

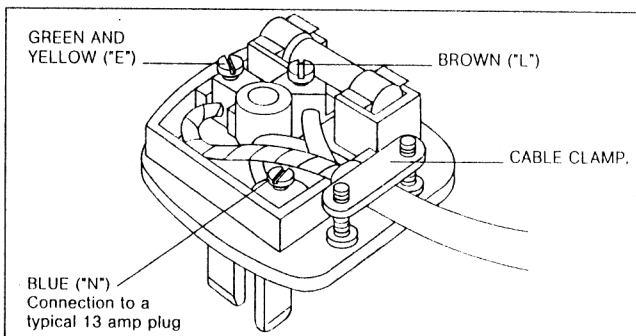

For the Republic of Ireland only

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type. In this case, the wire which is coloured GREEN AND YELLOW must be connected to the EARTH contact, and the other two wires to the two pins, irrespective of colour. The supply to the socket must be fitted with a 16 amp fuse.

PLUMBING CONNECTION

- Connect the water and drain hoses through the rear wall of the unit (**Fig. 3**).
- Connect the water inlet hose to a cold water tap, having a 3/4" BSP thread. The outlet hose is to be placed into a drain, preferably equipped with an S - trap to prevent any odour back-up. The drain must be at a lower level than the outlet of the hose from the appliance.
- The outlet hose should be inclined at least 10 degrees so the water can drain naturally.
- If the water is very hard (rich in calcium and magnesium salts), insert a softener-filter on the inlet connection between the tap and the hose. This filter brings the water hardness to a normal value.
- Regenerate or replace the water-softener filter (according to the type) when the ice cubes are not completely transparent or production time is increased. This appliance conforms to EEC directive N° 82/499/EEC on radiointerference.

CONTROLS

Fig. 2:

A) Water drain connection

Fig. 6:

A) Grid fuse

B) Ice-cubes level thermostat

C) Ice-cubes thickness thermostat

D) Water inlet connection

Fig. 10:

A) On/off switch (green)

B) Wash switch (blue)

OPERATION

Ice maker operation is completely automatic. Ice is formed

by progressive refrigeration of a film of water which flows on a refrigerated inclined plate (Fig. 4). When the ice film attains the required thickness, a thermostat automatically releases the ice sheet which slides on to a cross-hatched network of low voltage wire (Fig. 5). This network melts the ice, cutting the sheet into cubes. This continues until the ice cubes bin is completely filled. A thermostat then automatically stops the ice cubes production. When the level of the ice cubes in the bin decreases, because of melting or use, the thermostat will automatically re-start the appliance. The water formed by melting ice cubes accumulates in the bottom of the bin and is discharged through a drain hole.

STARTING UP

Before using your ice maker for the first time, clean it thoroughly. Follow the instructions in the "Maintenance" section of this booklet.

- Plug the appliance into the wall socket.
- Turn on the water supply.
- Press the green switch.

ADJUSTING THE ICE CUBE THICKNESS

Ice cube thickness is pre-set at the factory. The thickness can be increased or decreased by turning the thermostat knob with a screwdriver. Turning the knob clockwise increases the thickness, turning it anti-clockwise decreases the thickness (Fig. 6). By means of the thermostat knob it is possible to adjust the variations due to the ambient temperature, when it is higher than 32°C and lower than 10°C.

– Never turn the thermostat knob outside the field indicated on the dial.

– Adjust the ice thickness thermostat only after a few hours operation and only after the bin has half-filled with ice cubes.

– Non-observance of the thermostat setting rule could result in damage to the ice maker, especially if the thermostat knob is left on a low setting in high room temperature.

In this case the ice could become so thick that the ice will not be cut. On the other hand, the ice thickness could be reduced to a minimum or none at all.

ADJUSTING THE ICE CUBES LEVEL

The thermostat is pre-set at the factory.

However, if the ambient temperature is higher than +32°C it is necessary to adjust the thermostat knob to position ☼, if the ambient temperature is lower than +16°C, it will be necessary to adjust the thermostat knob to position ☼ (Fig. 7).

MAINTENANCE

Always pull out the plug and turn off the water before doing any work (cleaning or repair) on the unit. Periodically clean the appliance (every 6 months) and the water system, to keep the appliance operating at maximum efficiency and to ensure the best ice cubes quality. When the ice cubes production time is increased, and the cubes start to lose their transparency, it is time to clean the water system. How often you clean this system depends on the hardness of the water. During freezing, the calcium in the water is deposited on the refrigerated plate. These deposits act as insulation, decreasing the efficiency of the appliance's performance. To clean the water system, proceed as follows:

- 1) Turn off the water and switch off the appliance by pressing the green switch.
- 2) Open the ice bin and remove all the cubes.
- 3) Remove the plug or the drain hose (if provided) inside the bin (Fig. 8) to drain the water from the bin.
- 4) Pour 1.5 l of water mixed with 1/10 litre of vinegar or 4 tablespoonfuls of lemon juice or citric acid into the bin using the funnel provided (Fig. 9).
- 5) Press the two switches (green and blue) and operate the appliance for 40 minutes approx.
- 6) Release the two switches (green and blue) and drain this water mixture into the liner by inverting the position of the funnel.
- 7) Pour 1.5 l water and 2 tablespoonful of baking soda into

the bin, press the two switches (green and blue) and operate the appliance for 5 minutes approx.

8) Drain the water and repeat the operation, by rinsing with 1.5 l of water and leaving the appliance operating for 5 minutes.

9) Remove the funnel with the hose after the water drain and replace the plug or the drain hose.

10) Clean the inside of the bin reservoir and the door gasket with a soft cloth dampened in a solution of warm water and baking soda.

11) Press the green switch and turn the water on: the ice maker will begin to work again.

– We recommend you ask the intervention of a qualified technician to clean periodically (once a year) the condenser and the motor compartment.

Important: To prevent odour contamination of the ice cubes, do not put foods or beverages into the ice cube bin. When not in use for long periods of time (holidays, etc.) turn off the water, pull out the plug, remove all ice cubes, drain the water tank by removing the plug or the drain hose (Fig. 8), and leave the door open to prevent the formation of odours.

SERVICE

If the ice maker does not work properly or does not work at all, before calling for service, carry out the following checks (which are also listed on the sticker at the back of the appliance Fig. 2). This is very important as travel expenses and labour **costs will be charged to you** if your call turns out to be unjustified. **If the compressor does not work and the ice bin is empty**, check that:

- There is power at the outlet.
 - the plug is connected correctly to the socket
 - one of the power cord wires is not disconnected.
- The wash switch is pressed.

If the compressor works and the ice bin is empty, check that:

- the water is turned on.
- the thermostat is set according to the instructions given.

If the ice cubes are too thick or too thin, check that:

- the thermostat knobs are positioned according to instructions.

If ice cubes formation takes too long.

– It is possible that a calcium deposit has formed on the refrigerated plate. To remove this deposit, clean the water system (as described in the "Maintenance" section of this booklet). If the calcium builds up too rapidly, install a water softener filter: if the water softener filter is already installed, it is necessary to replace or to regenerate it.

If there is no water in the ice bin, check that:

- the drain hose is well connected
- the drain hose is not clogged or kinked.

If the ice cubes are not transparent, check that:











- the water is not too hard. If it is, install the water softener filter. If already installed, regenerate or replace it.

If after the above checks, the unit is still not working properly, contact your dealer or Service. Describe the nature of the fault and give the model of the unit. The model number is printed on the rating plate at the back of the appliance (Fig. 2).

REPLACEMENT OF THE SUPPLY CORD

If the replacement of the supply cord is required, please buy a similar supply cord by one of our service centres. How to operate:

- 1) Disconnect the supply cord from the mains supply.
- 2) Remove the top. Unscrew the two rear screws and slide the top frontwards to disengage it from the front seats.
- 3) Release the supply cord from the clamp Ⓢ (Fig. 2).
- 4) Disconnect the electrical connections from the front control panel and remove the supply cord.
- 5) Mount the new supply cord and connect it electrically (**Note:** yellow-green opposite symbol ⊥). Position it between the water pump and the exterior wall, and fix it by means of clamp Ⓢ (Fig. 2). Please make sure that the length of the supply cord inside the appliance is sufficient.
- 6) Remount the top and fix it to the rear wall.

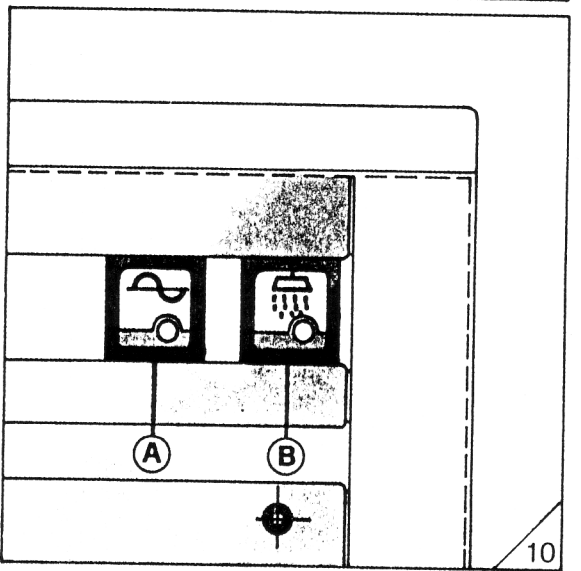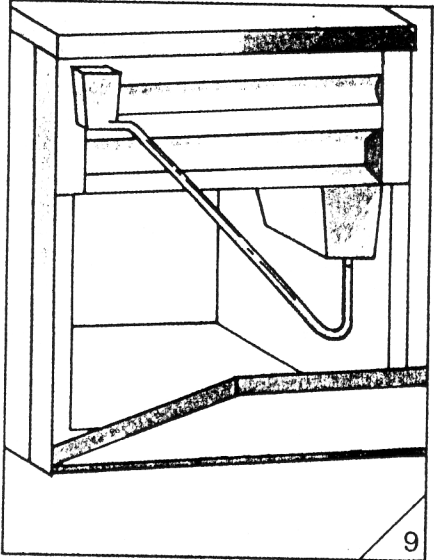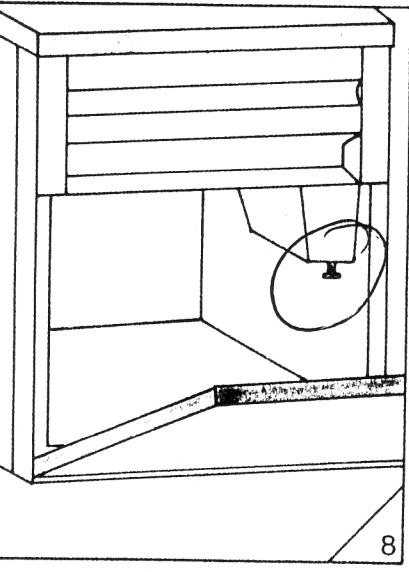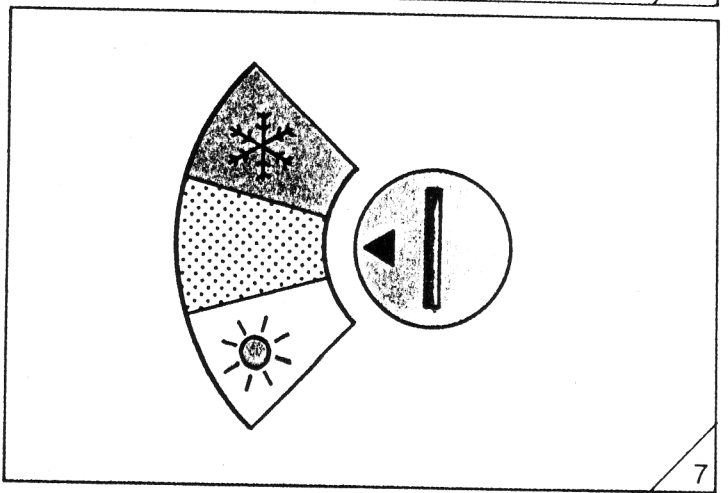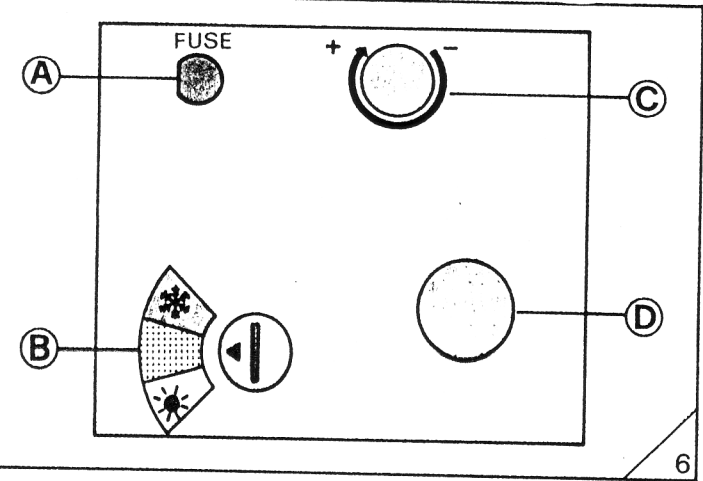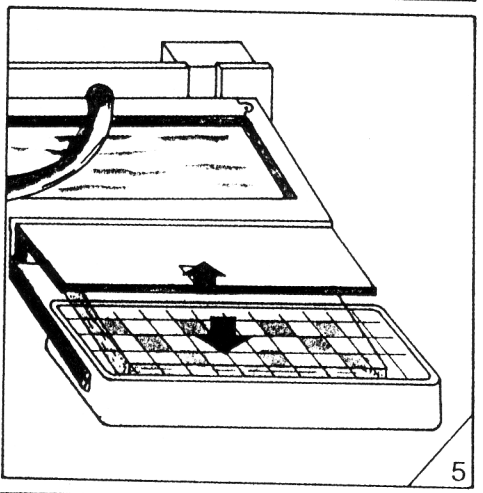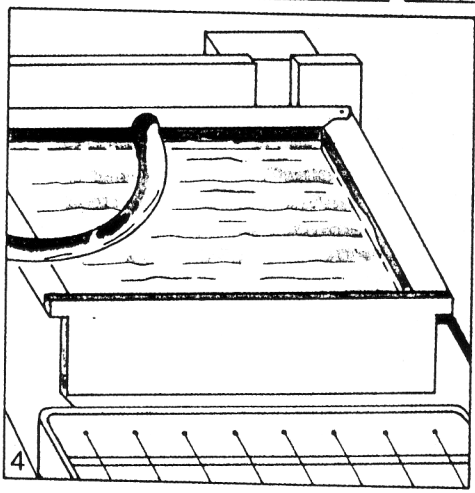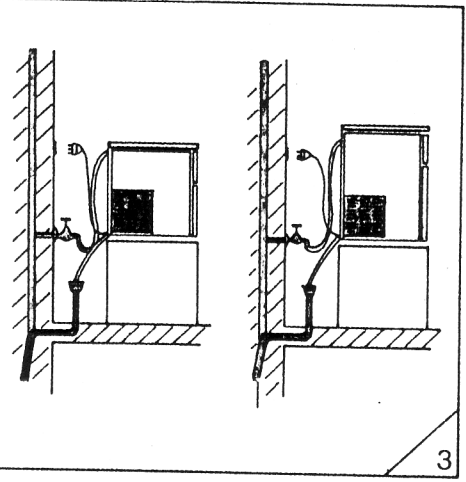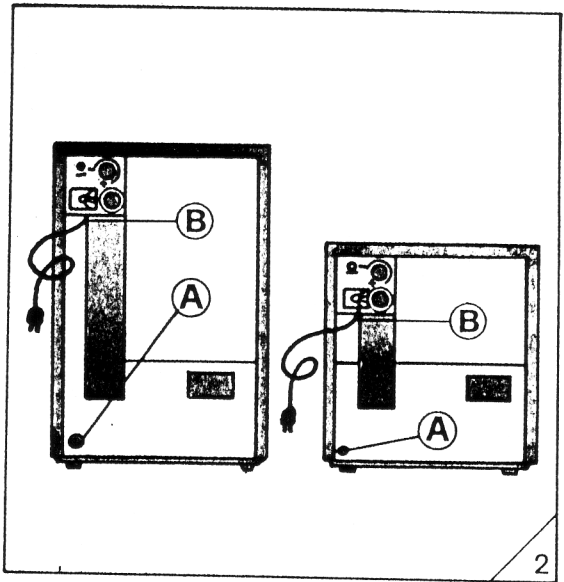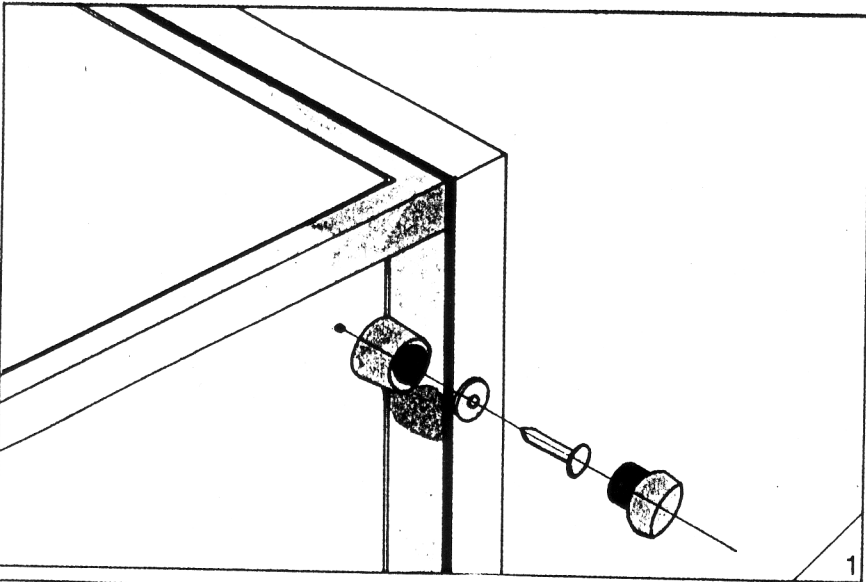

PHILIPS K20/K40 ICEMAKER - FAULT FINDING GUIDE

FAULT

POSSIBLE CAUSE

Machine doesn't run when plugged in.

Mains fuse blown.
On/Off switch faulty.
Clean switch faulty.
Bin thermostat open circuit
(could be due to low ambient temperature
or may need adjusting by turning clockwise)

Evaporator Freezes but no water
running over evaporator.

Mains water tap turned off.
Water inlet valve faulty.
Water pump impeller cover loose.
Water pump seized/open circuit.

Ice bin full of water with no or little ice
and water leaks from front of machine.

Drain hose kinked or blocked.
Drain hole in ice bin blocked.
Dirty evaporator holding ice back when water pump
restarts.
Incorrectly installed drains.
Water pressure too high.
Water inlet valve restrictor blown out.

Machine doesn't make ice fast enough.

Condenser blocked.
Water inlet valve leaking through.
Short of refrigerant gas.
Too low ambient temperature.
Too high ambient temperature.
(Lack of adequate ventilation)
Dirty evaporator/spray arm.

Ice too thick.

Ice thickness thermostat set too high.
Condenser blocked.
Inadequate ventilation round machine.
Dirty evaporator.
Ice thickness thermostat faulty.
Hot gas coil open circuit.
Fan motor faulty.

** K40 Model Only

**Microswitch activator above cuttergrid sticking
**Cutter grid faulty.

Ice too thin.

Dirty evaporator/spray arm.
Blocked water inlet valve filter.
Too low ambient temperature.
Splash guard sticking.
Drain blocked or slow.
Water pressure too high.
Water inlet valve restrictor blown out.
Short of refrigerant gas.

Water pours into ice bin.

Rubber bung missing from water tank.
Evaporator dirty.
Cutter grid out of position.
Water inlet valve restrictor blown out.
Cutter grid faulty.
Cutter grid transformer fuse blown.

Fault

Ice sticks together in ice bin and can be white in colour.

**K40 model only:

Machine will not go into defrost when ice thickness thermostat is turned fully anti clockwise.

Condenser fan turns slowly on defrost.

Machine uses too much water

Machine doesn't defrost long enough.

Possible Cause

Dirty evaporator/spray arm.
Too low ambient temperature.
Water is too hard (fit water softener)
**Evaporator base flap missing.
Hot gas valve seeping through (causing slush to freeze on evaporator)

Hot gas coil open circuit.
**Microswitch activator above cutter grid sticking.

Fan motor windings resistance incorrect, should be
 $\approx 261 \Omega$

Hot gas coil resistance incorrect, should be
 $\approx 1.33K \Omega$

Water inlet valve resistance incorrect, should be
 $\approx 4.07K \Omega$

Water inlet valve restrictor blown out.

Water inlet valve faulty.

Incorrect water inlet valve fitted.

Too low ambient temperature.

Dirty evaporator.

Too low ambient temperature.

Dirty evaporator.

Short of refrigerant gas.

Ice thickness thermostat incorrectly fitted, e.g., cover missing from capillary.

Ice thickness thermostat faulty.