


Ready

Blast chillers

Friulinox

Friulinox

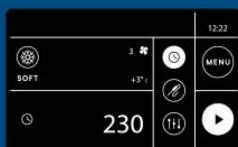

Ready

Intuitive control, great freedom


Ready blast chillers allow food to be blast chilled quickly and with precise temperature control, thanks to the needle probe and its functional and legible display.

Smart interface

Smart and essential, the 5" touch screen, placed at your fingertips and at eye level on the door of the blast chiller, offers immediate visibility and interaction with the functions, represented by intuitive and easy-to-read symbols.



Video Tutorial

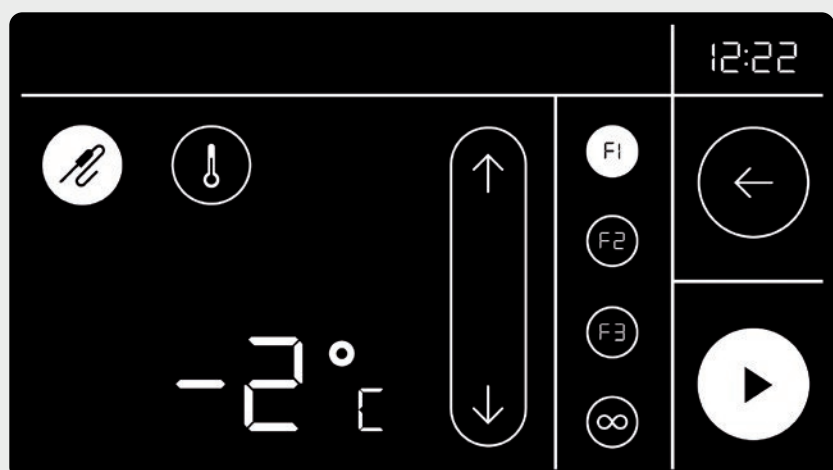


Ready to go

With the Ready family of blast chillers, you immediately have available the optimal technologies and solutions to meet every request, optimize inventory and purchases, reduce waste, and make your work easier, gaining time and opening up new opportunities for you.

A tailor-made proposal for every space and need, with optimal ease and versatility of use even with non-specialized personnel, without sacrificing quality and performance. A range of reliable, versatile products with guaranteed performance, even in the most demanding situations.

Advanced control

With a special kit, which can also be purchased at a later time, you can add the web connectivity feature that allows you to monitor operating data: to have everything under control, at any time and wherever you are.

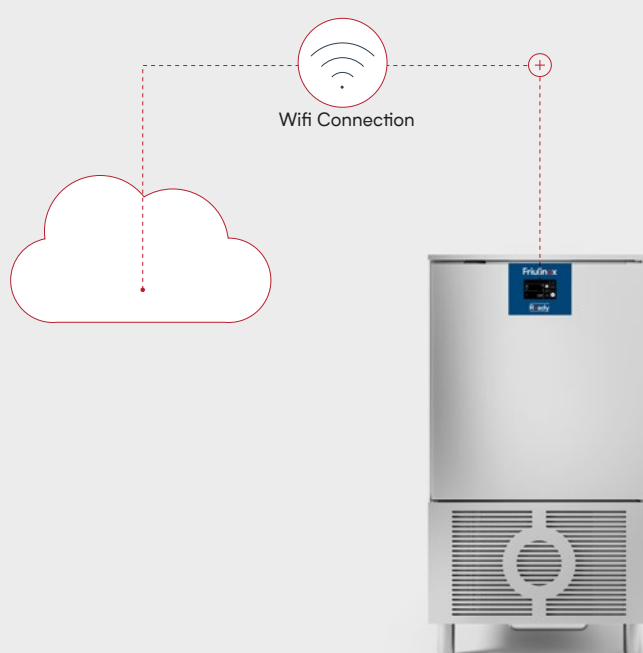


Express your potential

Choose the ideal size for your space and business: from 5 to 24 trays, with performance tested in the toughest conditions of use, multi-step rack suitable for trays of all shapes and uniform airflow to cool all the food, regardless of their height.

All the functions you need

Choose the sets of temperature already programmed or customize them depending on your needs, in all parameters: from the temperature of the cell to the duration of the cycle.

With Ready blast chillers, you have the possibility to create the blast chilling processes of your recipes from scratch, with maximum ease and versatility. Save up to 99 programs to meet your most frequent use needs, in all sectors: gastronomy, pastry, baking, ice cream making.

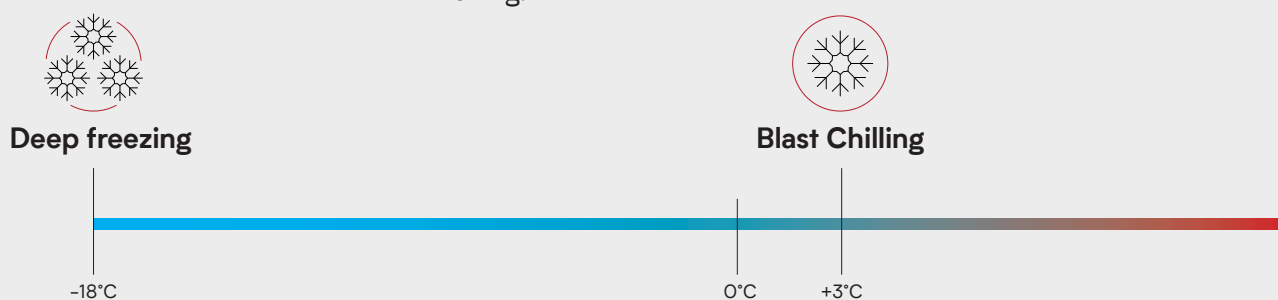

Continuous cycle

Do you open and close the blaster often to load additional trays? With the continuous cycle you work at maximum power without ever giving up performance and having maximum yield.



Pre-cooling

With this function you can optimize the room temperature before starting a blast chilling or freezing cycle, to get the best results with lower consumption.



Defrosting

The humidity of the air is the cause of the frost that settles on the evaporator: the defrosting function removes it to always guarantee the best performance and optimal efficiency of the machine.



The range

Ready Super High Performance



+3°C | -40°C

Models	Tray capacity GN1/1 - EN1	External dimensions (W x D x H mm)	Refrigerant Gas	Positive blast chilling capacity in 90' +90°C > +3°C (Kg)	Negative blast chilling capacity in 240' +90°C > -18°C (Kg)	Electric power (W)	Power absorption (A)	Power supply * (V/Ph/Hz)
RBS-050-SA-R290	5	790 x 720 x 900	R290	30	20	1114	6,49	220-240/1N~/50
RBS-051-SA-R290	5	790 x 820 x 900	R290	30	20	1405	8,29	220-240/1N~/50
RBS-051-SR	5	790 x 820 x 900	R452A/R448A/R449A	30	20	108	0,51	220-240/1N~/50
RBS-051-SR-CO2	5	790 x 820 x 900	R744 (CO2)	30	20	108	0,51	220-240/1N~/50
RBS-081-SA-R290	8	790 x 870 x 1460	R290	40	25	1606	9,56	220-240/1N~/50
RBS-081-SR	8	790 x 870 x 1460	R452A/R448A/R449A	40	25	118	0,56	220-240/1N~/50
RBS-081-SR-CO2	8	790 x 870 x 1460	R744 (CO2)	40	25	118	0,56	220-240/1N~/50
RBSR-120-SA-R290	10	850 x 870 x 1860	R290	65	45	2505	6,4	380-420/3N~/50
RBSR-120-SR	10	850 x 870 x 1860	R452A/R448A/R449A	65	45	199	0,94	380-420/3N~/50

- SA-R290: with ecological gas
- SR: Remote unit (optional)
- SR-CO2: Remote unit set up for CO₂ ecological gas

Display 5"



For maximum overall dimensions and technical specifications, consult the product data sheet.
For condensing units, consult the specific sheet.


* special voltages and frequencies on request

The range


Ready Super High Performance




121



161



122

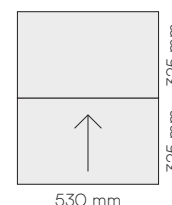


+3°C | -40°C

Models	Tray capacity GN1/1 - EN1	External dimensions (W x D x H mm)	Refrigerant Gas	Positive blast chilling capacity in 90' +90°C > +3°C (Kg)	Negative blast chilling capacity in 240' +90°C > -18°C (Kg)	Electric power (W)	Power absorption (A)	Power supply * (V/Ph/Hz)
RBS-121-SA-R290	12	790 × 870 × 1810	R290	65	45	2505	6,4	380-420/3N~/50
RBS-121-SR	12	790 × 870 × 1810	R452A/R448A/R449A	65	45	199	0,94	380-420/3N~/50
RBS-121-SR-CO2	12	790 × 870 × 1810	R744 (CO2)	65	45	199	0,94	380-420/3N~/50
RBS-161-SA-R290	16	790 × 870 × 1960	R290	80	55	3196	8,1	380-420/3N~/50
RBS-161-SR	16	790 × 870 × 1960	R452A/R448A/R449A	80	55	280	1,32	380-420/3N~/50
RBS-161-SR-CO2	16	790 × 870 × 1960	R744 (CO2)	80	55	280	1,32	380-420/3N~/50
RBS-122-SA-R290	24	1100 × 1080 × 1860	R452A	80	60	3299	8,18	380-420/3N~/50
RBS-122-SR	24	1100 × 1080 × 1860	R452A/R448A/R449A	80	60	273	1,28	380-420/3N~/50
RBS-122-SR-CO2	24	1100 × 1080 × 1860	R744 (CO2)	80	60	273	1,28	380-420/3N~/50

- SA-R290: with ecological gas
- SR: Remote unit (optional)
- SR-CO2: Remote unit set up for CO₂ ecological gas

For maximum overall dimensions and technical specifications, consult the product data sheet.
For condensing units, consult the specific sheet.


Display 5"

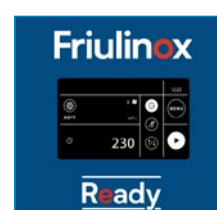

* special voltages and frequencies on request

The range

Ready Regular

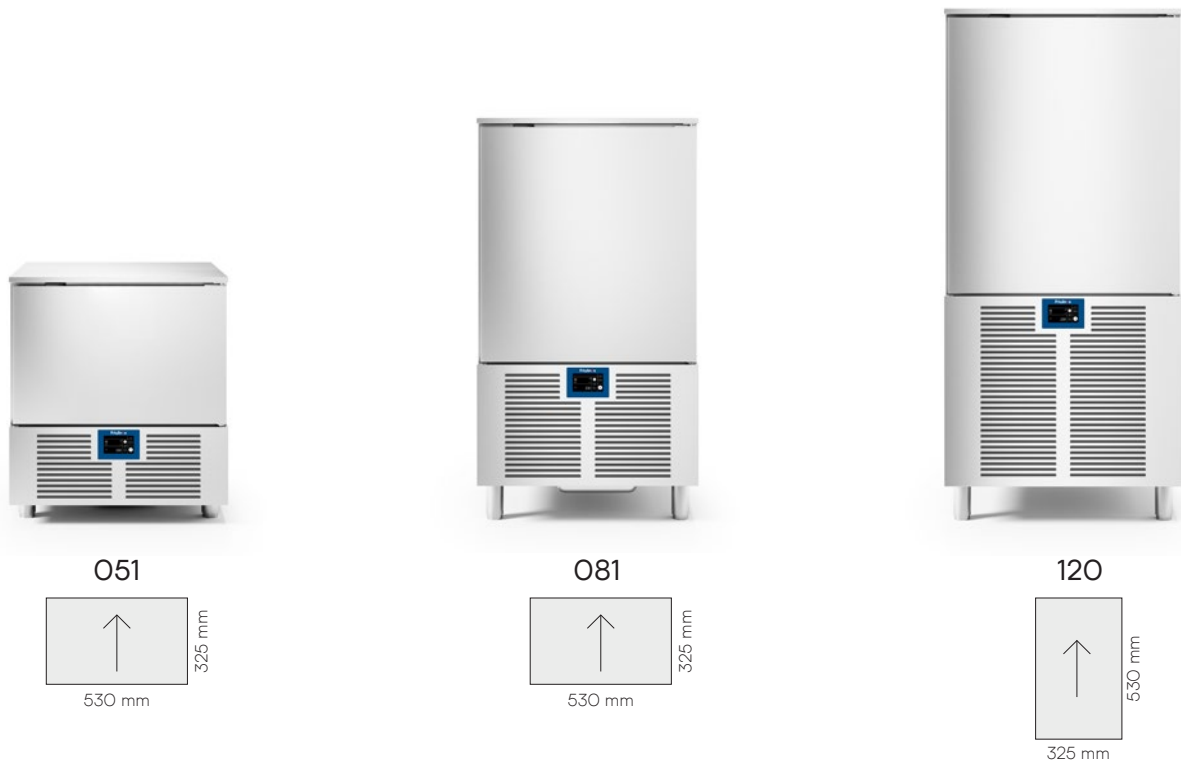

+3°C | -40°C

Models	Tray capacity GN1/1 - EN1	External dimensions (W x D x H mm)	Refrigerant Gas	Positive blast chilling capacity in 90' +90°C > +3°C (Kg)	Negative blast chilling capacity in 240' +90°C > -18°C (Kg)	Electric power (W)	Power absorption (A)	Power supply * (V/Ph/Hz)
RBS-O51-RA-R290	5	790 x 820 x 900	R290	25	15	1089	5,21	220-240/1N-/50
RBS-O51-RR	5	790 x 820 x 900	R452A/R448A/R449A	25	15	108	0,51	220-240/1N-/50
RBS-O81-RA-R290	8	790 x 850 x 1460	R290	35	25	1341	7,86	220-240/1N-/50
RBS-O81-RR	8	790 x 850 x 1460	R452A/R448A/R449A	30	20	118	0,56	220-240/1N-/50
RBSR-120-RA-R290	10	850 x 850 x 1860	R290	55	35	2021	4,9	380-420/3N-/50
RBSR-120-RR	10	850 x 850 x 1860	R452A/R448A/R449A	55	35	199	0,94	380-420/3N-/50

Display 5"



- RA-R290: with ecological gas
- RR: Remote unit (optional)

For maximum overall dimensions and technical specifications, consult the product data sheet.
For condensing units, consult the specific sheet.


* special voltages and frequencies on request

The range


Ready Regular



121



161



+3°C | -40°C

Models	Tray capacity GN1/1 – EN1	External dimensions (W x D x H mm)	Refrigerant Gas	Positive blast chilling capacity in 90' +90°C > +3°C (Kg)	Negative blast chilling capacity in 240' +90°C > -18°C (Kg)	Electric power (W)	Power absorption (A)	Power supply * (V/Ph/Hz)
RBS-121-RA-R290	12	790 x 850 x 1810	R290	55	35	2021	4,9	380-420/3N~/50
RBS-121-RR	12	790 x 850 x 1810	R452A/R448A/R449A	55	35	199	0,94	380-420/3N~/50
RBS-161-RA-R290	16	790 x 850 x 1960	R290	75	50	2666	6,4	380-420/3N~/50
RBS-161-RR	16	790 x 850 x 1960	R452A/R448A/R449A	75	50	280	1,32	380-420/3N~/50

- RA-R290: with ecological gas
- RR: Remote unit (optional)

Display 5"



For maximum overall dimensions and technical specifications, consult the product data sheet.
For condensing units, consult the specific sheet.

* special voltages and frequencies on request

Ready

Blast chilling cells

Plug-ins

A range of blast chilling cells immediately ready to use, because they are equipped with a complete refrigeration unit: an advantage that makes the difference, together with performance, high load capacity, speed of cycles, reduction of consumption and high quality of materials. Just plug them into the power supply and the Ready cells change the way you work: for the better.



The range

Ready Plug-in Cells



1/1 GN



2/1 GN

With condensing unit on board +3°C | -40°C

Models	Trolleys 20 Pans EN1-GN1/1	Trolleys 20 Pans EN2-GN2/1	Doors	External dimensions (W x D x H mm)	Internal dimensions (W x D x H mm)	Positive blast chilling capacity in 90' +90°C > +3°C (Kg)	Negative blast chilling capacity in 240' +90°C > -18°C (Kg)	Electric power (W)	Power absorption (A)	Power supply * (V/Ph/Hz)
RCBL-201-R-PFA	1		1	890 × 1345 × 2400	688 × 835 × 1900	90	50	3615	8,63	380-420/3N~/50
RCBL-202-R-PFA	1	1	1	1100 × 1625 × 2400	895 × 1040 × 1900	110	60	4500	10,5	380-420/3N~/50

- R-PFA: regular air unit



1/1 GN



2/1 GN

With remote condensing unit +3°C | -40°C

Models	Trolleys 20 Pans EN1-GN1/1	Trolleys 20 Pans EN2-GN2/1	Doors	External dimensions (W x D x H mm)	Internal dimensions (W x D x H mm)	Positive blast chilling capacity in 90' +90°C > +3°C (Kg)	Negative blast chilling capacity in 240' +90°C > -18°C (Kg)	Electric power (W)	Power absorption (A)	Power supply * (V/Ph/Hz)
RCBL-201-R-PFR	1		1	890 × 1345 × 2180	688 × 835 × 1900	90	50	441	2,03	380-420/3N~/50
RCBL-201-R-PFR-CO2	1		1	890 × 1345 × 2180	688 × 835 × 1900	90	50	441	2,03	380-420/3N~/50
RCBL-202-R-PFR	1	1	1	1100 × 1625 × 2180	895 × 1040 × 1900	110	60	531	2,3	380-420/3N~/50
RCBL-202-R-PFR-CO2	1	1	1	1100 × 1625 × 2180	895 × 1040 × 1900	110	60	531	2,3	380-420/3N~/50

- R-PFR: Arrangement for R452a/R448a/R449a refrigerant gas
- R-PFR-CO₂: Provision for connection to R744 (CO₂) systems

For maximum overall dimensions and technical specifications, consult the product data sheet.
For condensing units, consult the specific sheet.

* special voltages and frequencies on request


Great performance in an optimal space

The Ready cold rooms make the most of the available space, in the most diverse situations: from the laboratory, to the canteen, to the cooking centre, to the restaurant. Compatible with all laboratory or oven trolleys, they have been tested in compliance with the EN17032 standard, even with large loads and in the most demanding work situations.



Smart interface

Smart and essential, the 5-inch touch display, easy to reach, offers immediate visibility and interaction with the functions, represented by intuitive and easy-to-read symbols.

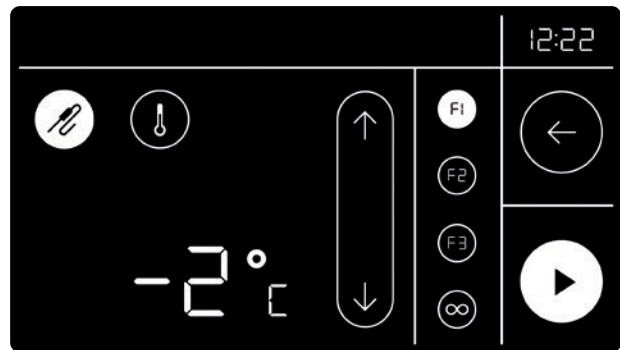

More efficiency, less consumption

Thanks to the optimization of the airflow, the result of in-depth research and numerous tests to obtain maximum results, Ready cells have achieved a significant increase in the quantity of product blast chilled and an equally sharp reduction in the length of the work cycles. All this with significant energy savings: an advantage for the environment as well as for the budget.

Blast chilling 110Kg of puree
(20 trays GN2/1)

Cell temperature

.....

No. 8 Trays sample
positioned at different heights


.....

Average time positive
blast chilling from
+65°C to +3°C

1 hour

Average time deep
freezing from
+65°C to -18°C

3 hours 33 min

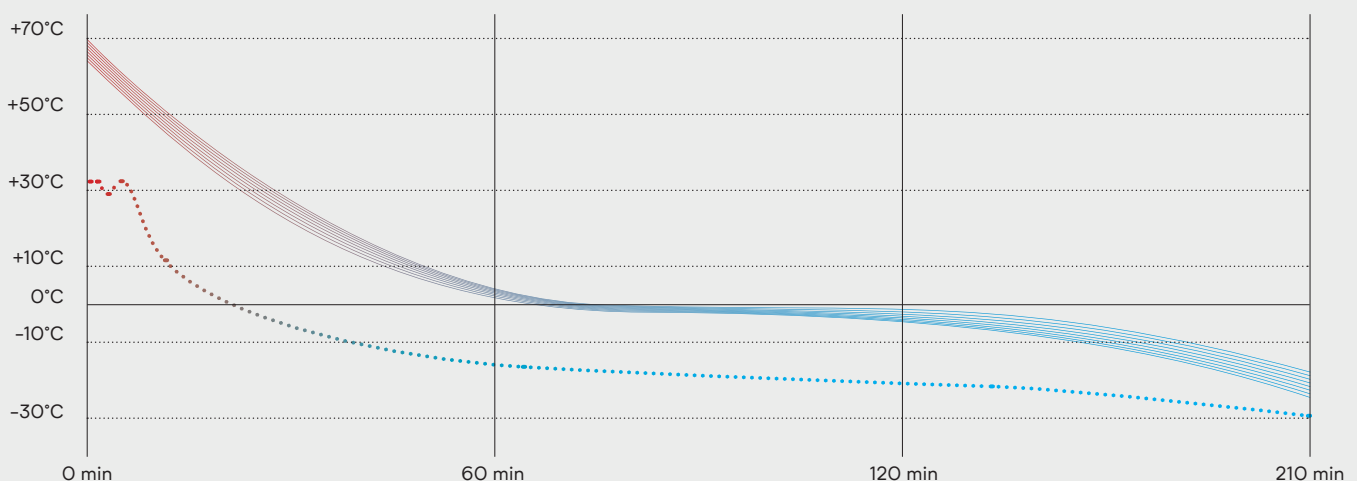

The range

Ready Cells



1 Trolley



2 Trolleys



3 Trolleys




4 Trolleys

+3°C | -40°C

Models	Trolleys 20 Pans EN1-GN1/1	Trolleys 20 Pans EN2-GN2/1	Doors	External dimensions (W x D x H mm)	Internal dimensions (W x D x H mm)	Positive blast chilling capacity in 90' +90°C > +3°C (Kg)	Negative blast chilling capacity in 240' +90°C > -18°C (Kg)	Electric power (W)	Power absorp- tion (A)	Power supply * (V/Ph/Hz)
RCSG-201-R-RIF	1		1	1300 x 1330 x 2100	700 x 950 x 1820	120	80	638	2,87	380-420/3N~/50
RCSG-201-R-RTF	1		2	1300 x 1400 x 2100	700 x 1020 x 1820	120	80	738	3,31	380-420/3N~/50
RCSG-202-R-RIF	1	1	1	1500 x 1530 x 2100	880 x 1150 x 1820	150	100	638	2,87	380-420/3N~/50
RCSG-202-R-RTF	1	1	2	1500 x 1600 x 2100	880 x 1220 x 1820	150	100	738	3,31	380-420/3N~/50
RCSG-401-R-RTF	2		2	1300 x 2300 x 2100	700 x 1920 x 1820	240	160	1276	3,56	380-420/3N~/50
RCSG-402-R-RTF	2	2	2	1500 x 2700 x 2100	880 x 2320 x 1820	300	200	1276	3,56	380-420/3N~/50
RCSG-601-R-RTF	3		2	1300 x 3200 x 2100	700 x 2820 x 1820	360	240	1814	3,82	380-420/3N~/50
RCSG-602-R-RTF	3	3	2	1500 x 3800 x 2100	880 x 3420 x 1820	450	300	1814	3,82	380-420/3N~/50
RCSG-801-R-RTF	4		2	1300 x 4100 x 2100	700 x 3720 x 1820	480	320	2232	5,74	380-420/3N~/50
RCSG-802-R-RTF	4	4	2	1500 x 4900 x 2100	880 x 4520 x 1820	600	400	2232	5,74	380-420/3N~/50

- Arrangement for R452a/R448a/R449a refrigerant gas

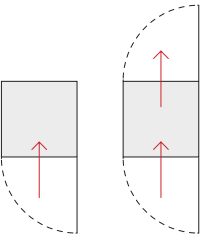

RIF: 1 door
RTF: 2 sliding doors on both sides

- R-REF: regular roll-in with floor
- R-RTF: regular roll-through with floor

For maximum overall dimensions and technical specifications, consult the product data sheet.
For condensing units, consult the specific sheet.

* special voltages and frequencies on request

The range

Ready Cells

On feet



1 oven trolley EN1-GN1/1



1 oven trolley EN2-GN2/1

+3°C | -40°C

Models	Trolleys 20 Pans EN1-GN1/1	Trolleys 20 Pans EN2-GN2/1	Doors	External dimensions (W x D x H mm)	Internal dimensions (W x D x H mm)	Positive blast chilling capacity in 90' +90°C > +3°C (Kg)	Negative blast chilling capacity in 240' +90°C > -18°C (Kg)	Electric power (W)	Power absorp- tion (A)	Power supply * (V/Ph/Hz)
RCSG-201-R-OTR	1		1	1300 x 1305 x 2203	740 x 940 x 1700	100	70	638	2,87	380-420/3N-/50
RCSG-201-R-OTR-L	1		1	1300 x 1305 x 2203	740 x 940 x 1700	100	70	638	2,87	380-420/3N-/50
RCSG-202-R-OTR		1	1	1500 x 1505 x 2203	940 x 1140 x 1700	130	90	638	2,87	380-420/3N-/50
RCSG-202-R-OTR-L		1	1	1500 x 1505 x 2203	940 x 1140 x 1700	130	90	638	2,87	380-420/3N-/50

- Arrangement for R452a/R448a/R449a refrigerant gas

Ready Cells

On Feet, CO₂



+3°C | -40°C

Models	Trolleys 20 Pans EN1-GN1/1	Trolleys 20 Pans EN2-GN2/1	Doors	External dimensions (W x D x H mm)	Internal dimensions (W x D x H mm)	Positive blast chilling capacity in 90' +90°C > +3°C (Kg)	Negative blast chilling capacity in 240' +90°C > -18°C (Kg)	Electric power (W)	Power absorp- tion (A)	Power supply * (V/Ph/Hz)
RCSG-201-R-OTR-CO2	1		1	1300 x 1305 x 2203	740 x 940 x 1700	100	70	608	2,74	380-420/3N-/50
RCSG-201-R-OTR-L-CO2	1		1	1300 x 1305 x 2203	740 x 940 x 1700	100	70	608	2,74	380-420/3N-/50
RCSG-202-R-OTR-CO2		1	1	1500 x 1505 x 2203	940 x 1140 x 1700	130	90	608	2,74	380-420/3N-/50
RCSG-202-R-OTR-L-CO2		1	1	1500 x 1505 x 2203	940 x 1140 x 1700	130	90	608	2,74	380-420/3N-/50

- Provision for connection to R744 (CO2) systems

- R-OTR: regular oven trolley for ICP trolley

- R-OTR-L: regular oven trolley for Lainox trolley

For maximum overall dimensions and technical specifications, consult the product data sheet.
For condensing units, consult the specific sheet.

* special voltages and frequencies on request

The range

Ready Cells CO₂



1 Trolley



2 Trollies



3 Trollies




4 Trollies

+3°C | -40°C

Models	Trolleys 20 Pans EN1-GN1/1	Trolleys 20 Pans EN2-GN2/1	Doors	External dimensions (W x D x H mm)	Internal dimensions (W x D x H mm)	Positive blast chilling capacity in 90' +90°C > +3°C (Kg)	Negative blast chilling capacity in 240' +90°C > -18°C (Kg)	Electric power (W)	Power absorp- tion (A)	Power supply * (V/Ph/Hz)
RCSG-201-R-RIF-CO2	1		1	1300 x 1330 x 2100	700 x 950 x 1820	120	80	608	2,74	380-420/3N~/50
RCSG-201-R-RTF-CO2	1		2	1300 x 1400 x 2100	700 x 1020 x 1820	120	80	708	3,18	380-420/3N~/50
RCSG-202-R-RIF-CO2	1	1	1	1500 x 1530 x 2100	880 x 1150 x 1820	150	100	608	2,74	380-420/3N~/50
RCSG-202-R-RTF-CO2	1	1	2	1500 x 1600 x 2100	880 x 1220 x 1820	150	100	708	3,18	380-420/3N~/50
RCSG-401-R-RTF-CO2	2		2	1300 x 2300 x 2100	700 x 1920 x 1820	240	160	1216	3,3	380-420/3N~/50
RCSG-402-R-RTF-CO2	2	2	2	1500 x 2700 x 2100	880 x 2320 x 1820	300	200	1216	3,3	380-420/3N~/50
RCSG-601-R-RTF-CO2	3		2	1300 x 3200 x 2100	700 x 2820 x 1820	360	240	1724	3,43	380-420/3N~/50
RCSG-602-R-RTF-CO2	3	3	2	1500 x 3800 x 2100	880 x 3420 x 1820	450	300	1724	3,43	380-420/3N~/50
RCSG-801-R-RTF-CO2	4		2	1300 x 4100 x 2100	700 x 3720 x 1820	480	320	2232	5,74	380-420/3N~/50
RCSG-802-R-RTF-CO2	4	4	2	1500 x 4900 x 2100	880 x 4520 x 1820	600	400	2232	5,74	380-420/3N~/50

- Provision for connection to R744 (CO2) systems

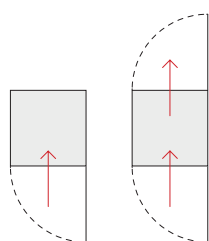

RIF: 1 door
RTF: 2 sliding doors on both sides

- R-REF: regular roll-in with floor
- R-RTF: regular roll-through with floor

For maximum overall dimensions and technical specifications, consult the product data sheet.
For condensing units, consult the specific sheet.

* special voltages and frequencies on request

Chilly

Blast chillers



New range of blast chillers for those with limited kitchen space but who want to ensure maximum safety in time-delayed preparations.


From 2/3 GN to 1/1 GN, countertop or built-in under a worktable.

The range


Chilly




O30




O31



O51



O81



+3°C | -40°C

Models	Tray capacity	External dimensions (W x D x H mm)	Refrigerant Gas	Positive blast chilling capacity in 90' +90°C > +3°C (Kg)	Negative blast chilling capacity in 240' +90°C > -18°C (Kg)	Electric power (W)	Power absorption (A)	Power supply * (V/Ph/Hz)
SB-030-RA-R290	3x GN 2/3	625 × 560 × 520	R290	8	5	659	3,47	220-240/1N-/50
SB-031-RA-R290	3x GN 1/1	625 × 700 × 520	R290	8	5	659	3,47	220-240/1N-/50
SB-050-RA-R290	5x GN 1/1	790 × 700 × 900	R290	20	10	660	3,64	220-240/1N-/50
SB-081-RA-R290	8x GN 1/1	790 × 850 × 1460	R290	35	25	1151	5,61	220-240/1N-/50

- RA-R290: with ecological gas

For maximum overall dimensions and technical specifications, consult the product data sheet.
For condensing units, consult the specific sheet.

* special voltages and frequencies on request

Chilly



Characteristics

- HACCP alarm indication
- Core probe with 1 measuring point
- Monoblock construction.
- Internal stainless steel.
- External Scotch Brite satin finish stainless steel
- High density CFC and HCFC-free PU insulation (42 kg/m³).
- Rounded cell corners for easy cleaning
- Ergonomic handle

- Indirect-flow electric fans – made of composite material – on the product
- Compressor-protecting automatic-reset thermal circuit breaker
- Copper-aluminium evaporating coil, cataphoresis-painted
- Copper condensing coil with aluminum fins with high thermal efficiency.
- Easily accessible evaporator for proper maintenance
- Automatic defrost and defrost water self evaporating.
- R290 ecological refrigerant gas
- Hermetic compressor

Ready

FRIULINOX – ALI GROUP Srl a Socio Unico
Via Treviso 4 – 33083 Taiedo di Chions (PN) ITALY
Tel. +39 0434 635411 – Fax +39 0434 635414

info@friulinox.com | www.friulinox.com



The data and information may change based on the continual development of products.
See the complete range on: www.friulinox.com

an Ali Group Company



The Spirit of Excellence