


Jet 6

SERVICE MANUAL

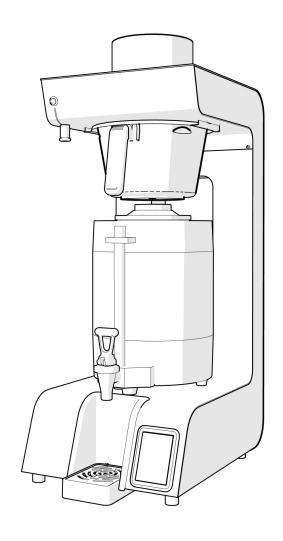

Marco Beverage Systems Ltd.

63d Heather Road, Sandyford Industrial Estate, Dublin 18, Republic of Ireland Ireland Tel: (01) 295 2674 Ireland Fax: (01) 295 3715

UK Tel: (0207) 274 4577 UK Fax: (0207) 978 8141

CONTENTS

	PAGE
INTRODUCTION	3
SERIAL NUMBER & MACHINE MODEL INFORMATION	3
GENERAL DESCRIPTION	4
ASSEMBLY & PARTS DRAWINGS FRONT PANEL REMOVAL TOP PANEL & BACK PANEL REMOVAL ELEMENT REMOVAL SPARE PARTS LOWER & DESCALING SPARE PARTS UPPER & DISPENSE VALVE REMOVAL TROUBLESHOOTING -LCD DIAGNOSTIC GUIDE TROUBLESHOOTING -GENERAL DIAGNOSTIC GUIDE	5 6 7 8 9 10
WIRING DRAWINGS WIRING SCHEMATIC 5.6kW (2 ELEMENTS OPERATING) WIRING SCHEMATIC 2.8kW (1 ELEMENT OPERATING) WIRING SCHEMATIC 3.6kW JM VERSION WIRING SCHEMATIC 5.6kW US VERSION WIRING SCHEMATIC 2.8kW US VERSION	13 14 15 16 17
GENERAL SPARE PARTS LIST	18

INTRODUCTION

The information provided in this manual is intended to assist in the maintenance of the Marco Jet 6 Brewers. For basic user information & operation of the machine please consult the User Manual which comes with the machine.

This manual is not a substitute for any safety instructions or technical data affixed to the machine or its packaging. All information in this manual is current at the time of publication and is subject to change without notice.

Only technicians or service providers authorised by Marco should carry out installation and maintenance of these machines.

Marco accepts no responsibility for any damage or injury caused by incorrect or unreasonable installation and operation.

SERIAL NUMBER & MACHINE MODEL INFORMATION

Every unit will have a rating plate with a machine serial number. The format is MMYYXXXX

The first four digits of the serial number denote the month and year of manufacture. The remaining four digits represent a factory assigned identification number.

See example below. This machine was made in June 2014 and was machine number 1234.

Model: UC Jet 6 230V 5.6kW

Serial No: 02150149

Rated Voltage: 230-240 V a.c.

Rated Power Input: 5.6 - 6.1kW Rated Current: 24.3-25.4 A

Rated Freq Input: 50-60HZ

Water Inlet Pressure: 8-145 PSI

Marco Beverage Systems Ltd

Tel: IRL +353 (0)1 2952674 UK +44 0207 2744577

1000850







GENERAL DESCRIPTION


1000850# Jet 6 5.6kW		
Electrical	Connection	5.6kW, 230Vac (US:200-230Vac) c/w 1.5m flex
Plumbing	Fittings Pressure	0.75" BSP (US: Inlet hose 3/4" WRC) Food grade inlet hose supplied 8-145 psi (55-1000 kPa) Standard inlet hose protrudes out 47mm measured from the flat back panel.
Dimensions	Height Width Depth (no plumbing or driptray) Depth (including plumbing fitting, no driptray) Depth (including plumbing fitting & including driptray) Tap Height to counter Tap Height to driptray	840mm 310mm 410mm 445mm 490mm 162mm 132mm
Performance	Hot Water (if tap is installed): Immediate Draw Off Total Recovery rate at 5.6KW	Approx. 5L + 0.9 litres/minute 0.9 litres/minute


1000851# Jet 6 2.8kW		
Electrical	Connection	2.8kW,230Vac c/w 1.5m flex & moulded plug
Plumbing	As above	
Dimensions	As above	
Performance	Hot Water: Immediate Draw Off Total Recovery rate at 2.8KW	Approx. 5L + 0.45 litres/minute 0.45 litres/minute


1000851# Jet 6 2.8kW		
Electrical	Connection	2.8kW,230Vac
		c/w 1.5m flex & moulded plug
Plumbing	As above	
Dimensions	As above	
Performance	Hot Water:	
	Immediate Draw Off	Approx. 5L + 0.45 litres/minute
	Total Recovery rate at 2.8KW	0.45 litres/minute

1000850JM Jet 6 3.6kW		
Electrical	Connection	3.6kW,200Vac c/w 1.5m flex
Plumbing	As above	
Dimensions	As above	
Performance	Hot Water:	
	Immediate Draw Off	Approx. 5L + 0.6 litres/minute
	Total Recovery rate at 3.6KW	0.6 litres/minute

1000852 Jet 6 400V 5.6kW 3PH		
Electrical	Connection	5.6kW, 400Vac c/w 1.5m flex
Plumbing	As above	
Dimensions	As above	
Performance	<u>Hot Water:</u>	
	Immediate Draw Off	Approx. 5L + 0.9 litres/minute
	Total Recovery rate at 3.6KW	0.9 litres/minute

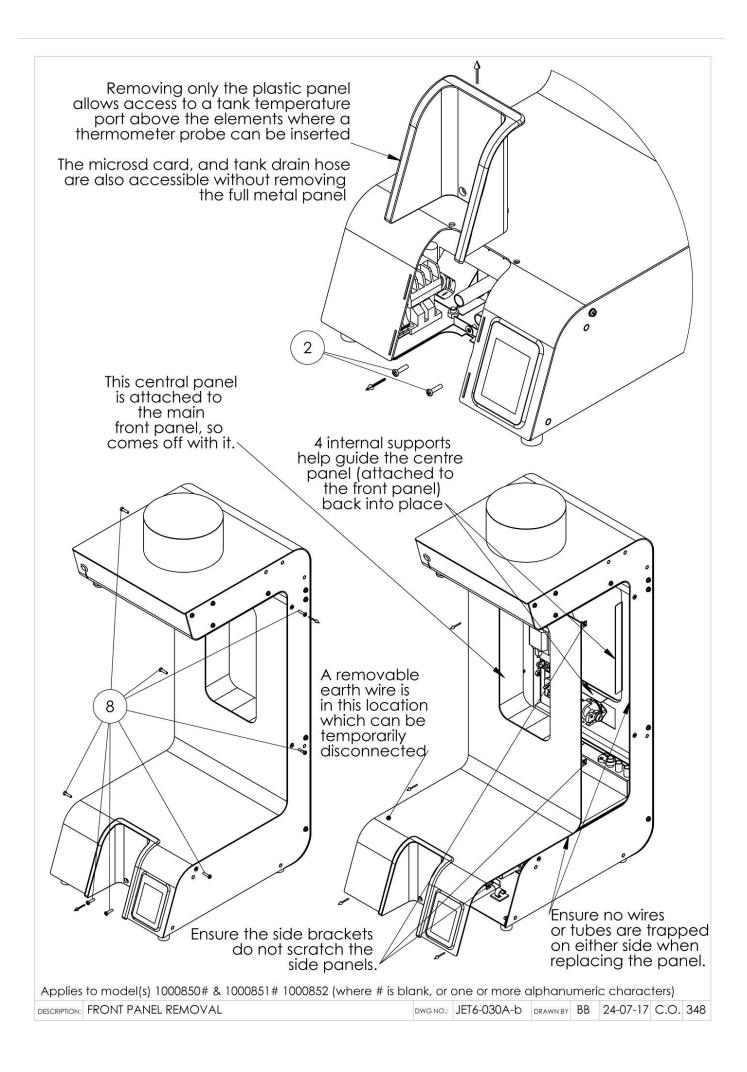

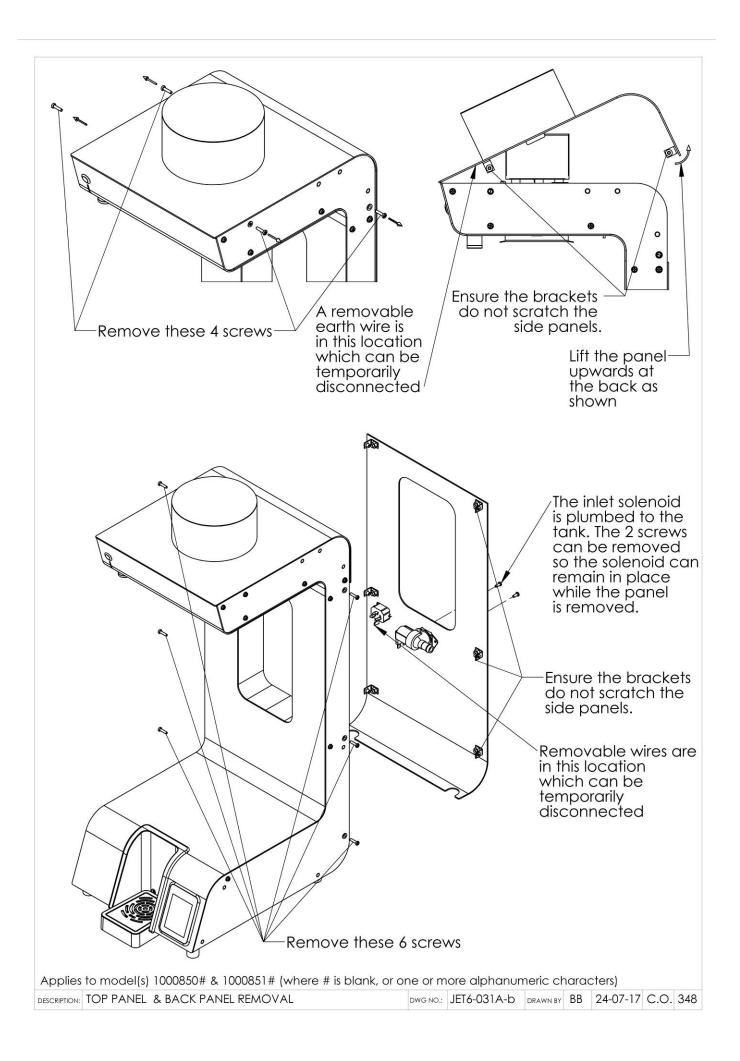

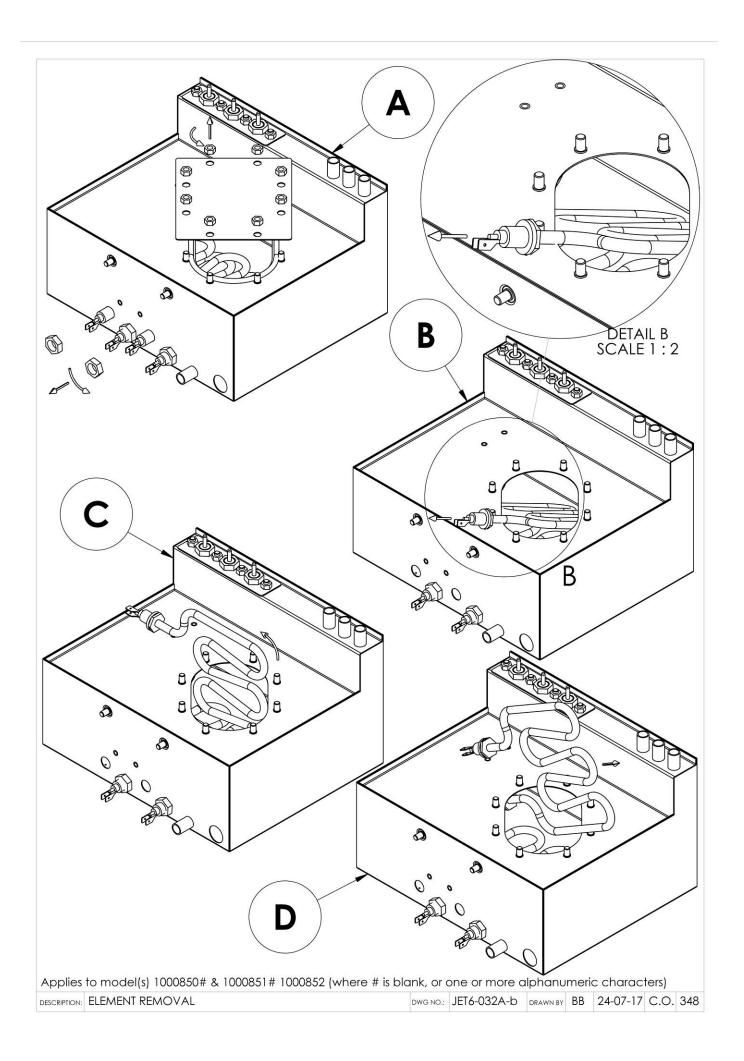

ITEM NO.	PART NUMBER	DESCRIPTION		
1	2300277	Driptray Complete JET	*NOTE:	
2	1600691	THERMISTOR ASSEMBLY		INES, 1000850US & 1000851US
4	2301338	Probe Triple 120mm/65mm/no tab	1	11423, 100000000 & 100000100
5	1900225	Label Touchscreen 3.2inch	USE 1500842	
6	2200628	Bezel Touchscreen 3.2inch Rear		_
7	1800337	Gasket Silicone Bezel 3.2inch		
		P.C.B. Touchscreen 3.2inch		\sim (16)
8	1600202C	Integrated Memory Complete	(1	(23)
8A	1600202K	Jet PCB & Screen Kit (before SN	\4	23 (24)
0/	1000202K	0817xxxx)		
8b	1600202KP	Jet PCB & Screen Kit with Power		(25)
		Supply (before SN 0817xxxx)		
9	2200627	Bezel Touchscreen 3.2inch Front		(10)
10	1401723	Screw M2x6mm S/S Pan Posi		(40)
11	1401727	Screw M3.5x10 Pan Pozi S/S Self Tap		
12	1501183	Cable Ribbon IDC 16way to 16way		(15)
13	1600201	P.C.B Jet Control		
15	1801230	PILLAR SUPPORT PCB		
16	1402202	Y Piece Fitting	1	(28/a) \(\) \(\) \(\) \(\) \(\) \(\)
17	1800770	O RING 4" RED SILICONE		
18	1501216	SWITCH POWER ON/OFF	1	
19	1501559	Pump Topsflo 24V DC		$(13) \qquad \qquad$
20	1502159	Mount Tank Wall Silicone 14mm		
10000000		Valve		
21	1800540	Clip Hose Plastic 18.2mm Type F		$(27) \qquad \qquad \qquad \qquad \qquad $
22	1800550	Clip Hose Plastic 20.2mm Type G		
23	1401877	Spacer Flange 9.2x5.2x7.9-10mm LxIDxOD		(20)
24	1402442	Washer M4 Nylon Black 4.3x9x0.8mm	(45)	(30)
25	1401767	Screw M4 x 16mm Pozi Pan Black SS	\	
26	1401760	Screw M4 X 10mm Pozi Pan S/S		
27	1800690	Hose Water Inlet 3/4" WRC		
28	1800692	Hose Water Inlet 3/4 WKC		(4)
20	1000072	Hose Water Inlet 9/16"-24 UNEF (3/8		
28a	1800693	Compression) (US after S/N 0917xxxx)	<i>H</i> <i>Z</i>	26
- 00	1.500075		///	26
29	1502075	Thermal Switch Dual Pole 125Deg	////	
30	1501153	Socket IEC C13 10A Female Panel Mnt	<i> </i>	
31	1500985	ELEMENT 2.8kW 230V		$\begin{array}{c c} (2) & (21) & ($
32	1500987	Element 1.8kW 200V (US &MJ)		
33	1500840 *	CONTACTOR B&J 240V AC	1 <i>U</i> ////	(36)
34	1502000	TERMINAL 6mm		
35	1801575	Plastic Cup Recess	(35)	
36	1800336	Gasket Silicone Cup Recess	(33)	
37	1801200	Strain Relief Bush Black SR-7W-2		
38	1801202	(2.8kW)	(31)	
39	1800356	Strain Relief Screw Adjust (5.6kW) Locknut Nylon M20 (5.6kW)	(3)	
40	1600336	Relay 24VDC SPDT		
42	1601000	Power Supply 24V Dc		
43	1502171	Valve Inlet 90 Deg 220V - 2L/min	1 _~ \	ELEN YEAR /
44	1401150	NUT M6 BRASS	2000	
45	1501094		difference	
		FNM-6 FUSE (US ONLY)		
Desc	ale solu	tion can be *		
DOUTE	ed into	the top of (33)	KON HILLING	
		ugh the		
me ic	atik itilo	ough the 37 or 38+39	1/2/1	
prob	e holes	using a 137 Oi 30+37 /		17
		eavy scaling		
1011116	ا ا ال ا .اد	cleanout (34)/		
		(//		(29)
door	and rer	move scale		$(20) \qquad (32)$
		e machine	\times	
		ned via the $\binom{18}{18}$		
drain	at the l	bottom of $(18)(25)$	/ /	(10) (10)
				11 (19) (12)
		ir the pump	1) (-) (-)	
Whe	n replac	cing the	5)(9)	(7)(8)(10)
		or be careful		\bigcirc (6)
HOLL	o oveili	ghten the nuts		
as it o	could b	reak the		
		uds on the tank.		
				The pump is held in place by a friction
lo re	move th	ne probes take off the 4	nuts and	fit is the ellipse and market Terrores
lift th	e probe	e assembly upwards out	of the	fit in the silicone mount. To remove the


To remove the probes take off the 4 nuts and lift the probe assembly upwards out of the tank. Heavy scaling on the high level probe can cause the tank to overfill and may cause the overflow probe to be triggered

fit in the silicone mount. To remove the pump drain the machine fully, hold the silicone mount against the tank & pull the pump directly out of the tank.

Applies to model(s) 1000850# & 1000851# 1000852 (where # is blank, or one or more alphanumeric characters)

DESCRIPTION: SPARE PARTS LOWER & DESCALING

DWG NO.: JET6-033A-G DRAWN BY JL 14-05-19 C.O. 498

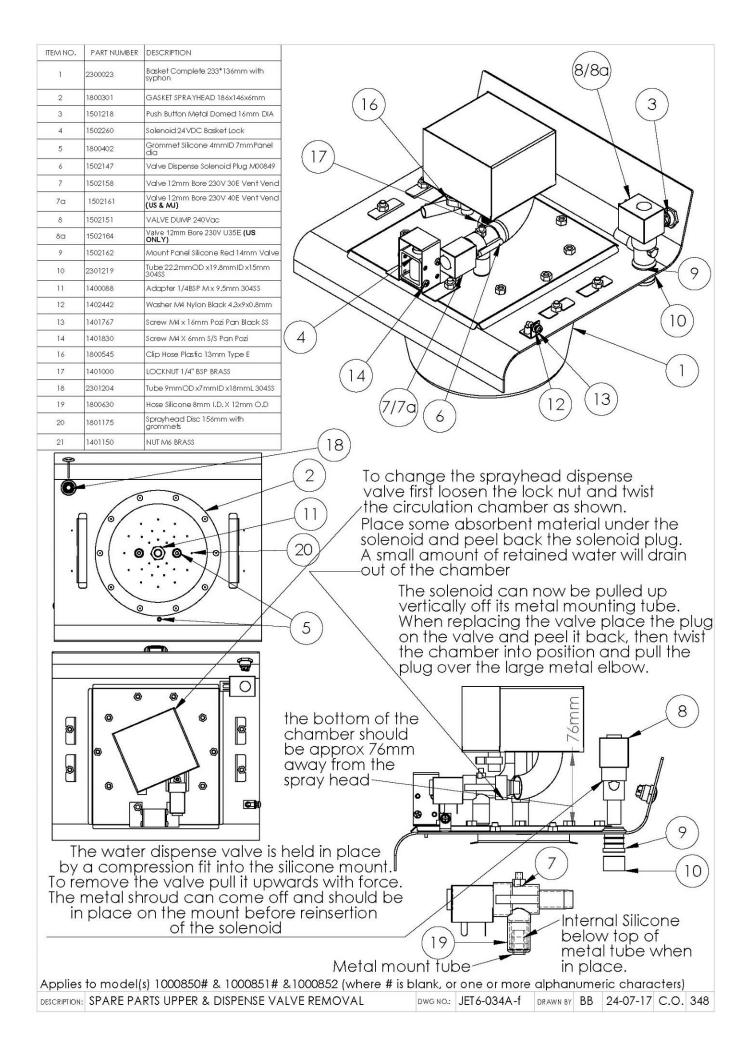

TROUBLESHOOTING - LCD DIAGNOSTIC GUIDE:

The Jet 6 uses an electronic diagnostic system to help determine faults. If an error is detected a message is displayed through the LCD screen.

THERMISTOR ERROR



Electronic check:

- This indicates that the thermistor is possibly measuring such a large resistance that it assumes the thermistor circuit is open.
- This indicates that the thermistor is possibly measuring zero resistance. It assumes the thermistor has failed sort circuit.
- The element and inlet valve are turned OFF when this error is detected
- This is a recoverable error. When the correct range of resistance is measured, normal operation resumes

Probable causes:

- 1. The thermistor probe is unplugged from the 4way connector on the PCB or the thermistor has failed open circuit.
- 2. The thermistor has failed in a closed circuit manner.

Action required:

1. Check that the thermistor is plugged in to the PCB correctly. If it is, replace the thermistor.

OVERFILL ERROR



Electronic check:

- This indicates that the overflow water level probe has been reached
- The element and inlet valve are turned OFF when this error is detected
- This is a recoverable error. When the water drops off the overflow water level probe, normal operation resumes.

Probable causes:

- 1. The machine is wired incorrectly, e.g. the high level probe wire is connected to the overflow probe.
- 2. The tank has overfilled since the inlet solenoid has failed or is "weeping". If the machine is turned off for a long time but still plumbed in this can cause it to fill.
- 3. The high level probe may have become coated in limescale and is allowing too much water in before it registers to stop.
- 4. If a brew is cancelled water circulating in the plumbing will return to the tank and possibly cause it to reach the low level probe (this is also more likely if the high level probe is scaled up)
- 5. Bubbles from the element can cause splashing inside the small tank which can trigger the overflow probe momentarily.

Action required:

- 1. Dispense some water via the hot water outlet and see if the problem recurs.
- 2. Descale the tank paying special attention to the high level probe.
- 3. Check water pressure, if it is too low the solenoid may allow small amounts of water in.
- 4. Check the solenoid for debris which may cause it to jam partially open.

PROBES ERROR



Electronic check:

- This indicates that the high level probe has been reached but the low level probe has not been detected.
- The element and inlet valve are turned OFF when this error is detected
- This is a recoverable error. If the low level probe is detected, normal operation resumes.

Probable causes:

- 1. The low level probe is disconnected or has a faulty wiring connection. The probe will not function and so the machine will fill until the high level probe is reached.
- 2. The probes are connected incorrectly, so the water reaches the first/lowest probe but it is incorrectly wired as the high level probe.
- 3. The low level probe may have become coated in limescale and is not being detected so water continues to fill the machine until the high level probe is detected.

Action required:

- 1. Re-wire the probes correctly.
- 2. Repair the faulty probe/connectors/wiring
- 3. Descale the low level probe.

HEATER ERROR



Electronic check:

This indicates that the tank temperature has not risen in 20mins

Probable causes:

1. The element is disconnected or has failed.

Action required:

- 1. Replace the element.
- 2. Re-wire the elements correctly, 2.8kW machines should have the lower element connected.

WAIT LOW PRESSURE



Electronic check:

- This indicates that the tank temperature has not dropped in 6mins while the inlet solenoid is trying to allow in water.
- This is a recoverable error. When water is allowed in a temperature drop will occur and normal operation resumes

Probable causes:

- 1. The water supply has been cut off or is lower than 2L/min. This could be a temporary event if some other appliances on the same water line is taking in a lot of water.
- 2. The inlet solenoid may have failed or is has a wiring error.

Action required:

- 1. Replace the solenoid.
- 2. Check incoming the water supply.

TROUBLESHOOTING -GENERAL DIAGNOSTIC GUIDE:

The Jet 6 may have problems which the electronics are unable to detect.

LOW WATER OUTPUT

The brew water should exit the sprayhead at approximately 2.1L/minute. During water calibration it should discharge 1000-1200g of hot water (960-1150ml).

Probable causes:

- 1. The hose exiting the pump is kinked which restricts flow.
- 2. Other hoses exiting the upper circulation chamber are kinked which can effect flow.
- 3. The pump is faulty or is clogged/jammed.
- 4. Incorrectly calibrated.

Action required:

- 1. Check for kinks in all hoses.
- 2. Check pump operation. Although the pump may function it may not be outputting an adequate supply. During calibration it should output 1000-1200g of water, or if dispensing using the hot water dispense outlet it should be approximately 2L per minute. The tube coming from the pump may be temporarily removed from the metal Y piece and fed directly into the basket, this can rule out any plumbing issues, a higher flow rate of 4-6L/min will be expected from the pump when operated in this way.
- 3. Recalibrate the water dispense. If a faulty scales is used the volume will be incorrect.

HIGH WATER OUTPUT

The brew water should exit the sprayhead at approximately 2.1L/minute. During most brew cycles the solenoid valve feeding the sprayhead should close at which time no water should exit the sprayhead after a draining time of approx. 10 seconds after the solenoid closes.

Probable causes:

- 1. The valve feeding the sprayhead is faulty. The valve mounts onto a metal tube with some silicone tube. If too much tube is used it can rise up over the top of the metal mounting tube and cause the valve's plunger to be forced into an open position. As both the valve and silicone tube are transparent it may be possible to see if the silicone tube is past the top of the metal tube.
- 2. Kinks in any tubes can cause flow problems in the machine which could cause unusually high flowrates.
- 3. Incorrectly calibrated.

Action required:


- 1. Check the valve and remove and reseat it if necessary.
- 2. Check for kinks in all hoses.
- 3. Recalibrate the water dispense. If a dry basket is used during calibration then some water may be retained in the basket giving a lower estimate. If hot water is left to stand then some may evaporate giving a lower weight when weighed, so the machine will dispense too much as it thinks it has a lower flowrate than it actually has.

GRINDER OUTPUT


The grinder works on a timed basis, estimating how many grams are dispensed per second. During calibration if the grinder is empty and clean then grinds will cling to the grinder components and the 10 second calibration grind will dispense a lower weight than if the machine was in normal operation running for 10 seconds. So before calibrating a small amount of beans should be passed through the grinder.

Adjusting bean type, roast, humidity, grinder settings etc. can also result in higher/lower weights than expected.


WIRING SCHEMATIC 5.6kW (2 ELEMENTS OPERATING)

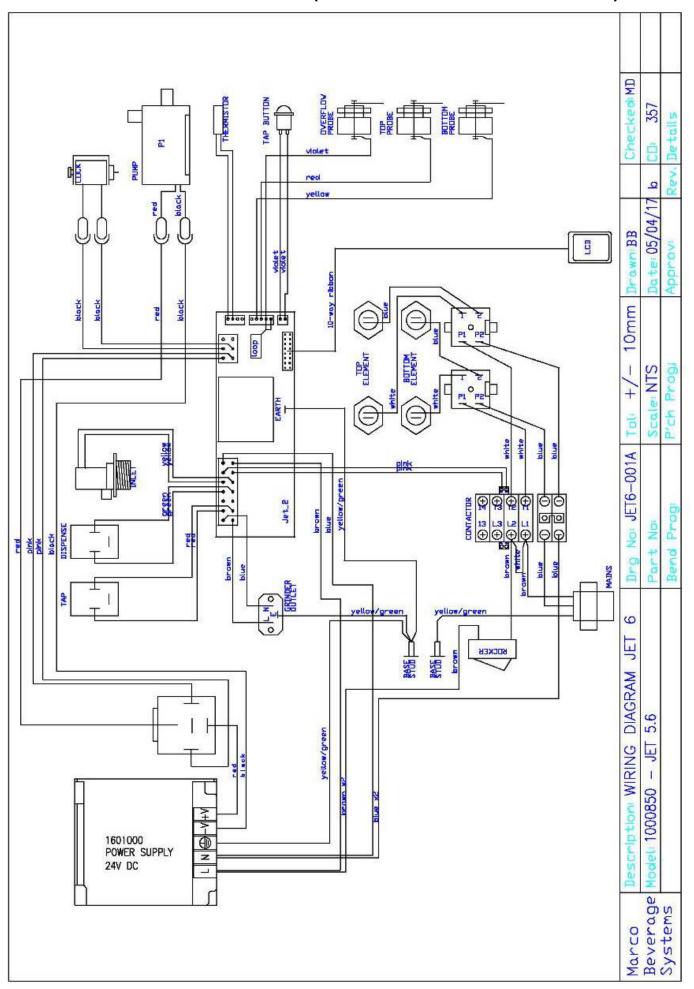


WIRING SCHEMATIC 2.8kW (1 ELEMENT OPERATING)

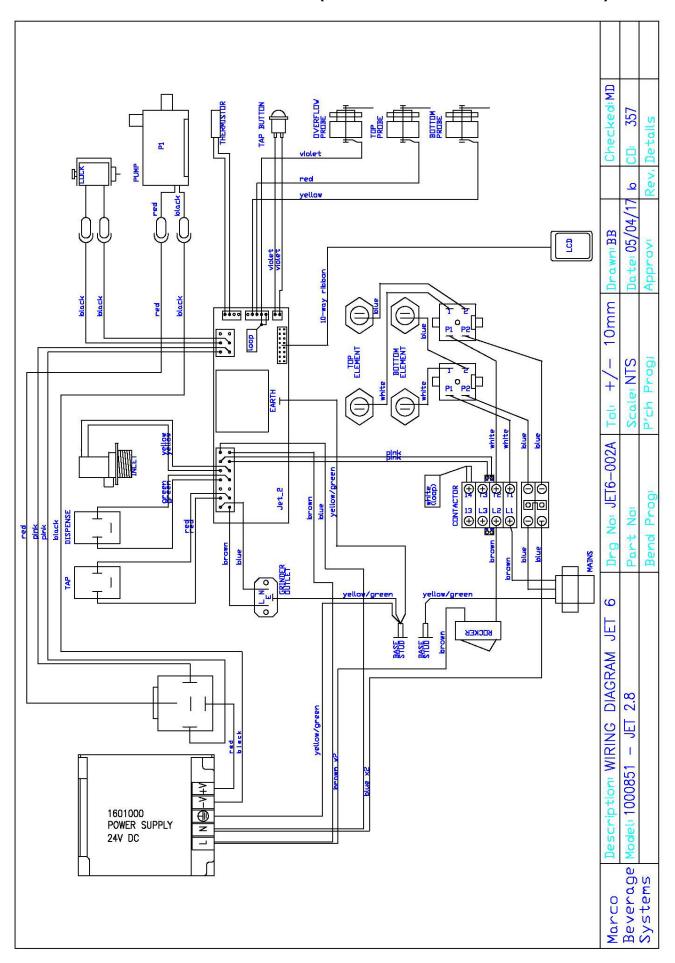


WIRING SCHEMATIC 3.6kW MJ VERSION

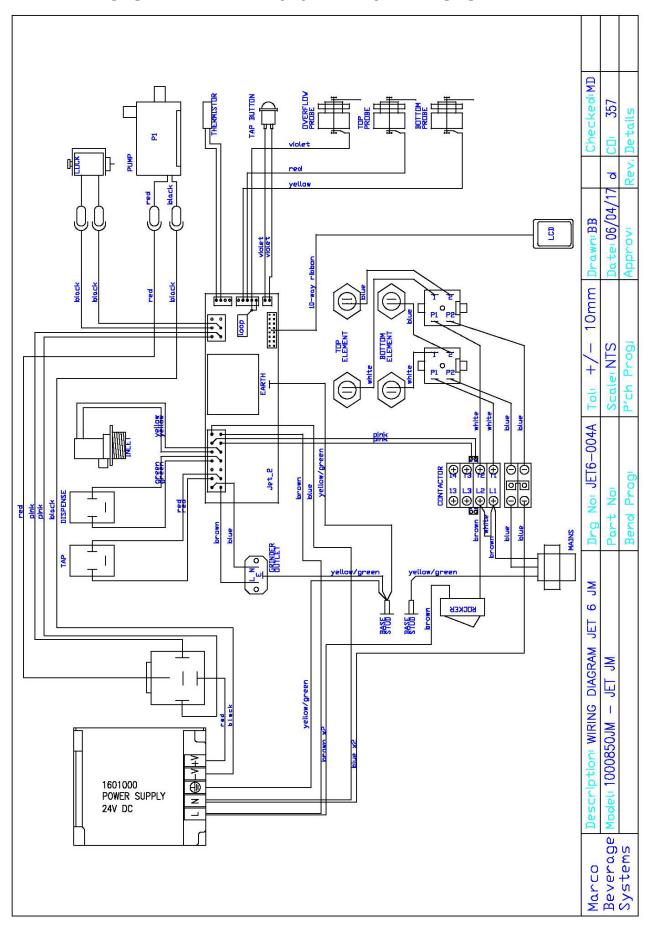


WIRING SCHEMATIC 5.6kW US VERSION

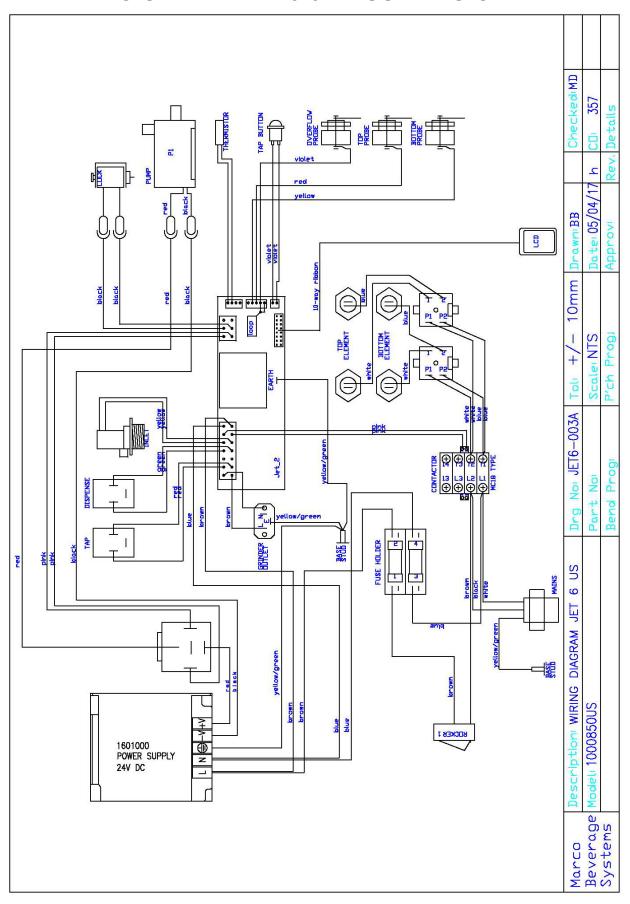

WIRING SCHEMATIC 2.8kW US VERSION

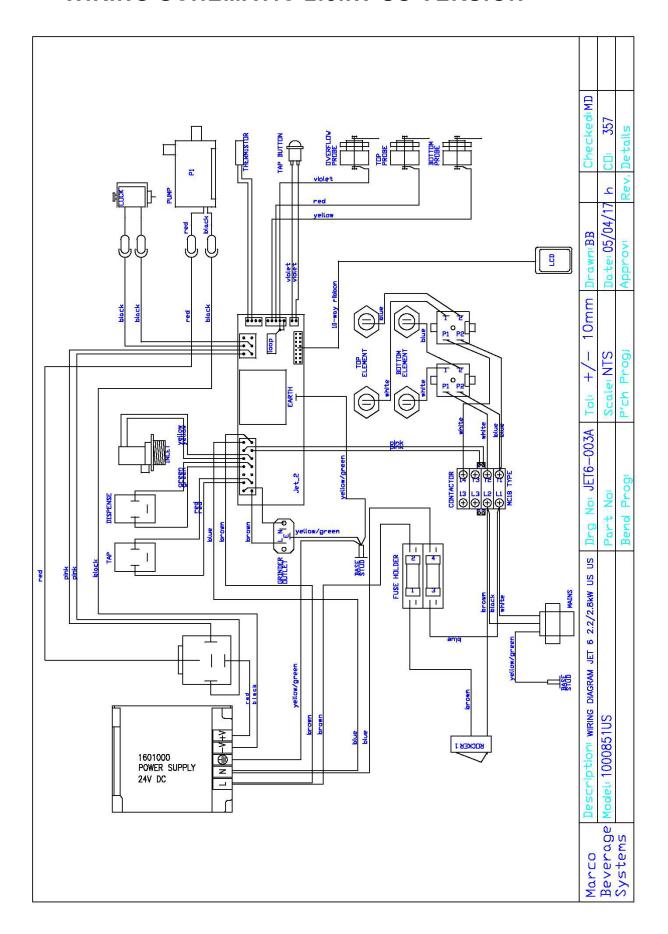

WIRING SCHEMATIC 3-Phase VERSION

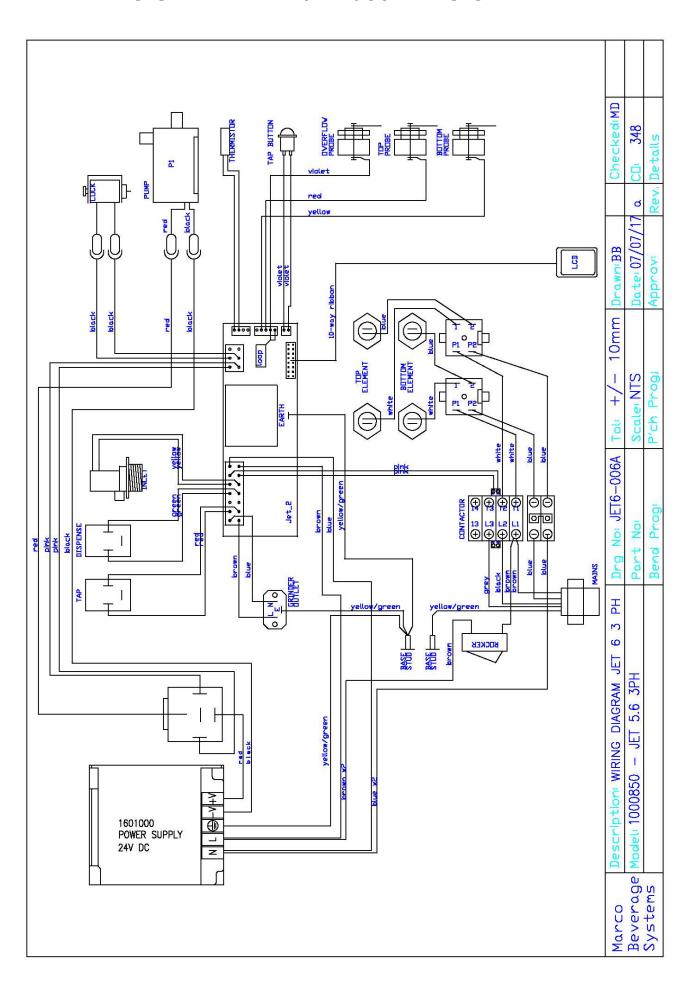

GENERAL SPARE PARTS LIST (refer to earlier drawings for further parts listing)

Part Number	Description	
1500985	ELEMENT 2.8kW 230V	
1500987	Element 1.8kW 200V (US & MJ)	
1600691	Thermistor Assembly	
1502260	Solenoid 24VDC Basket Lock	
1502158	Valve 12mm Bore 230V 30E Vent Vend	
1502161	Valve 12mm Bore 230V 40E Vent Vend	
1502151	VALVE DUMP 240Vac	
1502164	Valve 12mm Bore 230V U35E	
1502171	Valve Inlet 90 Deg 220V - 2L/min	
1800301	Gasket Sprayhead 186x146x6mm	
1801175	Sprayhead Disc 156mm with grommets	
1800690	Water Inlet Hose WRC	
1800692	Hose Water Inlet 3/8 NPT (only for US)	
1800693	Hose Water Inlet 9/16"-24 UNEF (3/8 Compression) (only for	
	US after S/N 0817xxxx)	
1501559	Pump Topsflo 24V DC	
1600201	P.C.B Jet Control	
1600200C	P.C.B. Touchscreen 3.2inch Complete	
1501182	Cable Ribbon IDC 10way to 16Way 1m	
1500840	CONTACTOR B&J 240V AC	
1800770	O RING 4" RED SILICONE	
2300023	Basket Complete 233x136mm (with syphon)	
2300277	Driptray Complete JET	
1800402	Grommet Silicone 4mmID 7mmPanel dia	
2301338	Probe Triple 120mm/65mm/no tab	
1700169	Insulated Urn 6L	
8000151	Filter Paper Jet 380-152 (52gsm)	
8000240	Urn Cleanser (800g Tub)	

