

UNDERCOUNTER

SERVICE MANUAL

Ecoboiler UC45

1000743 (2.8kW)
1000744 (5.6kW)
1000744US (5.6kW)
1000745 (8.4kW)
1000753 (2.8kW)
1000754 (5.6kW)
1000755 (8.4kW)
1000743A (2.8kW)
1000744A (5.6kW)
1000745A (8.4kW)
1000753A (2.8kW)
1000754A (5.6kW)
1000755A (8.4kW)

Marco Beverage Systems Ltd.

63d Heather Road,
Sandyford Industrial Estate,
Dublin 18,
Republic of Ireland

Ireland Tel: (01) 295 2674
Ireland Fax: (01) 295 3715

UK Tel: (0207) 274 4577
UK Fax: (0207) 978 8141

1. INTRODUCTION:

The information provided in this manual is intended to assist in the installation and maintenance of the Marco Ecoboiler Water boiler. Please read the instructions carefully to prevent accidents and ensure an efficient installation.

This manual is not a substitute for any safety instructions or technical data affixed to the machine or its packaging. All information in this manual is current at the time of publication and is subject to change without notice.

Only technicians or service providers authorised by Marco should carry out installation and maintenance of these machines.

Marco accepts no responsibility for any damage or injury caused by incorrect or unreasonable installation and operation.

2. SAFETY INSTRUCTIONS:

- Read all instructions.
- To protect against electric shock do not immerse mains cord in water or other liquid.
- To prevent chafing of the cable, do not let the mains cord hang over the edge of a table or counter; or touch hot surfaces.
- Do not operate any appliance with a damaged cord, plugs, or after the appliance malfunctions or has been damaged in any manner.
- Switch off at the mains (unplug or disconnect from outlet) and turn off the water supply when not in use and before cleaning. Allow to cool before removing components.
- The use of spares and accessories not recommended by Marco may cause damage and/or injuries.
- Do not use outdoors. Do not place on or near a hot gas or electric burner.
- Do not use the appliance for anything other than its intended use.
- Save these instructions.

3. BASIC INSTRUCTIONS:

3.1. INSTALLATION DETAILS:

Installation details:

Power Supply:

- 1000744, 1000744US, 1000744A, 1000754, 1000754A (5.6kW/230V, 6.1kW/240V) - This needs to be connected to a 30A isolator outlet.
- 1000743, 1000743A, 1000753, 1000753A (2.8kW, 230V) – connected via a 13A plug.
- 1000745, 1000745A, 1000755, 1000755A (8.4kW, 230V) – requires a 3 Phase (3L,-N-PE) connection.

A qualified electrician should carry out such connections. .

Water Pressure: 5 - 50 psi (min.-max.) 35 - 345 kPa (min.-max.)

Installation procedure:

Mains water pressure required (limits): 5-50psi (35-345kPa)

Fit a stop Valve on a cold water line and attach a 3/4" BSP male fitting, (e.g. 3/4" x 1/2" 311 or washing machine type stop valve).

For US versions use 3/8" NPT male fitting

Connect straight tailpiece of the hose to the stop valve fitting. Make sure that the pre-attached sealing washer is fitted.

Turn on the water to flush any impurities, dust etc. from the inlet hose and water pipe. Allow several gallons through.

Connect right-angled tailpiece of the hose to the inlet valve of the boiler (again 3/4" BSP).

Make sure the sealing washer is fitted here also.

Turn on water and check for leaks.

If the overflow vent is plumbed it must be plumbed with a tundish device.

This equipment must be installed with adequate backflow protection to comply with all applicable federal, state and local codes.

NOTE: In time-dispense application, supplied non-return valve may be fitted into the font silicone connect to the water font connection. Ensure the black line on the non-return is in the correct orientation. (Black line to the bottom)



3.2. OPERATION:

- Check that all installation procedures have been carried out.
- Ensure water valve is open.
- Connect the machine to the mains power and switch the rocker switch on the top of the machine into the ON position.


Ecoboiler :

The Tri-colour LED on the front of the machine will show the current status:

LED	Status
AMBER	Tank below set point temperature. Machine is heating.
GREEN	Machine ready.
FLASHING RED	Diagnostics error. See <i>troubleshooting</i> . NOTE: It is normal for the machine to show two flashes error (<i>water level below elements</i>) once it is filling for the first time.

Ecosmart :

- The “power on” light will glow green and the machine will fill to a safe level, above the elements, before heating. The display will show the current water temperature and the status “Filling...”
- The “Ready/Status” light will cycle two red flashes while the machine is filling to the safe level.
- After this amount of water has heated to about 92°C the boiler will draw more water in until the temperature drops by 1 or 2 degrees. The boiler will then heat again. This heat fill cycle continues until the boiler is full.
- While filling, the “Ready/Status” light will remain blank.
- The “Ready/Status” light will glow green when the machine is both full and up to normal operating temperature. For 10L machines allow approx 30 minutes.
- The boiler is now ready for use – the display will show the Water Temperature and the status “READY”.
- The Boiler may now be used to dispense Hot Water to the preset factory settings.
 - 90°C
 - Push and Hold operation
 - Continuous flow – no pulsing
 - Auto Heat Fill Mode.

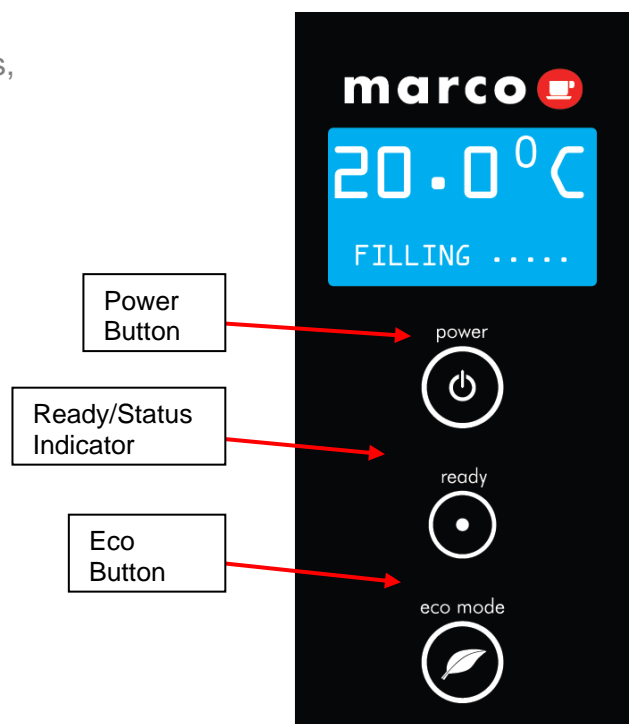

NOTE:

Because the boiler is electronically controlled no priming is necessary. The element cannot switch on until a safe level of water is reached.

3.3. TEMPERATURE CALIBRATION

3.3.1 Eco Boiler version

The Ecoboiler control PCB (1600345) has the ability to have the desired set-point temperature at whatever setting is required. During manufacture of the PCB it is set to the default temperature of around 90°C.

If the temperature setting needs to be modified on-site please follow the steps below:

1. To Enter Calibration mode:
 - a. Turn the machine off at the mains power supply.
 - b. Then, whilst depressing the tactile switch on the PCB, turn the mains power back on.
 - c. All available LED's on the front panel will now blink continuously.
 - d. The machine is now in Calibration mode.
2. In Calibration Mode the machine will heat continuously until the tactile switch on the PCB is pressed for a second time (NB: The tactile switch should be pressed for at least 1 second)
3. Using a thermometer to measure the temperature at the thermistor pocket, the machine should be allowed to reach the desired set-temperature. (NB: It may be necessary to let the unit cool down if the desired set point is lower than the units current temperature)
4. Following a correct calibration procedure the tank temperature should be maintained within 3°C of the desired set-point temperature.

In the event of an incorrect calibration process the steps below should be followed:

5. If the tactile switch is pressed too early and the temperature is set lower than desired, the tester should simply repeat calibration.
6. If the tactile switch is pressed too late and the set temperature is too high, the tester will need to wait for the temperature in the tank to cool, or add cool water, and then repeat calibration.

3.3.2. Eco Smart version

- Press and release Power and ECO buttons simultaneously.
- User setup screen will appear on the display.
- Current preset temperature will be shown in the first line of the screen.
- Use ECO button to increase value (button can be held for repeated increase). Once the value goes above the max value (99.5°C) it will reset to 60°C and start incrementing from that value.
- Once you set new temperature use Power button to scroll through other options until you find SAVE AND EXIT and press ECO button to accept.
- Machine will reset and go back into main screen.

NOTE: Make sure that the temperature is at least 2°C below the boiling point (which may vary between 90 and 102°C depending on the air pressure). As a rule of the thumb the max temperature should not be set for more than 97.5°C.

3.4. TIME/VOLUME DISPENSE CALIBRATION

3.4.1. Setting time dispense for two left hand side pumps.

- Open the service door on the front panel
- Once the machine is full and heated up (the status LED glowing green) press the tactile switch on the TOP control PCB (timer board).
- Both pumps will turn on and off for 0.1s - that will be heard as a click meaning that the timer is in the calibration mode. For 3 pump version see note 8 below.
- Place an empty cup (measuring jug) underneath the font that is to be calibrated.
- Press and hold a font button until you get the right amount of water. The water does not have to be dispensed in a single push - if the button is pressed few times the overall time will be used.

- Do the same action with the other font if needed. If only one font is calibrated, settings for the other will not be altered.
- The minimum time possible for the time dispense operation is 1s. Setting the dispense time for less (quick font button click) will set the font back into "push & hold" mode.
- After the volumes are set properly press the tactile button on the timer board once again.
- Both pumps will turn on and off for 0.1s twice - that will be heard as a double click meaning that the timer is out of calibration.
- Please note that there is no given order which font is to be calibrated first - in fact they may be calibrated at once or only one may be calibrated (leaving the settings of the other unaltered).
- If there is no response from the user in the calibration mode (none of the font buttons pressed) for more than 25 seconds the timer will end the calibration (double pump "click" will be heard).
- The maximum allowable time of dispense is 25 seconds. Any longer times will be cut down to 25 seconds.
- The resolution of the time measurement is 0.1s.
- The timer board has its own clock on board therefore power line frequency is not used to measure the time.

3.4.2. Setting time dispense for right hand side pump (3 font version only)

3.4.2.1. Eco Boiler version

- Open the service panel.
- Make sure that the machine is powered, filled and heated (ready lamp green).
- Press calibration tactile button on the bottom control PCB for a second until status lamp starts blinking red-green.
- Set new dispense time by pressing dispense button to obtain the required output volume of water. Button may be pressed several times – all times / volumes will be added together.
- To confirm and save new value press calibration button on the PCB for a second until the status lamp stops blinking.
- Setting dispense time / volume to zero (omit step 4) will make the machine work as "push & hold" (water dispensed as long as the button is pressed).

3.4.2.2. Eco Smart version

- Press and release Power and ECO buttons simultaneously.
- User setup screen will appear on the display.
- Click Power button to highlight TIME DISP option.
- Use ECO button to increase value (button can be held for repeated increase). Once the value goes above the max value 99.9s it will reset to 0 and start incrementing from that value.
- Setting dispense time to 0 will make the pump work in push-and-hold mode.
- Once you set new dispense time use Power button to scroll through other options until you find SAVE AND EXIT and press ECO button to accept.
- Machine will reset and go back into main screen.

3.5. TROUBLESHOOTING

The Ready/Status light signals various errors or problems.

A cycle of red flashes indicates an error. The number of flashes in a cycle corresponds to the symptom in the table below:

Status/Diagnostic light guide:

No of flashes	Symptom	Action required
2	Water level below elements. Normal when machine first fills.	Check water pressure , if this is OK then call service agent.
3	Temperature sensor failure (s/c)	Call service agent
4	Water not heating	Call service agent
5	Temperature sensor failure (o/c)	Call service agent
6	Machine not filling	Check water pressure.

Note: Some of the error sequences will be displayed if there is low water pressure. Please check that there is water pressure and that the water stop-valve is open before calling your service agent.

For a more detailed description of error indicators and corrective actions see section 4.7 of this manual.

2 FLASH CYCLE – BELOW LOW LEVEL

Display pattern:	<ul style="list-style-type: none">2 flashes then a short pause - repeated.
Electronic check and action:	<ul style="list-style-type: none">This indicates that the low level circuit is open i.e. the probe is not in contact with the water.The element is switched OFF at this stage and the inlet is left ON.(note that if this is a low probe wiring fault, the water will stop at the high level probe regardless of the status of the low level).This is a recoverable error i.e. the machine does not need to be reset when the problem is solved. (e.g. if a closed mains water stop valve is the problem, opening the valve will allow water into the machine and normal function will resume when the low level probe is reached)
Probable causes:	<ul style="list-style-type: none">The water level is below the low level probe, which is normal when the machine fills for the first time. (Can be flashing at start up when the machine is empty)The low level probe wire is disconnected, or there is another wiring fault (eg. a bad earth (return) connection between the PCB and the Tank)
Action required:	<ul style="list-style-type: none">Check that the water pressure is OK and ensure that the stop valve is open.Check that the inlet solenoid is working.If the water level is above the level of the low probe, check the probe circuit wiring

3 FLASH CYCLE – THERMISTOR OPEN CIRCUIT

Display pattern:	<ul style="list-style-type: none">3 flashes then a short pause - repeated.
Electronic check and action:	<ul style="list-style-type: none">This indicates that the Thermistor is measuring such a large resistance that it assumes the thermistor circuit is open.The element and inlet valve are turned OFF when this error is detectedThis is a recoverable error. When the correct range of resistance is measured, normal operation resumes
Probable causes:	<ul style="list-style-type: none">The thermistor probe is unplugged from the 4way connector on the PCB or the thermistor has failed open circuit.
Action required:	<ul style="list-style-type: none">Check that the thermistor is plugged in to the PCB correctly. If it is, replace the thermistor.

4 FLASH CYCLE – NOT HEATING

Display pattern:	<ul style="list-style-type: none">4 flashes then a short pause - repeated.
Electronic check and action:	<ul style="list-style-type: none">This checks that the temperature is increasing when the heater is on.Measures the rate that the temperature increases in a specified time. This error is only displayed after 20 mins of the heater being on continuously. When the error is detected, the element and inlet valve are turned off.This is a non recoverable error. The machine needs to be reset when this problem is solved.
Probable causes:	<ul style="list-style-type: none">The elements have failedWiring fault
Action required:	<ul style="list-style-type: none">Check that the resistance on the elements. If there is a reasonable resistance (15-25Ω) on the element it probably has not failed, so the wiring might be at fault.

5 FLASH CYCLE – THERMISTOR SHORT CIRCUIT

Display pattern:	<ul style="list-style-type: none">5 flashes then a short pause - repeated.
Electronic check and action:	<ul style="list-style-type: none">This indicates that the Thermistor is measuring zero resistance. It assumes the thermistor has failed short circuit.The element and inlet valve are turned OFF when this error is detectedThis is a recoverable error. When the correct range of resistance is measured, normal operation resumes.
Probable causes:	<ul style="list-style-type: none">The thermistor has failed.
Action required:	<ul style="list-style-type: none">Replace the thermistor.

6 FLASH CYCLE – NOT FILLING

Display pattern:	<ul style="list-style-type: none">• 6 flashes then a short pause - repeated.
Electronic check and action:	<ul style="list-style-type: none">• This checks that the water in the tank cools when the inlet solenoid valve is switched on.• This is a recoverable error. This checks that the water in the tank is cooled by when the inlet solenoid valve is opened. If the water pressure is within the specifications (5-50psi), the inlet solenoid should not be on for more than a few seconds.
Probable causes:	<ul style="list-style-type: none">• Mains water pressure problem or the mains water stop valve is closed.• Inlet solenoid valve failure.
Action required:	<ul style="list-style-type: none">• Check the mains water supply. (Note: Temporary loss of water pressure can occur in certain sites – particularly when various machines are plumbed to the same mains water supply.) If the water supply is restored machine will recover automatically.• NOTE: If the water supply is the problem, ensure that this is rectified or this error will re-occur.• If there is no problem with the mains water supply, check that the inlet solenoid valve is working.

3.6. MAINTENANCE:

Marco machines have been designed to give many years of trouble free service. Marco Beverage Systems manufacture and test to ISO9002:2000 standard. The only regular maintenance required is occasional de-scaling.

Descaling Procedure:

- Isolate machine from power supply.
- Isolate machine from water supply.
- ALLOW TO COOL COMPLETELY!
- Drain water from machine.
- Remove all lids.
- Remove as much scale as possible by hand, paying particular attention to level probes (White plastic with steel tab). Be very careful not to damage any attachments.
- Use ScaleKleen, Marco part No. 8000270 or similar. Follow instructions carefully.
- Thoroughly clean and flush the machine before re-use.
- Follow installation and first time operation instructions

3.7. CLEANING:

The exterior of these machines may be cleaned with a damp cloth and a light detergent. Do not use abrasive cloths or creams, as this will spoil the finish of the machine. Do not use a water jet or spray. Beware of accidentally operating the draw off tap or push button when cleaning the front of the machine.

3.8. LIMESCALE:

In common with all water boiler manufacturers, service calls resulting from limescale are not covered by warranty. Fitting a scale reducer is recommended, especially in hard water areas. This can reduce the build-up of scale but may not stop it altogether. The frequency that descaling is required depends on the local water supply; hard water areas need more attention. A scale reducer can reduce the build up of scaling, but may not stop it altogether. Descaling of the machine should ideally be carried out by qualified service personnel.

3.9. CAUTIONS AND SAFETY TIPS:

- This appliance must be earthed. If the moulded plug supplied is not used then ensure that the green/yellow cable is connected to a suitable earth.
- Risk of flooding. The hose supplied with this unit is non-toxic food quality tested to 190psi. However, a hose is not a permanent connection. It is, therefore, advisable to switch off boiler and close the stopcock valve when boiler is not in use, e.g. overnight, weekends etc.
- Risk of scalding. Beware of accidentally operating the water drawoff tap especially when cleaning the front of the boiler.
- The utmost care has been taken in the manufacture and testing of this unit. Failure to install, maintain and / or operate this boiler according to the manufacturer's instructions may result in conditions that can cause injury or damage to property. If in any doubt about the serviceability of the boiler always contact the manufacturer or your own supplier for advice.


4. Technical Data:

4.1. GENERAL DESCRIPTION:

		1000743/A (2.8kW)	1000744/A (5.6kW)	1000745/A (8.4kW)	1000753/A (2.8kW)	1000754/A (5.6kW)	1000755/A (8.4kW)	1000744US (5.6kW)
Dimensions	Height (mm)	650	650	650	650	650	650	650
	Width (mm)	420	420	420	420	420	420	420
	Depth (mm)	495	495	495	495	495	495	495
Performance	Immediate Draw-Off (litres)	45L	45L	45L	45L	45L	45L	45L
	Min. Hourly Output (L/hr)	27L	54L	81L	27L	54L	81L	54L
Electrical	Connection	2.8kW, 230V, c/w 1.5m flex and moulded plug - fused (BS1363).	5.6kW. must be connected to single phase power supply	8.4kW. must be connected to three phase power supply	2.8kW 230V, c/w 1.5m flex and moulded plug - fused (BS1363).	5.6kW. must be connected to single phase power supply	8.4kW. must be connected to three phase power supply	5.6kW. must be connected to single phase power supply
Plumbing	Fittings Pressure	0.75" BSP Food grade inlet hose supplied 5-50 psi (35-345 kPa)						

4.2. EXTERNAL ARRANGEMENT

FONTS MAY VARY

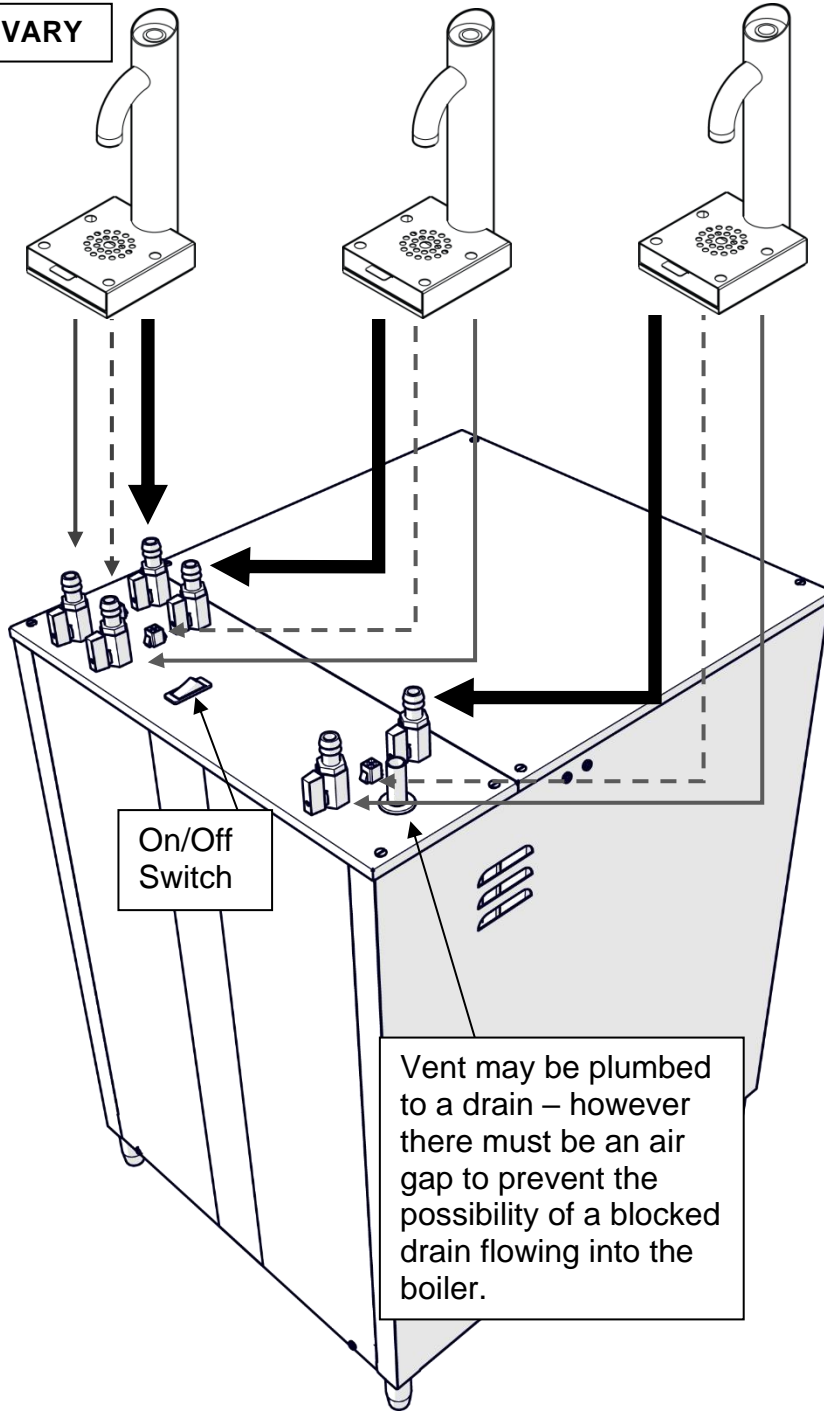

Depending on font the type the drip tray will either have to be manually emptied

or
Connected to a drain via drip tray outlet.

--- 2- wire
Electrical
Connection
Font to Boiler

— Font Water
Connection.

— Font
Recirculation
Connection

**Only machines
with the “A” suffix
will have 3 font
connections.**

Standard Fonts:

- Connect the clear hose to the water connection, shown above. Open ball valve fully.
- Connect the cable from the font to the electrical connection, as above.
- Recirculation connection must be closed at all times.

Recirculating Fonts:

- Insure your boiler is configured for a recirculating font.
- Connect grey hose from font to the recirculation connection, shown above.
- Connect the clear hose to the water connection, shown above. Open ball valve fully.
- Connect the cable from the font to the electrical connection, as above.
- Make sure the two hoses are straight and free of kinks.
- Adjust the ball valve on the recirculating connection to get desired flow rate from the font.

Connections 1000744US:


Figure shows the typical connection method for connecting font(s) to a US under counter boiler. Refer to the Font instructions which accompanied the Font unit for more details.

Fonts will vary.

Depending on font the type the drip tray will either have to be manually emptied

or

Connected to a drain via drip tray outlet.

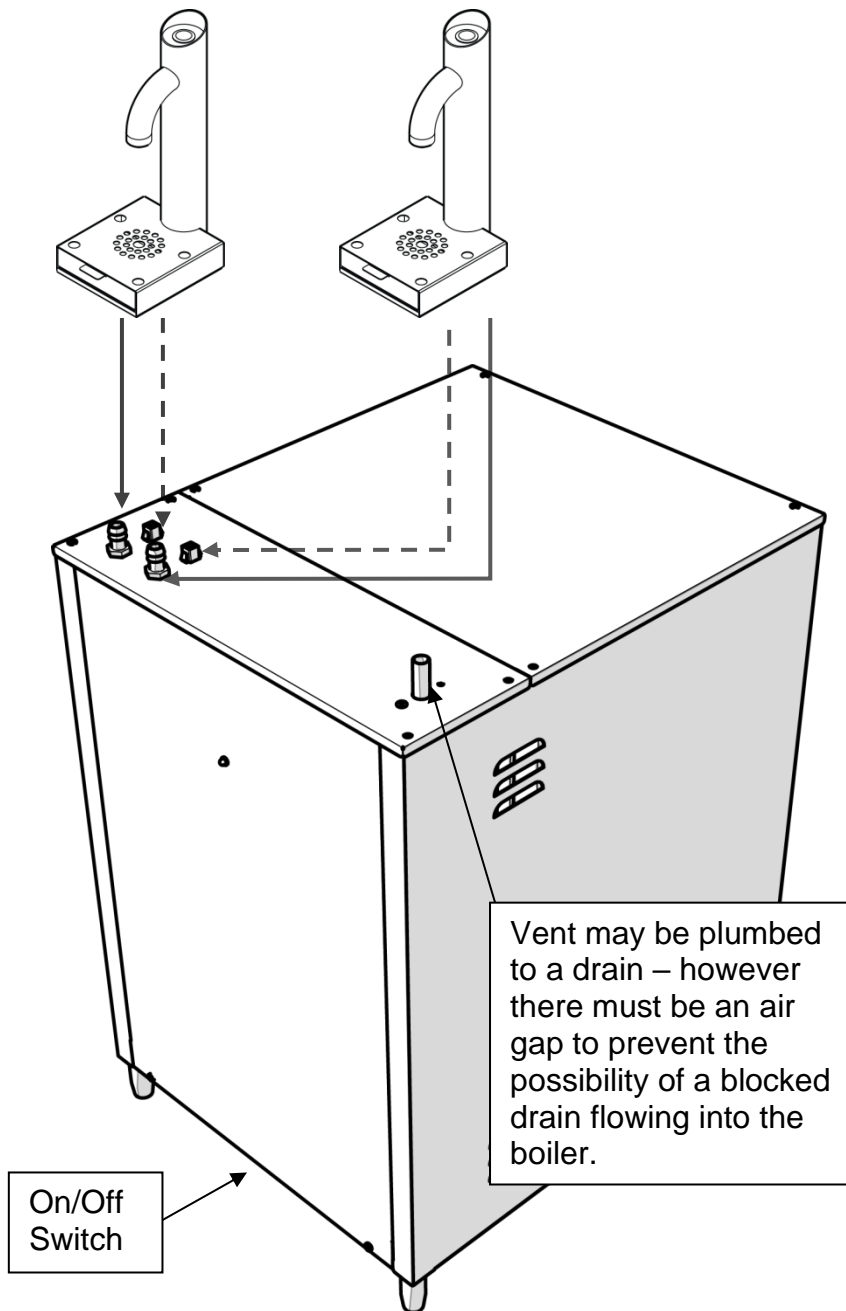

| 2- wire
| Electrical
| Connection
| Font to Boiler

| Font Water
| Connection.


Standard Fonts:

- Connect the clear hose to the water connection, shown above.
- Connect the cable from the font to the electrical connection, as above.

4.3. ACCESS TO INTERNAL COMPONENTS:

To access the tank:

Allow to cool. Remove the rear outer lid. To remove rear outer lid, undo 4 flat headed screws. Ensure that the tank is cool, before removing insulation and inner lid. To remove inner lid, undo 4 butterfly nuts.

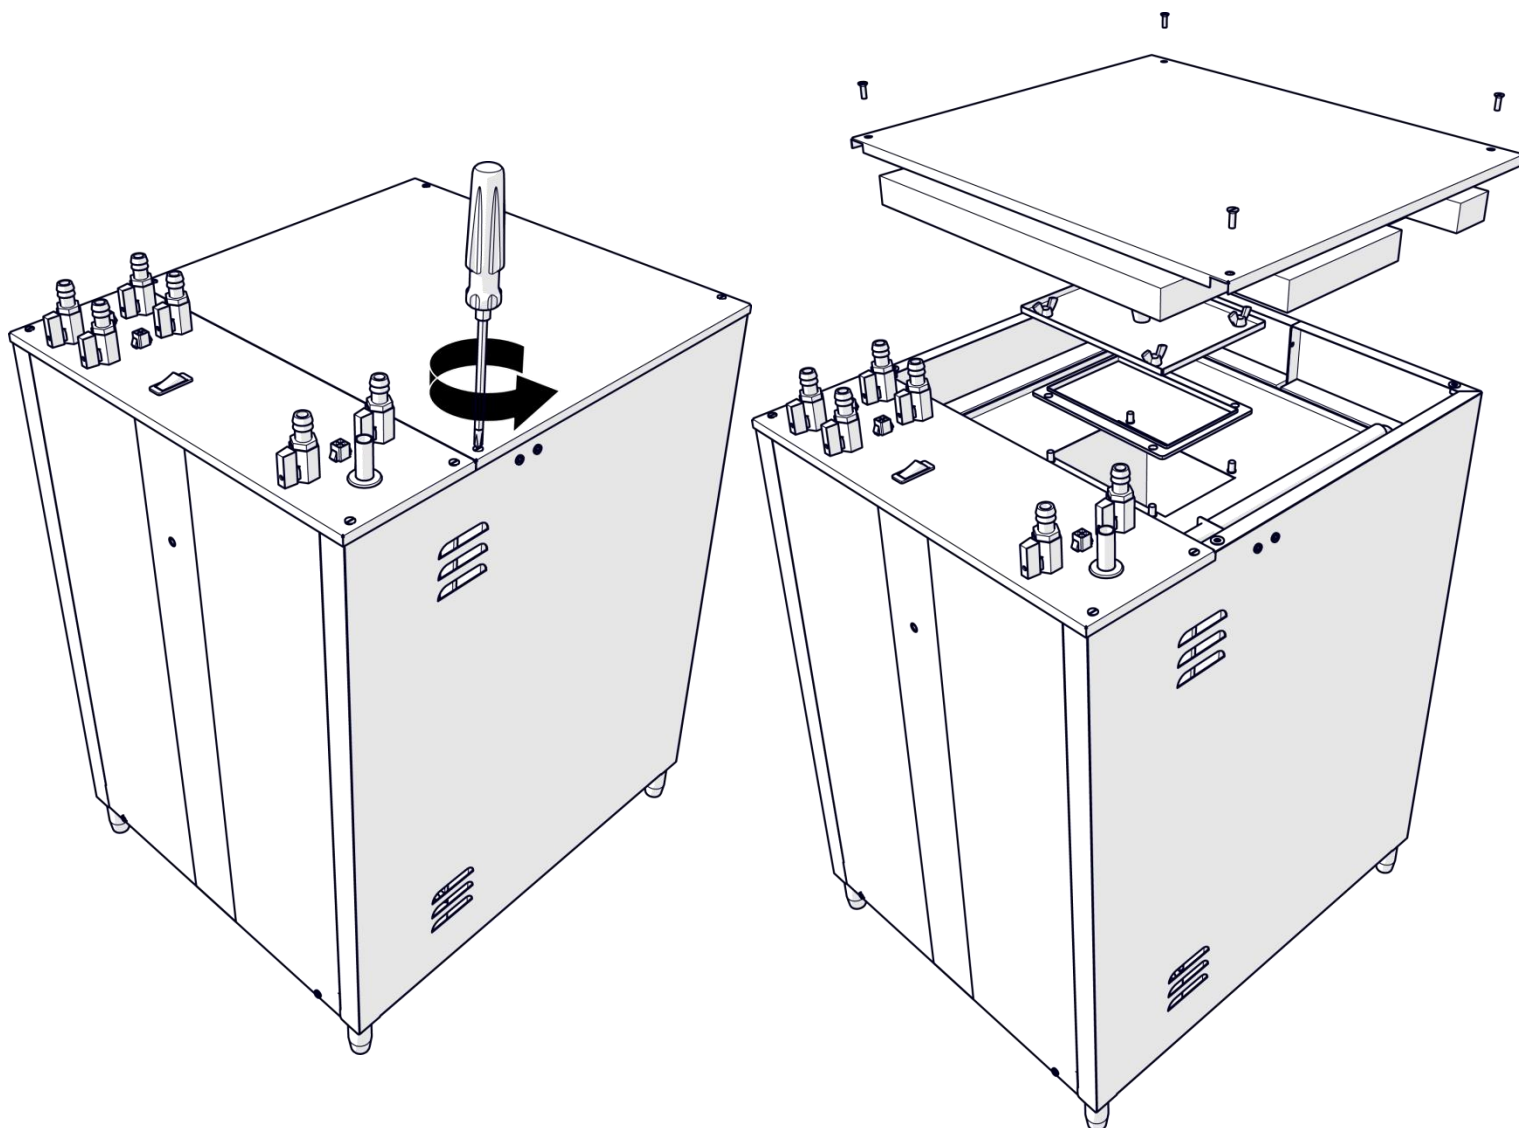


To access the internal components:

- Disconnect the machine from the electrical supply.
- Allow to cool sufficiently.
- Remove screws at points 1 & 2 on the front service panel and slide down panel and pull out from bottom
- *Place the panel to the side of the machine. This allows access to most of the internal components and the machine does not need to be drained for most maintenance or service operations.*
- The Tank can be drained by removing the plug from the end of the drain hose, and draining into an external drain or a large enough container.


Ball Valve on each font connection is shipped in the closed position.

The third font connection only exists on "A" suffix part numbers.

US variants do not require ball valve connection

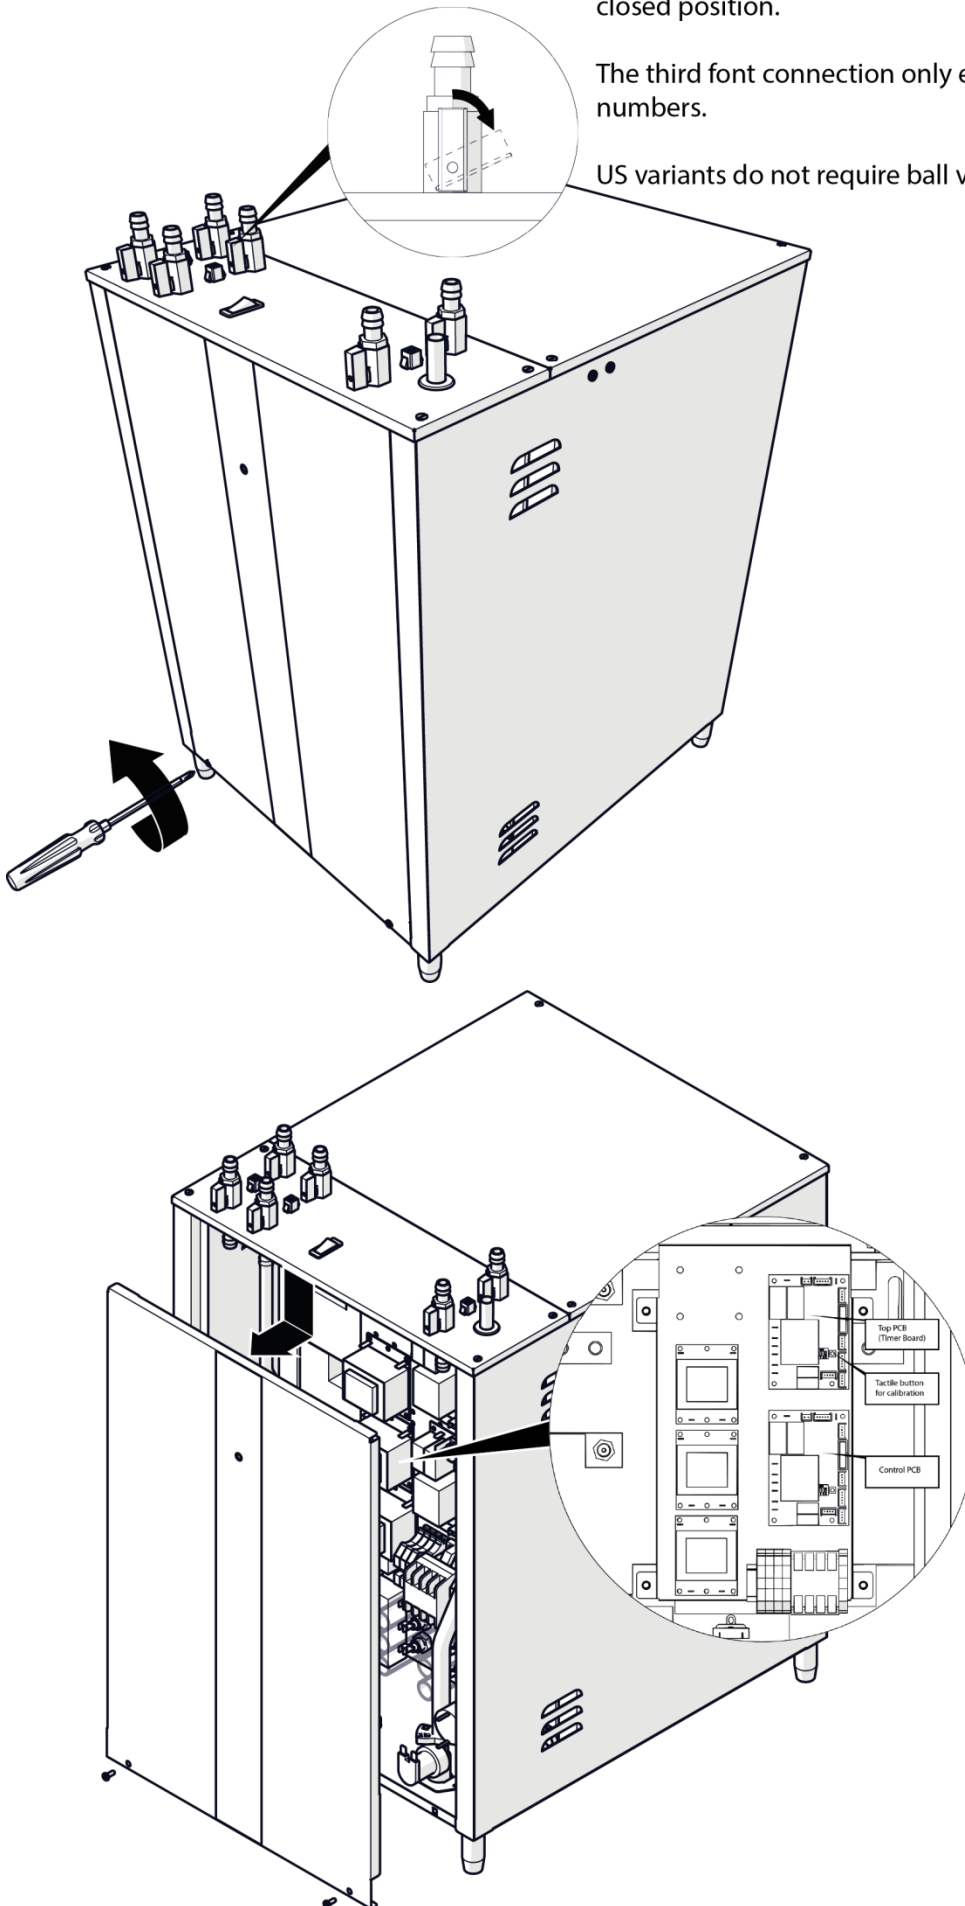

4.4. INTERNAL ARRANGEMENT:

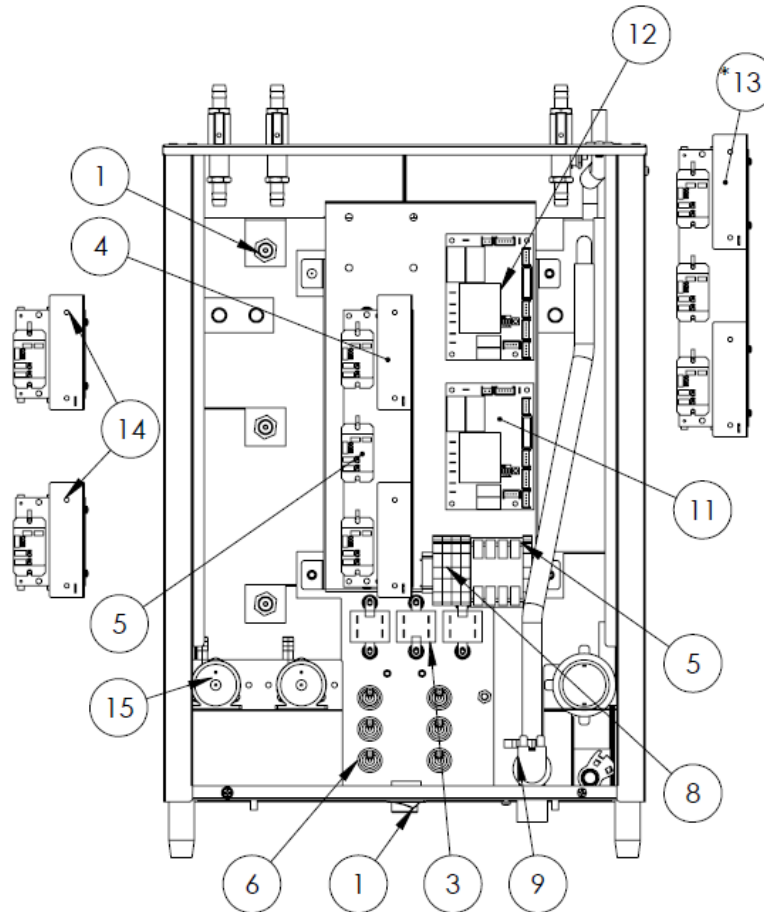

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	1501216	SWITCH POWER ON/OFF	1
2	2300463	Probe Assembly (40mm Tab)	3
3	1502075	Thermal Switch Dual Pole 125Deg	3
4	1601000	Power Supply 24V Dc	2
5	1600491	Relay 220V 40A	3
6	1500985	ELEMENT 2.8kW 230V	3
8	1502000	TERMINAL 6mm	3
9	1502190	VALVE INLET SOLENOID 240V 3/4"	1
5	1500840	CONTACTOR B&J 240V AC	1
11	1600345	P.C.B. Ecoboiler Control (1000740)	1
12	1600345	PCB Pump Timer	1
13	1600366K3D	Retro Fit Kit 3 Pump (machines before S/N 0717xxxx)	1
14	1600366K	Retrofit Kit 2 pump (machines before S/N 0717xxxx)	2
15	1501562	Pump Muller 42V Mini	3

Includes range:
1000743 (2.8kW),
1000744 (5.6kW),
1000744US (5.6kW),
1000745 (8.4kW),
1000746 (5.6kW),
1000753 (2.8kW),
1000754 (5.6kW),
1000754US (5.6kW),
1000755 (8.4kW),
1000743A (2.8kW),
1000744A (5.6kW),
1000745A (8.4kW),
1000753A (2.8kW),
1000754A (5.6kW),
1000755A (8.4kW),
1000746 (8.4kW Marine)

***NOTE:**
On MACHINES
1000753 (2.8kW), 1000754 (5.6kW),
1000755 (8.4kW), 1000753A (2.8kW),
1000754A (5.6kW), 1000755A (8.4kW)
USE PCB:
P/N: 1600354 P.C.B Eco Slave
ON ALL US VARIANTS USE
P/N: 1600375

4.5. PCBs:

4.5.1. PCB Layout:

Ecoboiler :

PCB Ecoboiler Control (1600345):

- Controls the heater switching
- Controls the water inlet switching
- Controls tank temperature/temperature adjustment

Ecosmart:

PCB Eco Slave (1600354):


- Controls the heater switching
- Controls the water inlet switching
- Controls tank temperature/temperature adjustment

PCB Ecosmart display (1600367) consists of:

- LCD screen
- Power On/Off button
- Power On LED
- Status/Ready LED
- ECO Mode On/Off Button
- ECO Mode On LED

4.5.2. PCB Eco boiler Control:


PCB Eco boiler Control (1600345) / PCB Eco Slave (1600354):

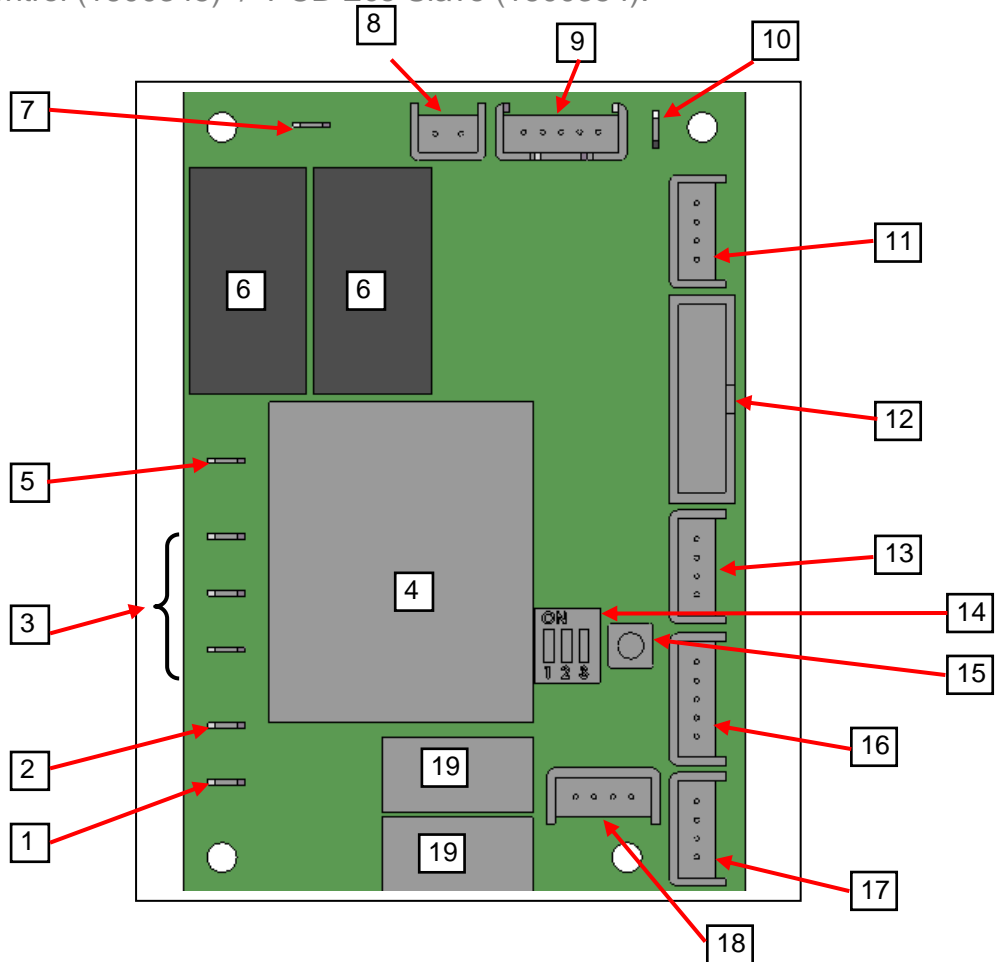

Item No:	Description:
1	Dispense Solenoid / Pump Tab
2	Inlet Solenoid Tab
3	Neutral Tabs
4	Transformer
5	Mains Live In Tab
6	Relays - Heater. Switch the element
7	Heater Tab
8	On/Off 2-way Connector. Short circuited on this Eco boiler.
9	LED 5-way Connector
10	Earth Tab
11	Daughter PCB Connector (low voltage). Connects to Daughter
12	External Connector
13	Thermistor Connector
14	Dip Switch – 3 way. Allows selection of software for specific machine
15	Tactile Switch. For use during calibration procedure (refer to Calibration in Sec 3.3)
16	Water Level – 5-way connector (low voltage). Connects to Low level and High level probes. Also connects push button on PB variants.
17	Button Connector – 4-way
18	Data I/O Connector – 4-way
19	Relays – Inlet Solenoid

4.5.2. PCB PUMP TIMER:


PCB Pump timer (1600358) :

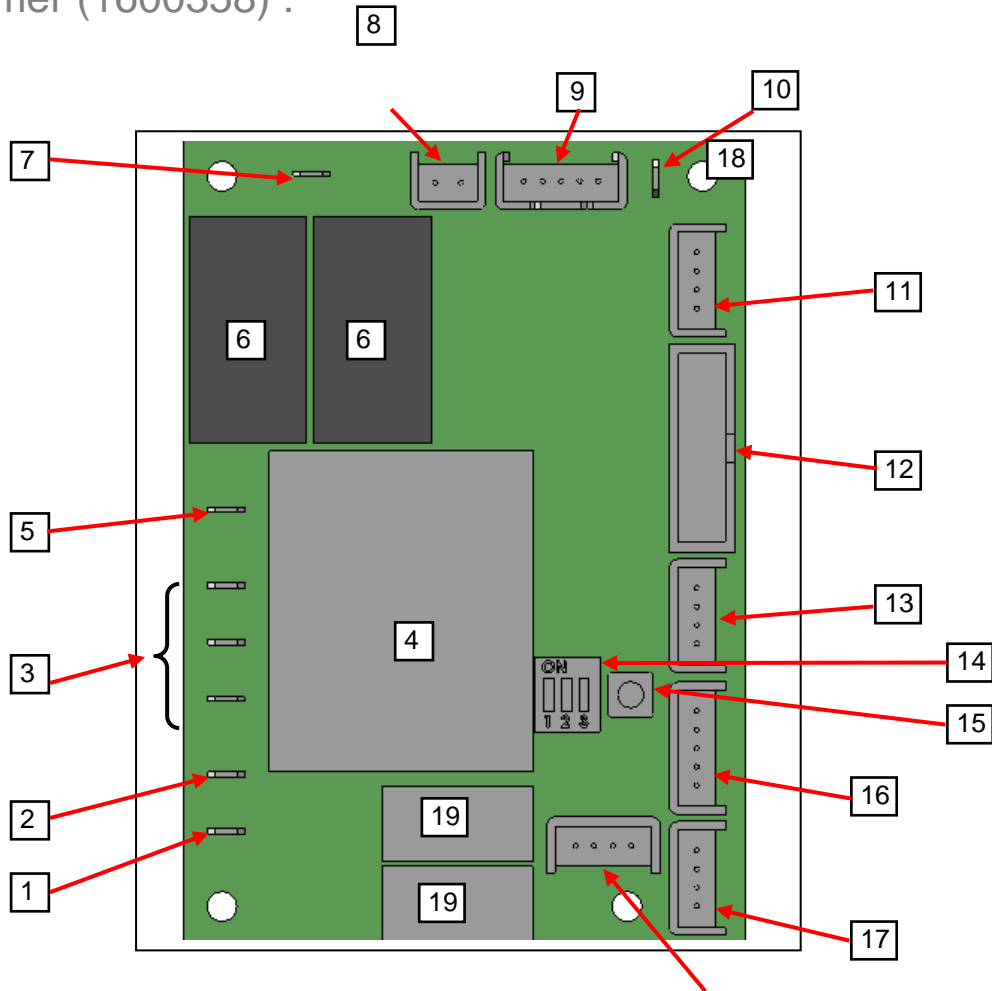

Item No:	Description:
1	Pump drive Tab
2	Pump drive Tab
3	Neutral Tabs
4	Transformer
5	Mains Live In Tab
6	Relays - Heater.
7	Heater Tab
8	On/Off 2-way Connector. Short circuited on this Ecoboiler machines
9	LED 5-way Connector
10	Earth Tab
11	Daughter PCB Connector (low voltage).
12	External Connector
13	Thermistor Connector
14	Dip Switch – 3 way. Allows selection of software for specific machine
15	Tactile Switch. For use during calibration procedure (refer to Calibration in Sec 3.3)
16	Water Level – 5-way connector (low voltage). Connects to Low level and High level probes. Also connects push button on PB variants.
17	Button Connector – 4-way. Font switches connected here.
18	Data I/O Connector – 4-way
19	Relays for pumps.

4.5.3. PCB ECOSMART Display (1600357)

Item No:	Description:
1	Power On LED's. Shows that machine is switched on
2	Power On/Off switch
3	Status LED's. Displays Error signals via a flashing RED LED
4	Eco Mode LED's
5	Eco Mode On/Off Switch
6	2 way connector – to Font connector
7	16 way connector – to PCB EcoBoiler 1600354

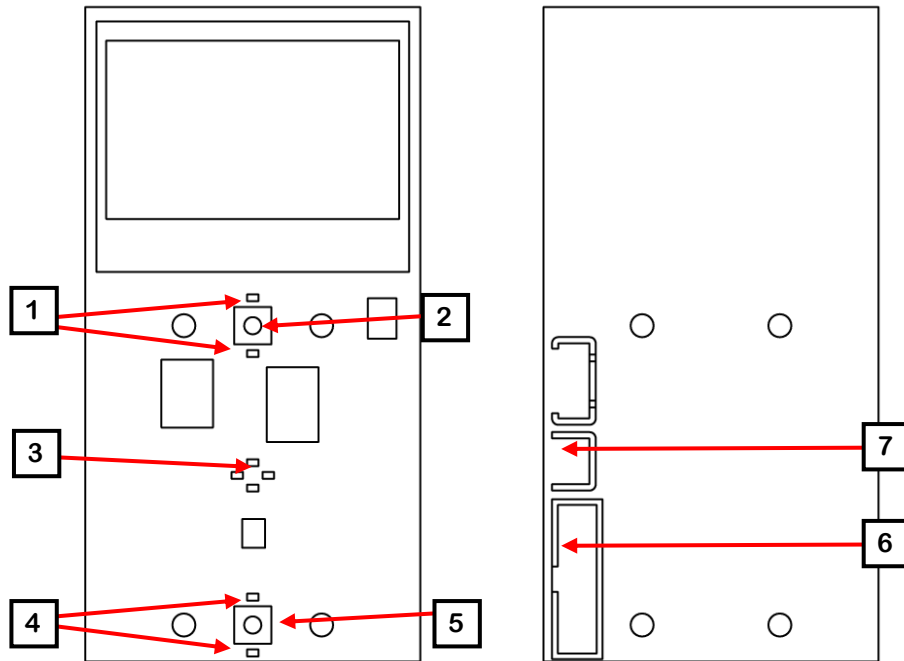


(For assembly order of 1600357 see :ECOS-020A PCB ECOSMART DISPLAY ASSEMBLY)

NOTE FOR THE ECOSMART RANGE IN ADDITION TO THE STATUS LED FLASHING TO INDICATE AN ERROR – THE DISPLAY WILL ALSO PROVIDE INFORMATION

4.7. Tank Components

The tank internals are detailed below.

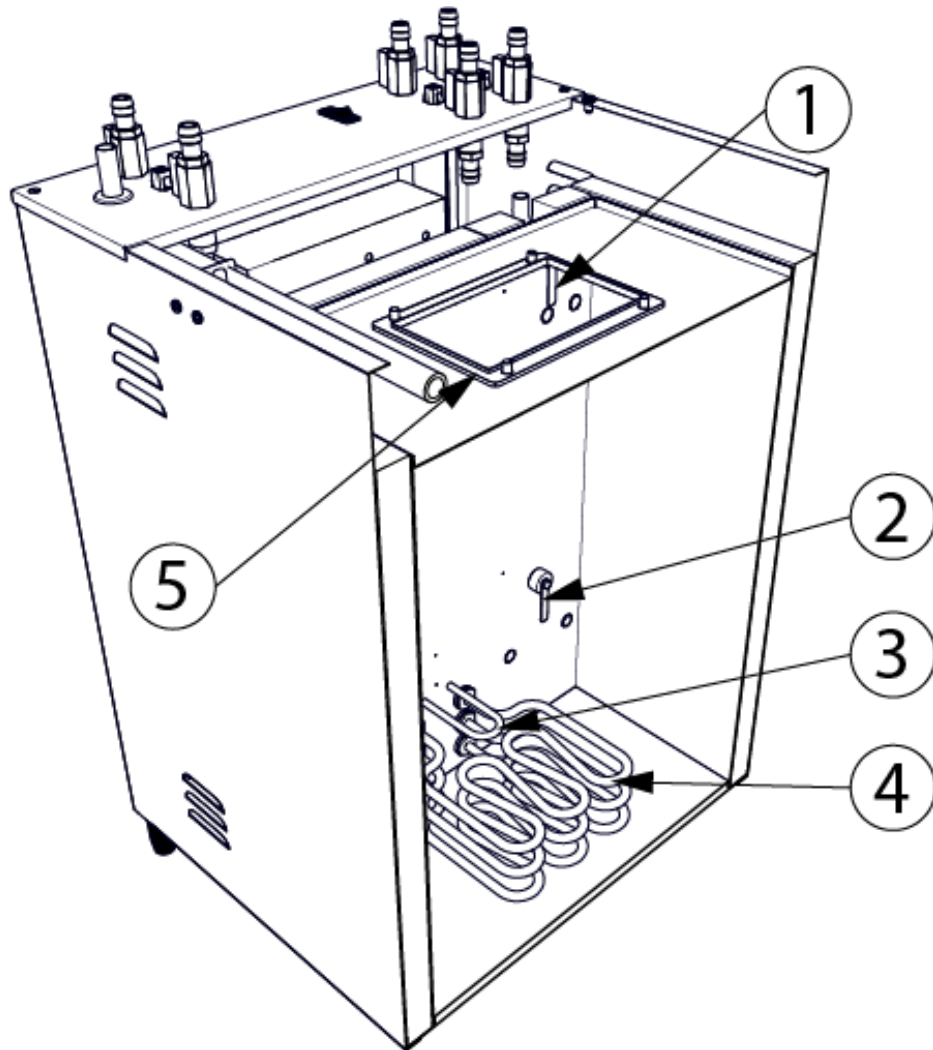

Item no:	Part number:	DESCRIPTION:
1	2300463	Probe Assembly – High position
2	2300463	Probe Assembly – Low position
3	N/A	Thermistor Pocket – ensure that this is not touching the element.
4	1500985	Element 2.8kW 230V (Butterfly)
5	1800306	Gasket Inner Ecoboiler

Care should be taken when cleaning inside the tank.


The level probes provide much of the control inputs into the PCB and are critical to the operation of the machine. The wiring to these should be checked regularly and the probes themselves should be cleaned whenever the machine is serviced.

4.8. Descaling Procedure


To descale the machine thoroughly:

- Unplug the machine.
- Disconnect from the water supply.
- Drain as much water from the tank as possible.
- Remove the lids and allow the machine to cool completely.
- Drain all the water from the machine.
- Attempt to remove as much scale as possible by hand.
- Reconnect machine and start up once again.
- Add a descale solution (follow instructions as given). Flush the machine thoroughly before use


4.9. Wiring diagram:1000743 1000743A

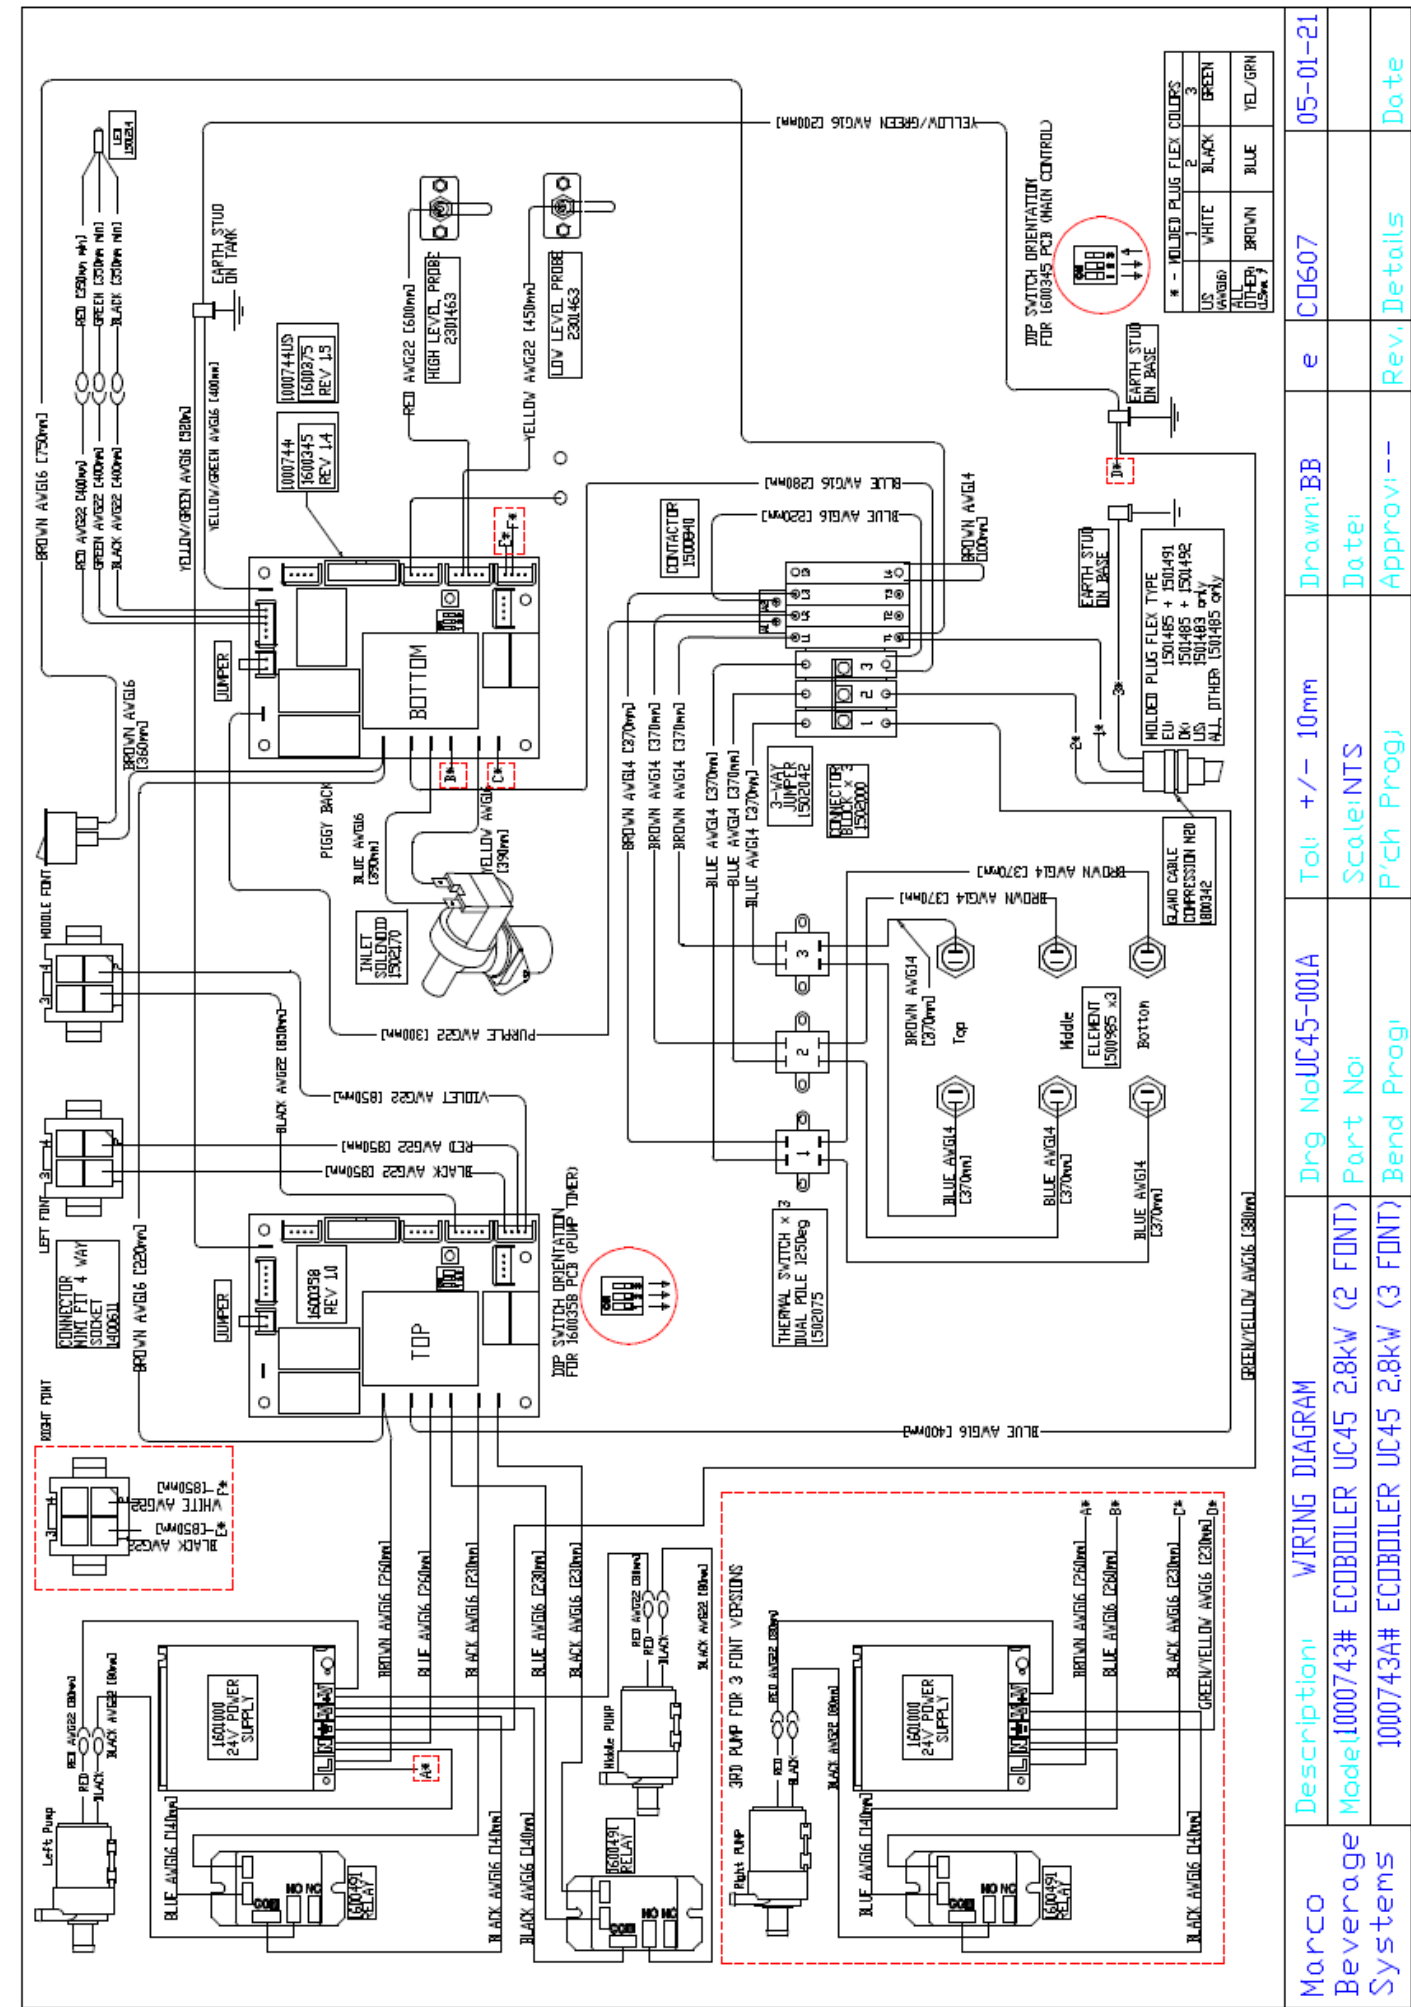

4.10. Wiring Diagrams: 1000744 1000744A 1000744US

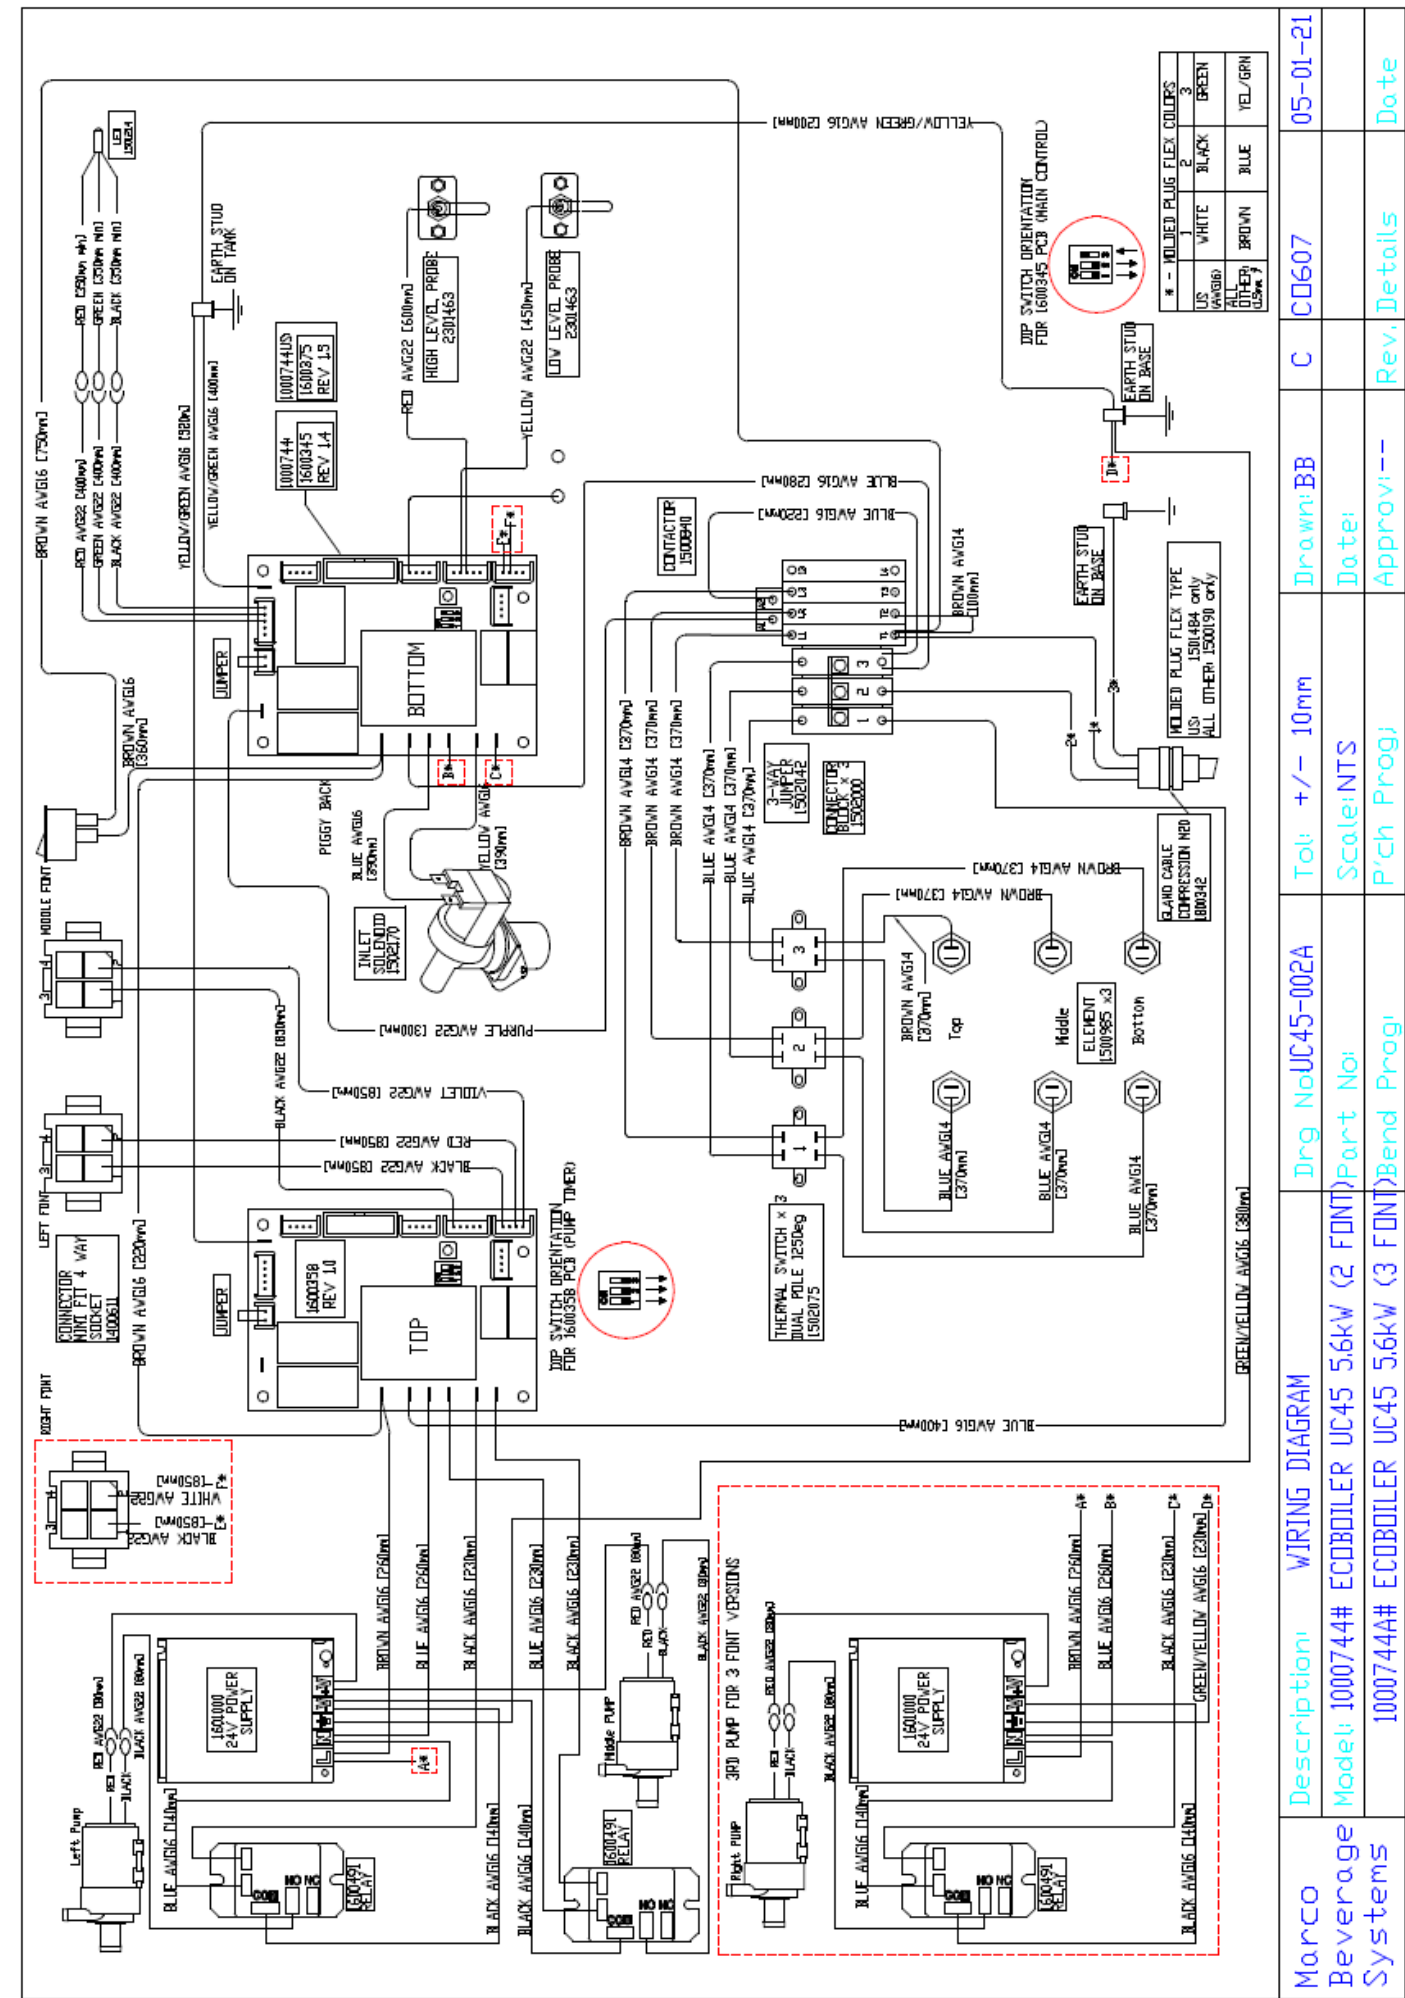


4.11. Wiring Diagram: 1000745 1000745A

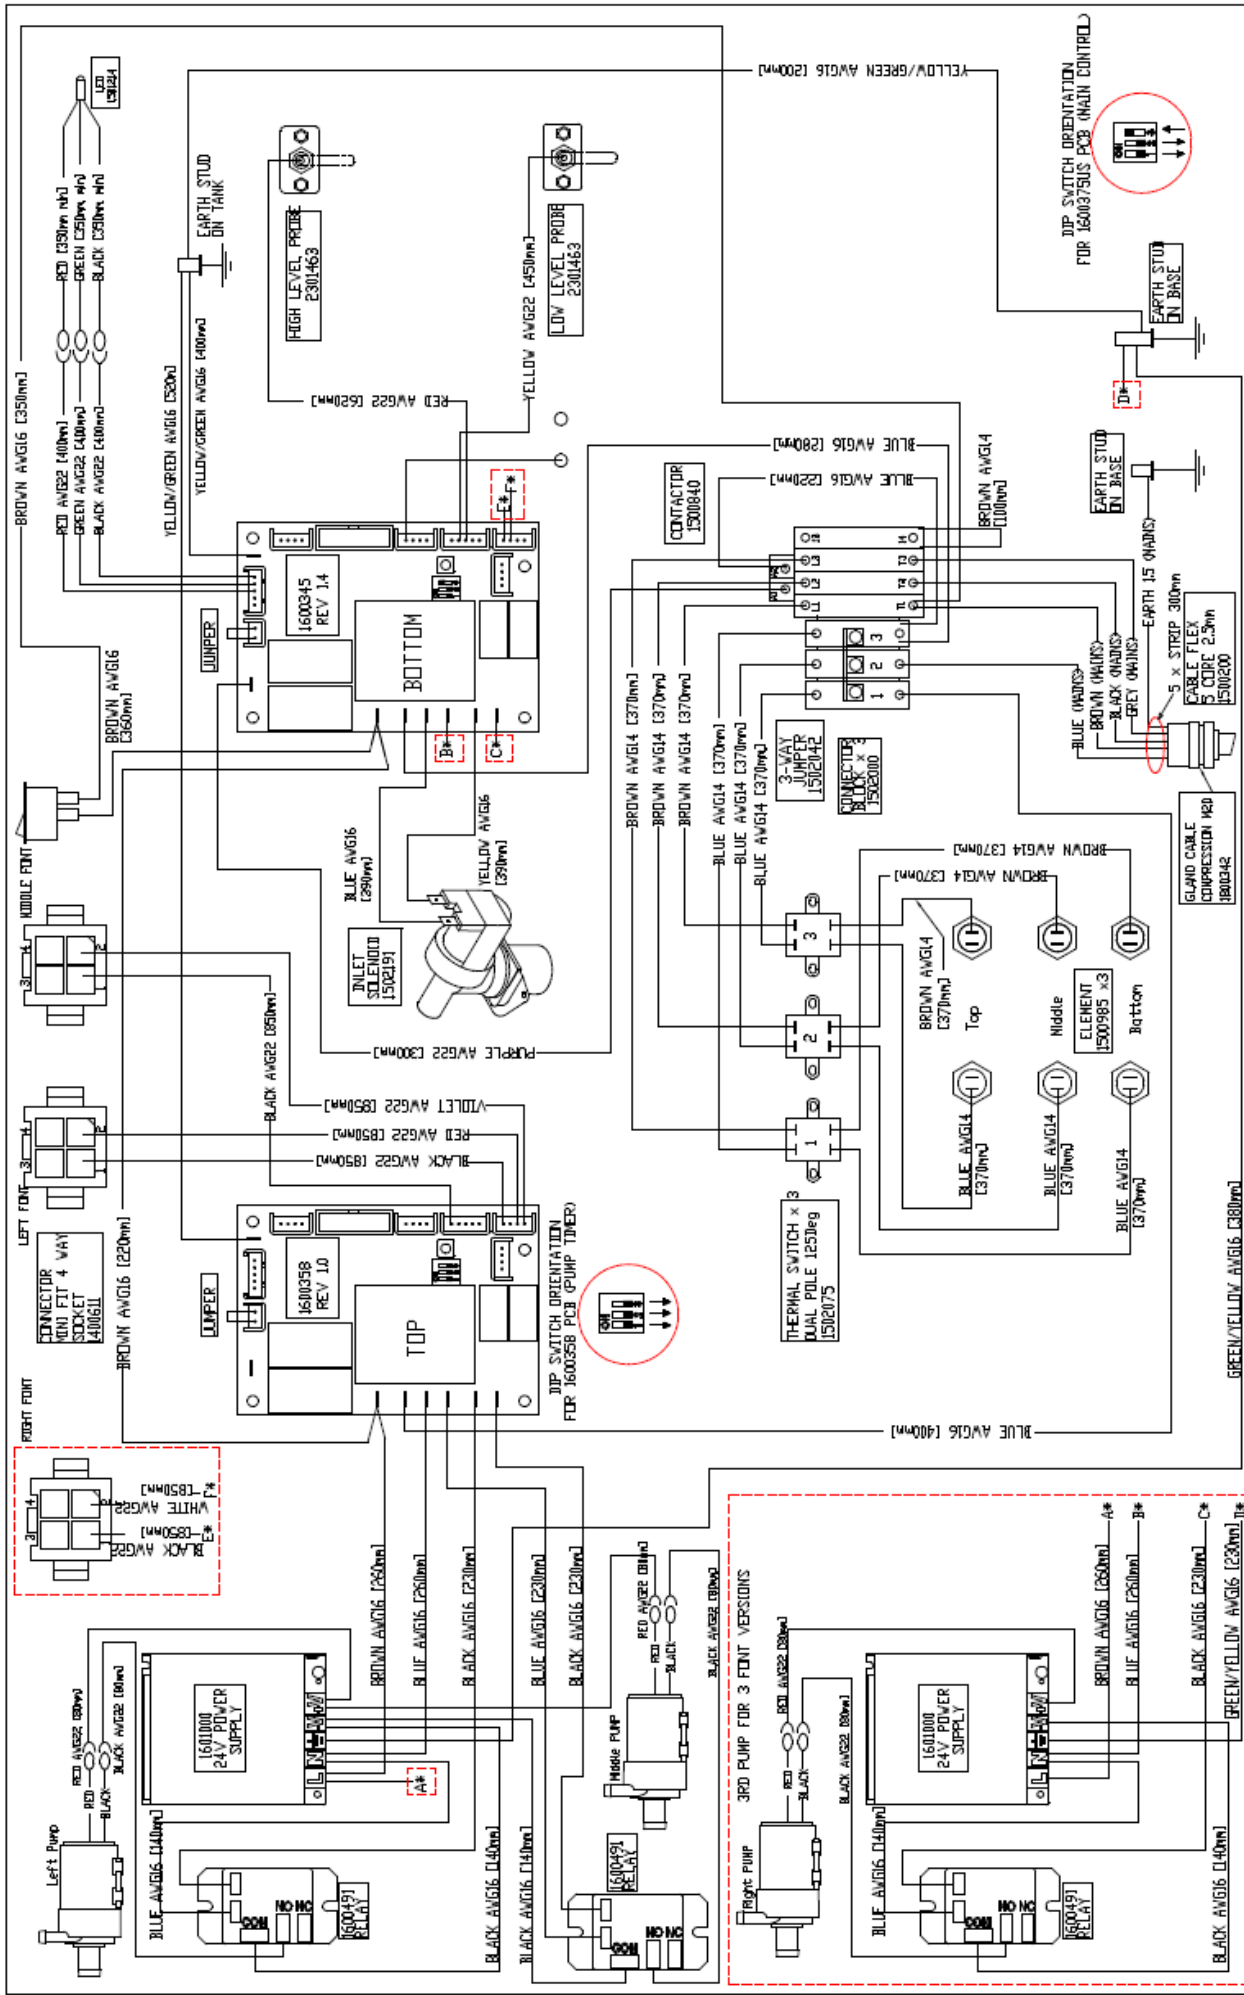


Marco Beverage Systems	Description: WIRING DIAGRAM	Dwg No:UC45-003A	Tol: +/- 10mm	Drawn:BB	d	CD607	05-01-21
	Model: 1000745# ECOBOILER UC45 8.4kW (2 F0NT)	Part No:	Scale:NTS	Date:			
	1000745A# ECOBOILER UC45 8.4kW (3 F0NT)	Bend Progi	P'ch Progi	Approvi:--	Rev:	Details	Date

4.12. Wiring Diagram: 1000753 1000753A

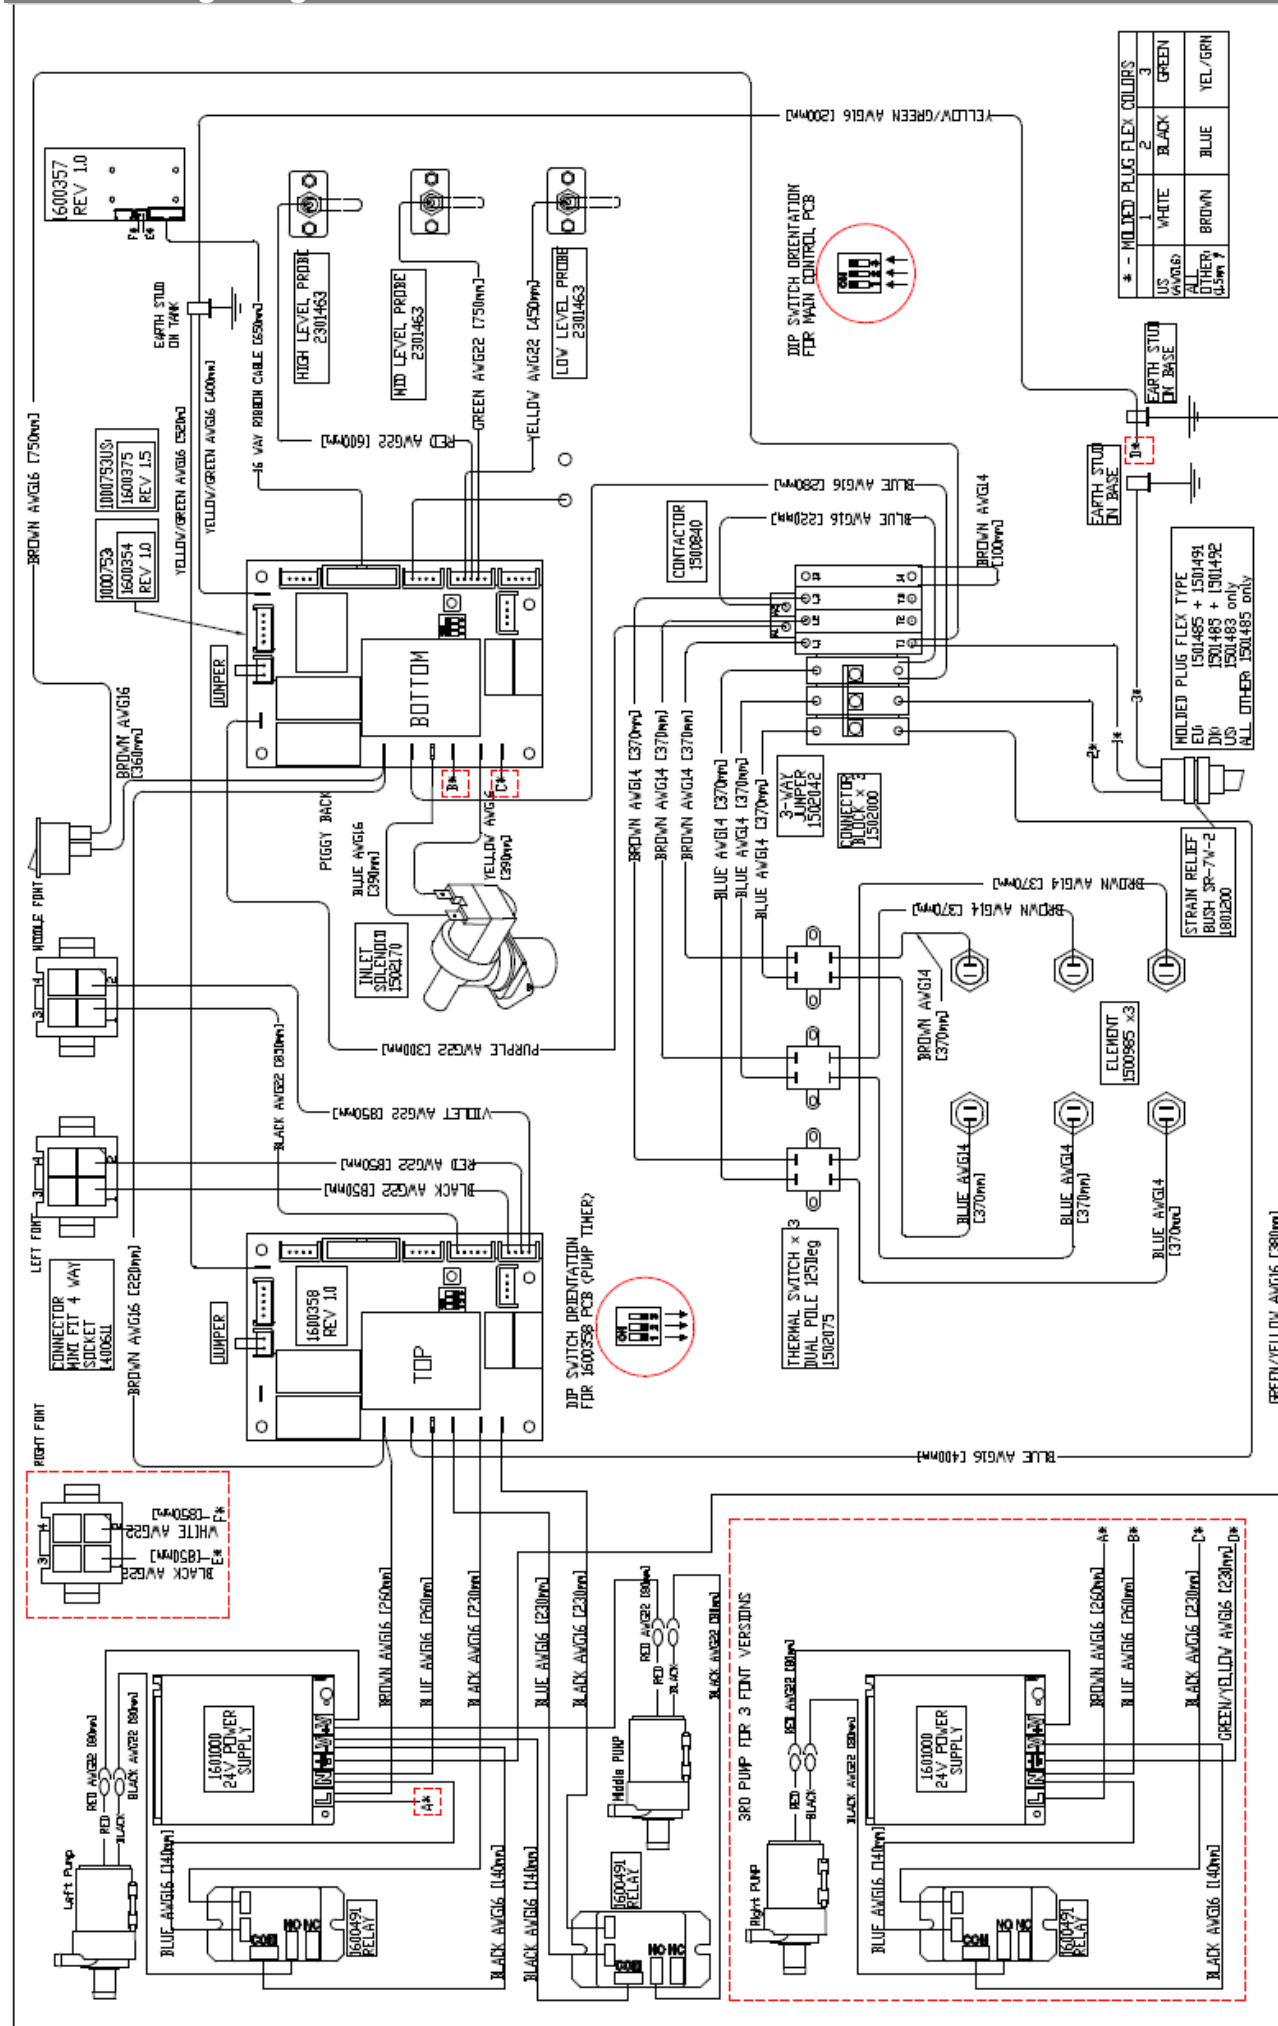


WIRING DIAGRAM				
Description:	Dwg No	UC45-004A	Tol: +/- 10mm	d
Model: 1000753# ECOSMART UC45 2.8kW (2 F0NT)	Part No:		Scale: NTS	Date:
1000753A# ECOSMART UC45 2.8kW (3 F0NT)	Bend Progi		P'ch Progi	Approvi--
Marco Beverage Systems				Rev, Details
				Date

4.12. Wiring Diagram: 1000754 1000754A

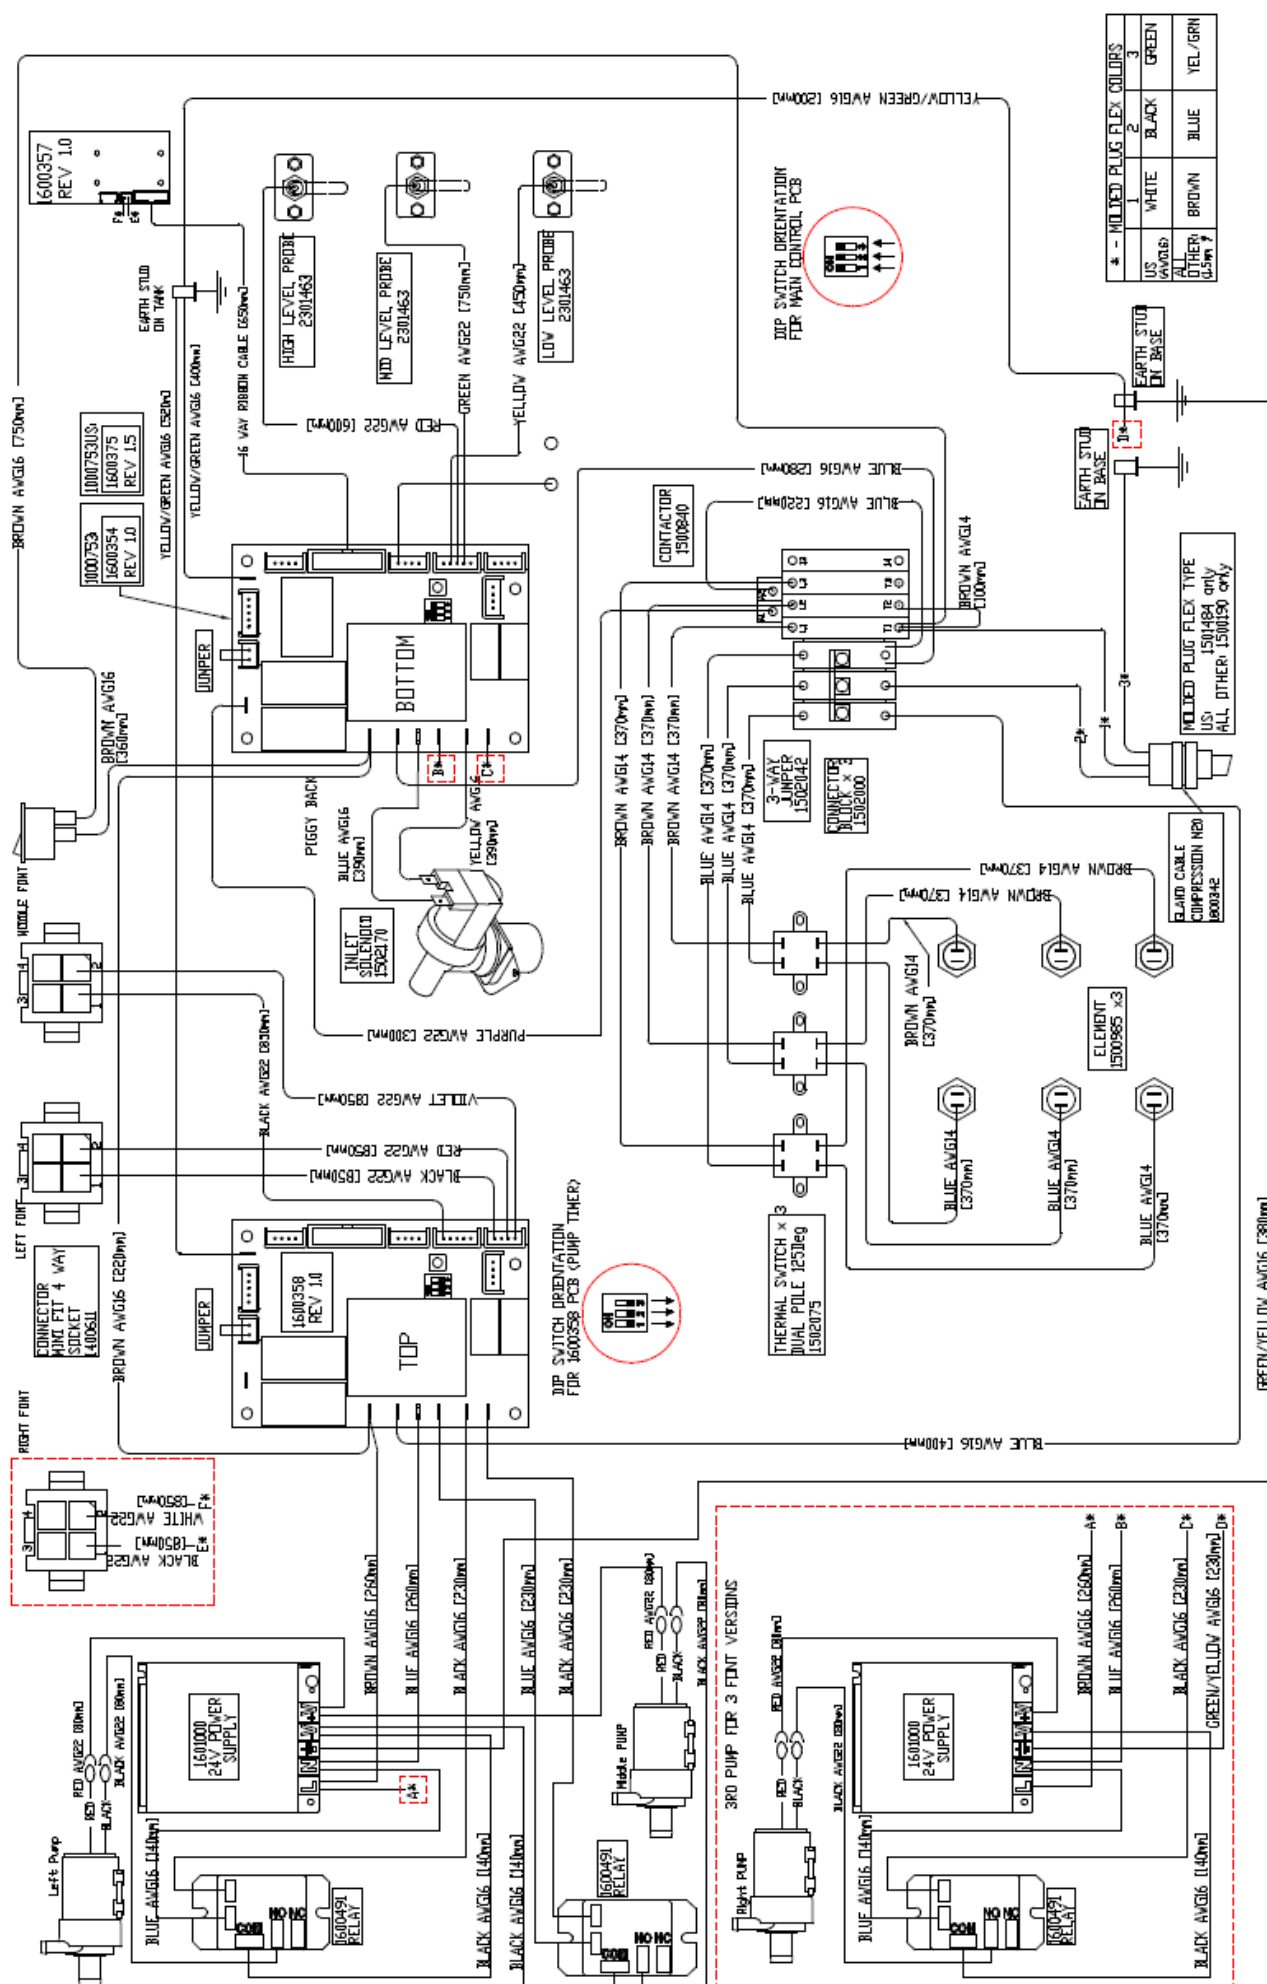


Description:		WIRING DIAGRAM	Drwg No UC45-005A	Tol: + / - 10mm	Drawn: BB	d	15-12-20
Marco Beverage Systems	Model: 1000754#	ECOSMART UC45 5.6kW (2 F0NT)	Part No:	Scale: NTS	Date:		
	1000754#	ECOSMART UC45 5.6kW (3 F0NT)	Bend Progr:	P'ch Progr:	Approvi: --	Rev: Details	Date

4.12. Wiring Diagram: 1000755 1000755A

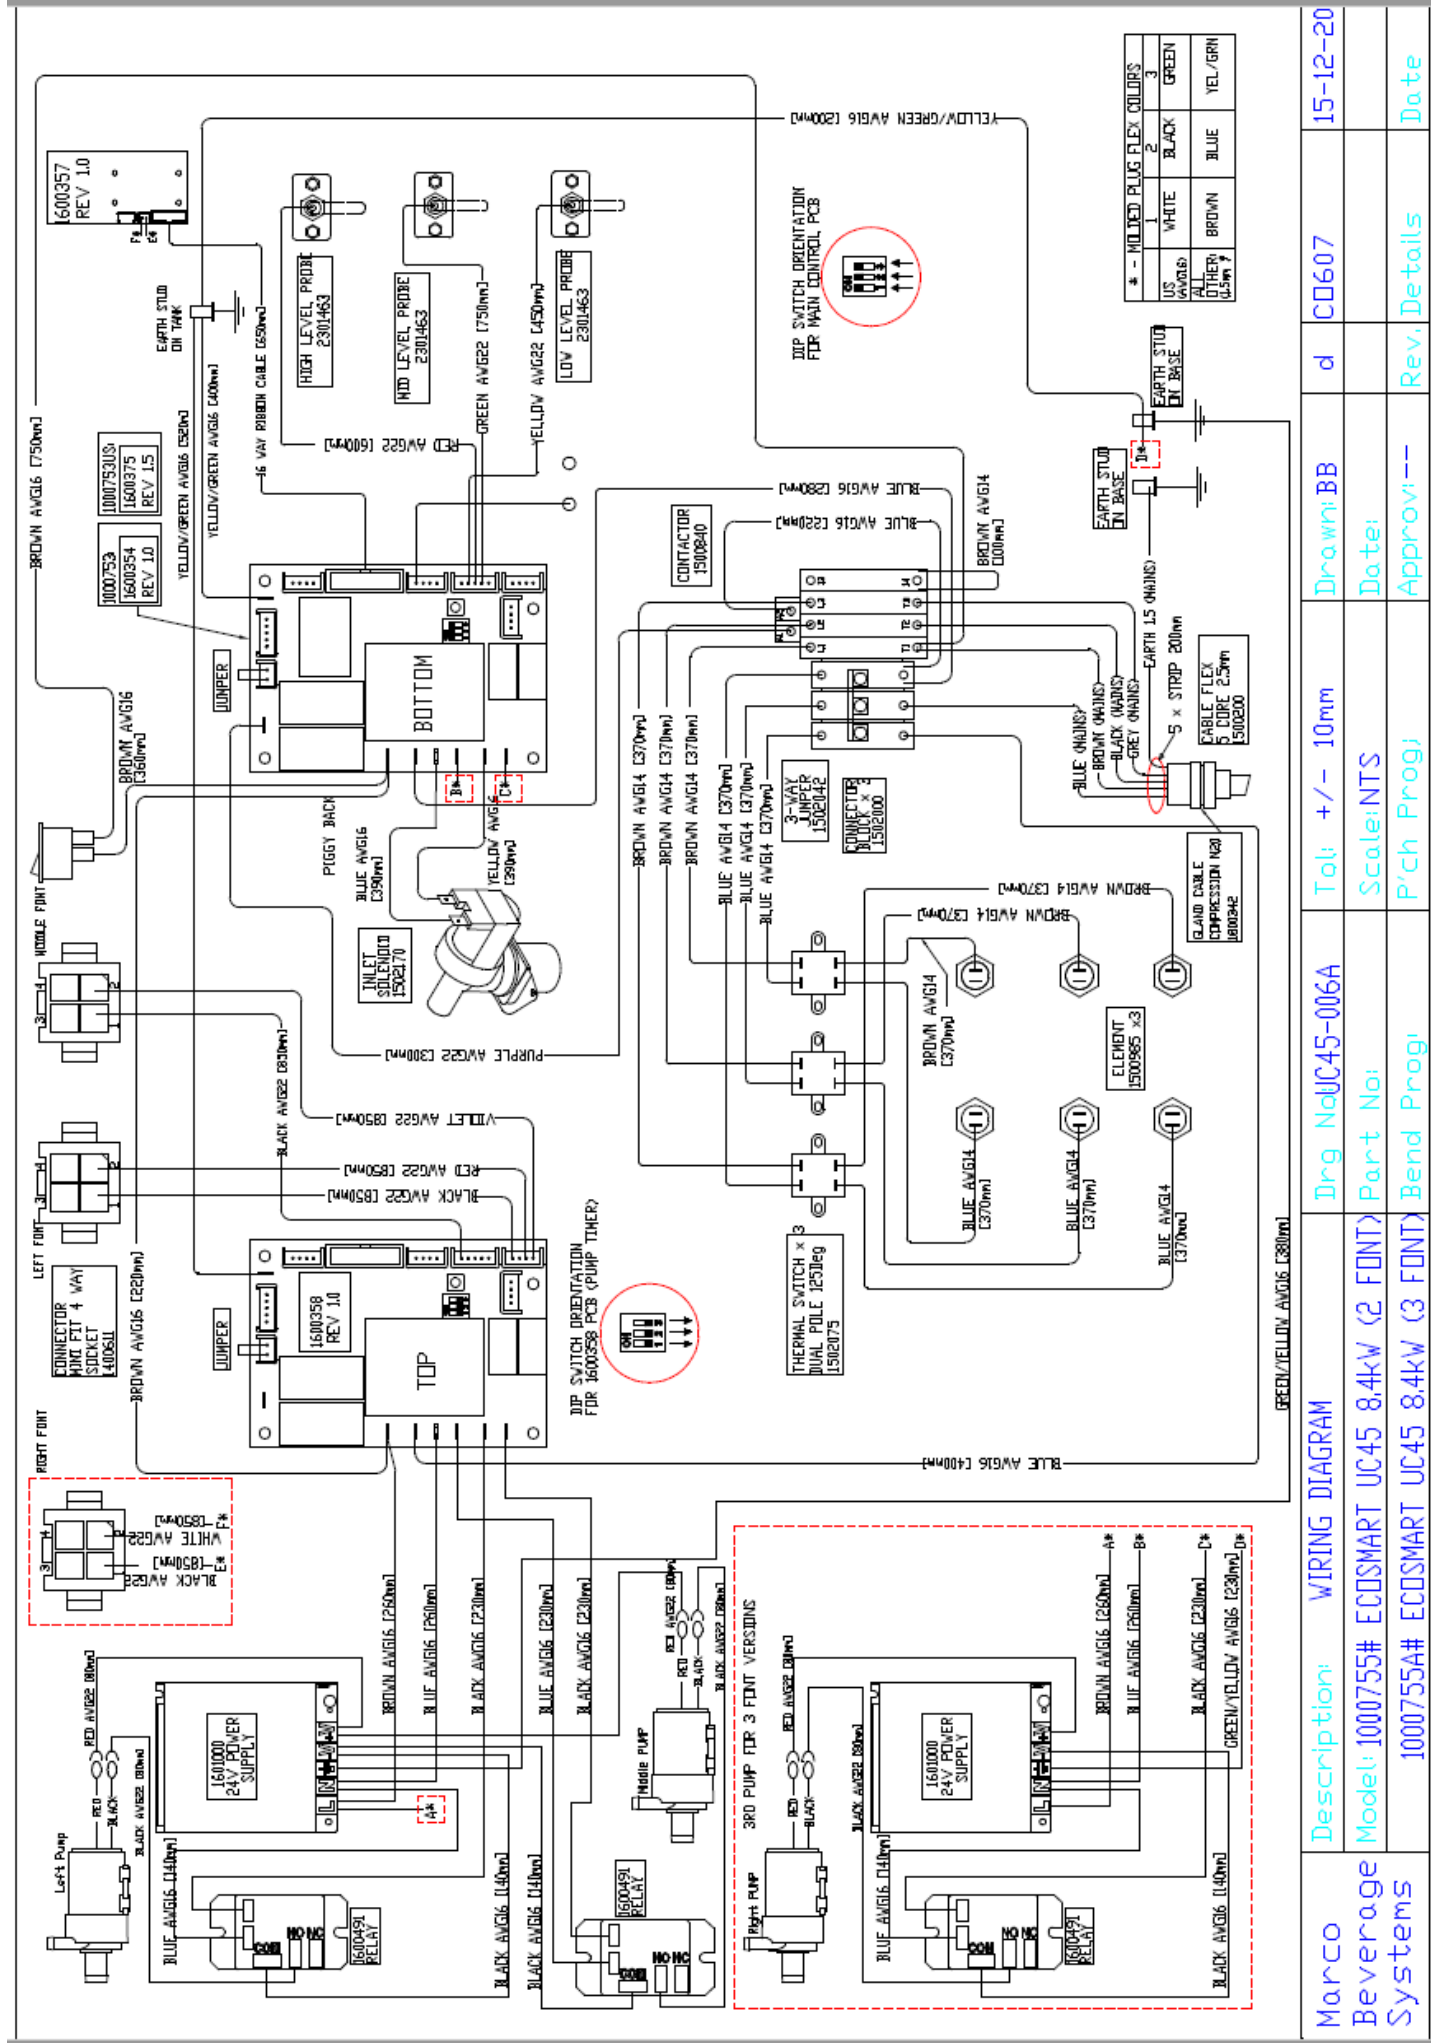


4.12. Wiring Diagram: 1000746

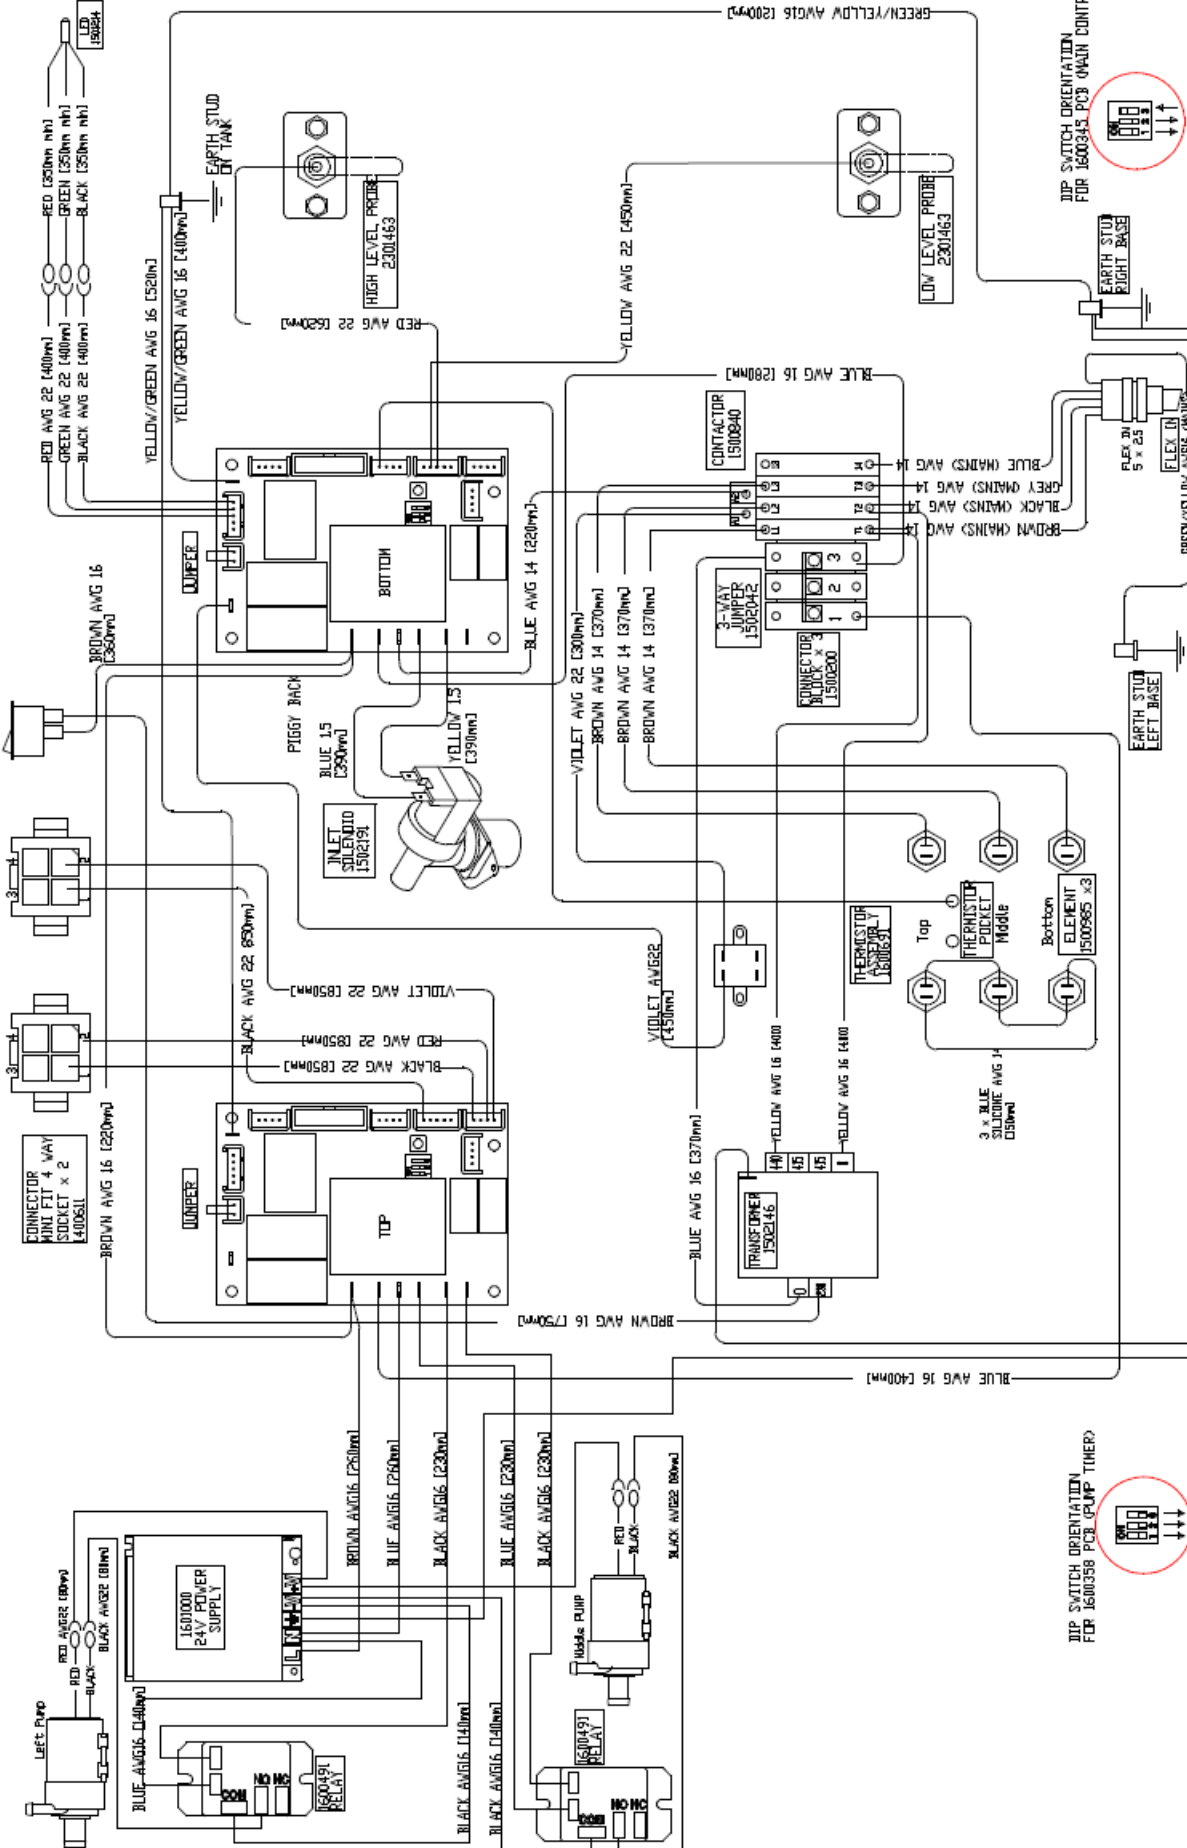

Marco Beverage Systems	Description: WIRING DIAGRAM	Dwg No: UC45-010A	Tol: +/- 10mm	Drawing: BB	d	CD 607	05-01-21
	Model: 1000746 ECOBOILER UC45 8.4kW Marine	Part No:	Scale: NTS	Date:			
		Bend Prog:	P'ch Prog:	Approv: --	Rev:	Details	Date

4.14 Spare Parts

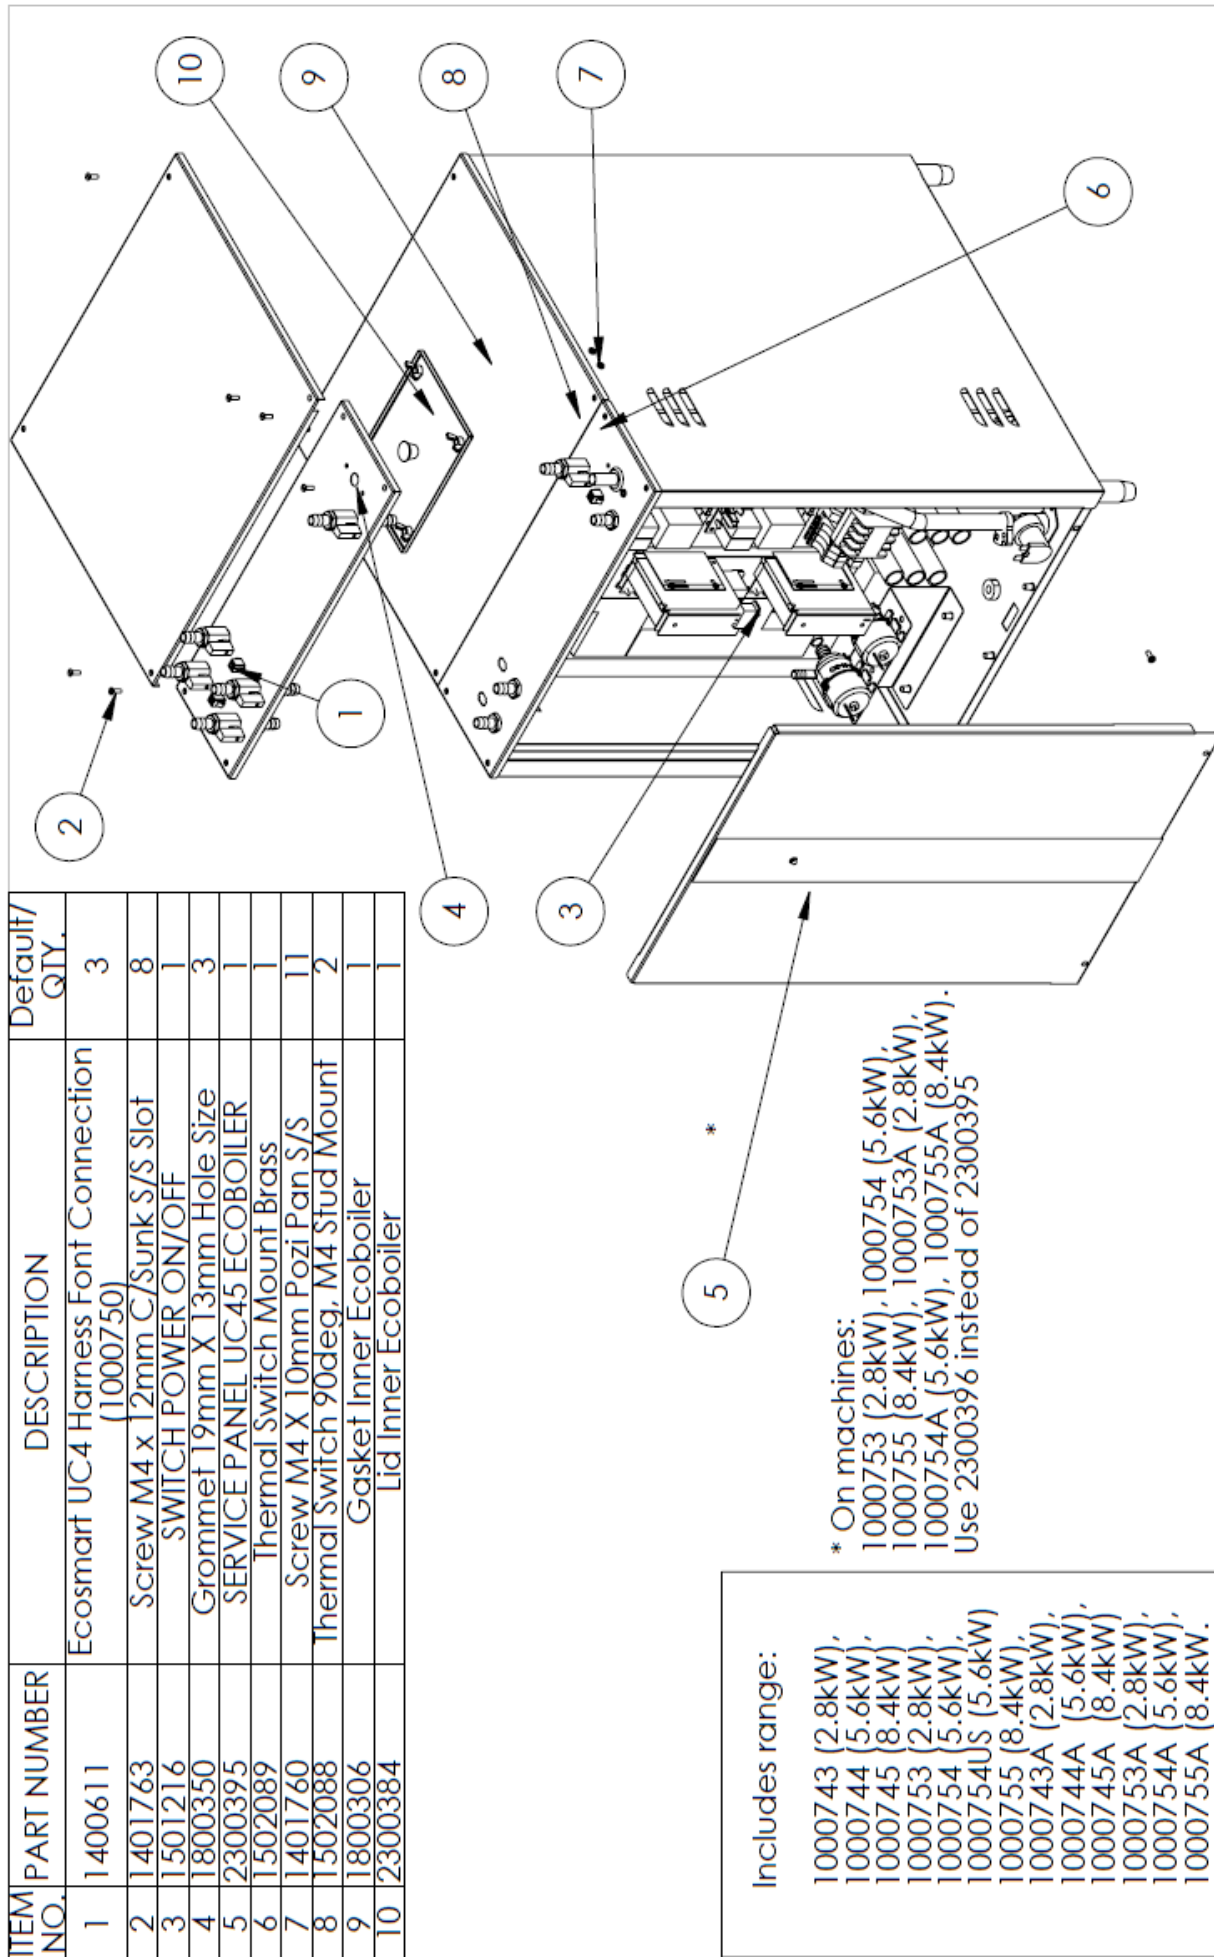

ITEM NO.	PART NUMBER	DESCRIPTION	Default/ QTY.
1	1400611	Ecosmart UC4 Harness Font Connection (1000750)	3
2	1401763	Screw M4 x 12mm C/Sunk S/S Slot	8
3	1501216	SWITCH POWER ON/OFF	1
4	1800350	Grommet 19mm X 13mm Hole Size	3
5	2300395	SERVICE PANEL UC45 ECOBOILER	1
6	1502089	Thermal Switch Mount Brass	1
7	1401760	Screw M4 X 10mm Pozz Pan S/S	11
8	1502088	Thermal Switch 90deg. M4 Stud Mount	2
9	1800306	Gasket Inner EcoBoiler	1
10	2300384	Lid Inner EcoBoiler	1

Includes range:

1000743 (2.8kW),
1000744 (5.6kW),
1000745 (8.4kW),
1000753 (2.8kW),
1000754 (5.6kW),
1000754US (5.6kW),
1000755 (8.4kW),
1000743A (2.8kW),
1000744A (5.6kW),
1000745A (8.4kW),
1000753A (2.8kW),
1000754A (5.6kW),
1000755A (8.4kW).



UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE IN MILLIMETERS
TOLERANCES: LINEAR: $\pm 0.2\text{mm}$

DESCRIPTION: External exploded UC45

DWG NO.: UC45-020A

MATERIAL: N/A

DRAWN BY: BB

APPROVED BY: DW

REVISION: d

18/01/21

18/02/21


CO: 607

SCALE: 1:1

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	1501216	SWITCH POWER ON/OFF	1
2	2300463	Probe Assembly (40mm Tab)	3
3	1502075	Thermal Switch Dual Pole 125Deg	3
4	1601000	Power Supply 24V Dc	2
5	1600491	Relay 220V 40A	3
6	1500985	ELEMENT 2.8kW 230V	3
8	1502000	TERMINAL 6mm	3
9	1502190	VALVE INLET SOLENOID 240V 3/4"	1
5	1500840	CONTACTOR B&J 240V AC	1
11	1600345	P.C.B. Ecoboiler Control (1000740)	1
12	1600345	PCB Pump Timer	1
13	1600366K3D	Retro Fit Kit 3 Pump (machines before S/N 0717xxxx)	1
14	1600366K	Retrofit Kit 2 pump (machines before S/N 0717xxxx)	2
15/15a	1501562	Pump Muller 42V Mini	3
15a	1501563K	Muller Pump Spares kit B (ECO UC4, UC10 & UC45)	3





Includes range:
1000743 (2.8kW),
1000744 (5.6kW),
1000744US (5.6kW),
1000745 (8.4kW),
1000746 (5.6kW),
1000753 (2.8kW),
1000754 (5.6kW),
1000754US (5.6kW),
1000755 (8.4kW),
1000743A (2.8kW),
1000744A (5.6kW),
1000745A (8.4kW),
1000753A (2.8kW),
1000754A (5.6kW),
1000755A (8.4kW),
1000746 (8.4kW Marine)

***NOTE:**
On MACHINES
1000753 (2.8kW), 1000754 (5.6kW),
1000755 (8.4kW), 1000753A (2.8kW),
1000754A (5.6kW), 1000755A (8.4kW)
USE PCB:
P/N: 1600354 P.C.B Eco Slave
ON ALL US VARIANTS USE
P/N: 1600375

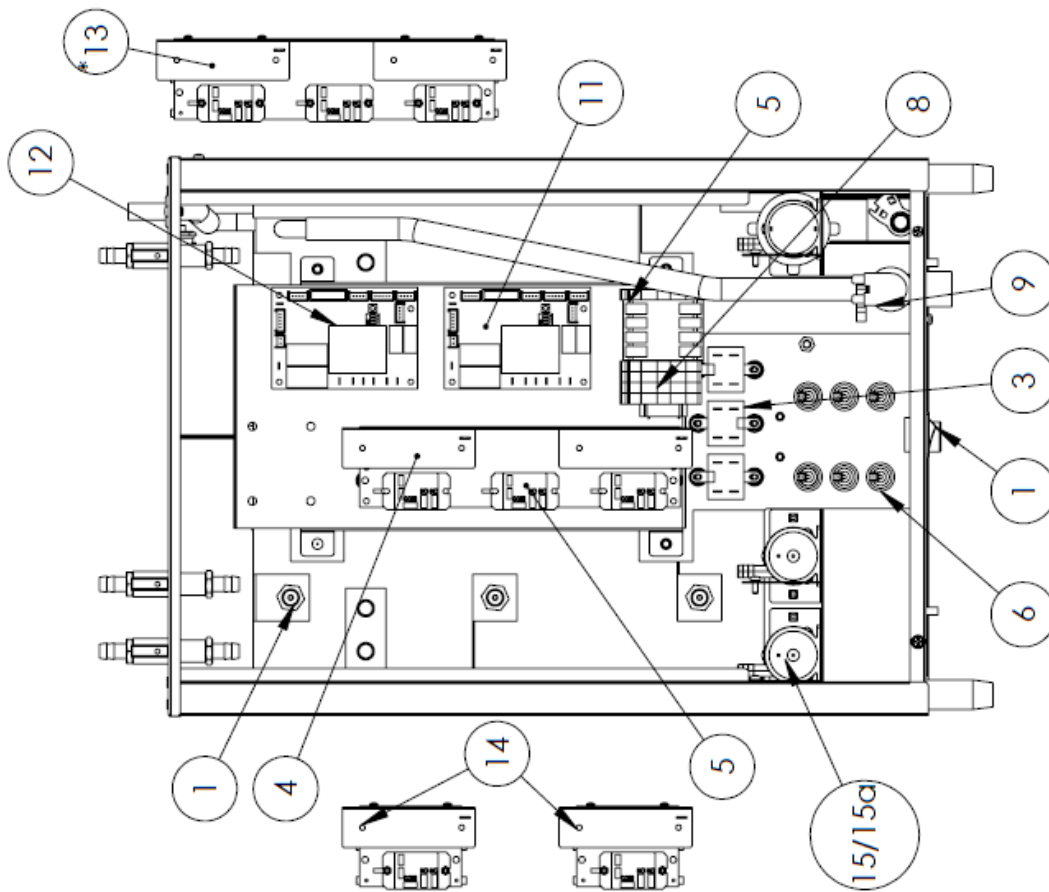

	UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETERS TOLERANCES: LINEAR: $\pm 0.2\text{mm}$ ANGULAR: $\pm 0.5^\circ$	DESCRIPTION: Internal Exploded UC45	DRAWN BY: BB	18/01/20
		DWG NO.: UC45-021A	APPROVED BY: DW	18/01/20
		MATERIAL: N/A	REVISION: h CO: 607	SCALE: 1:5

4.15 1501563K Muller Pump Spares kit B (ECO UC4, UC10 & UC45)

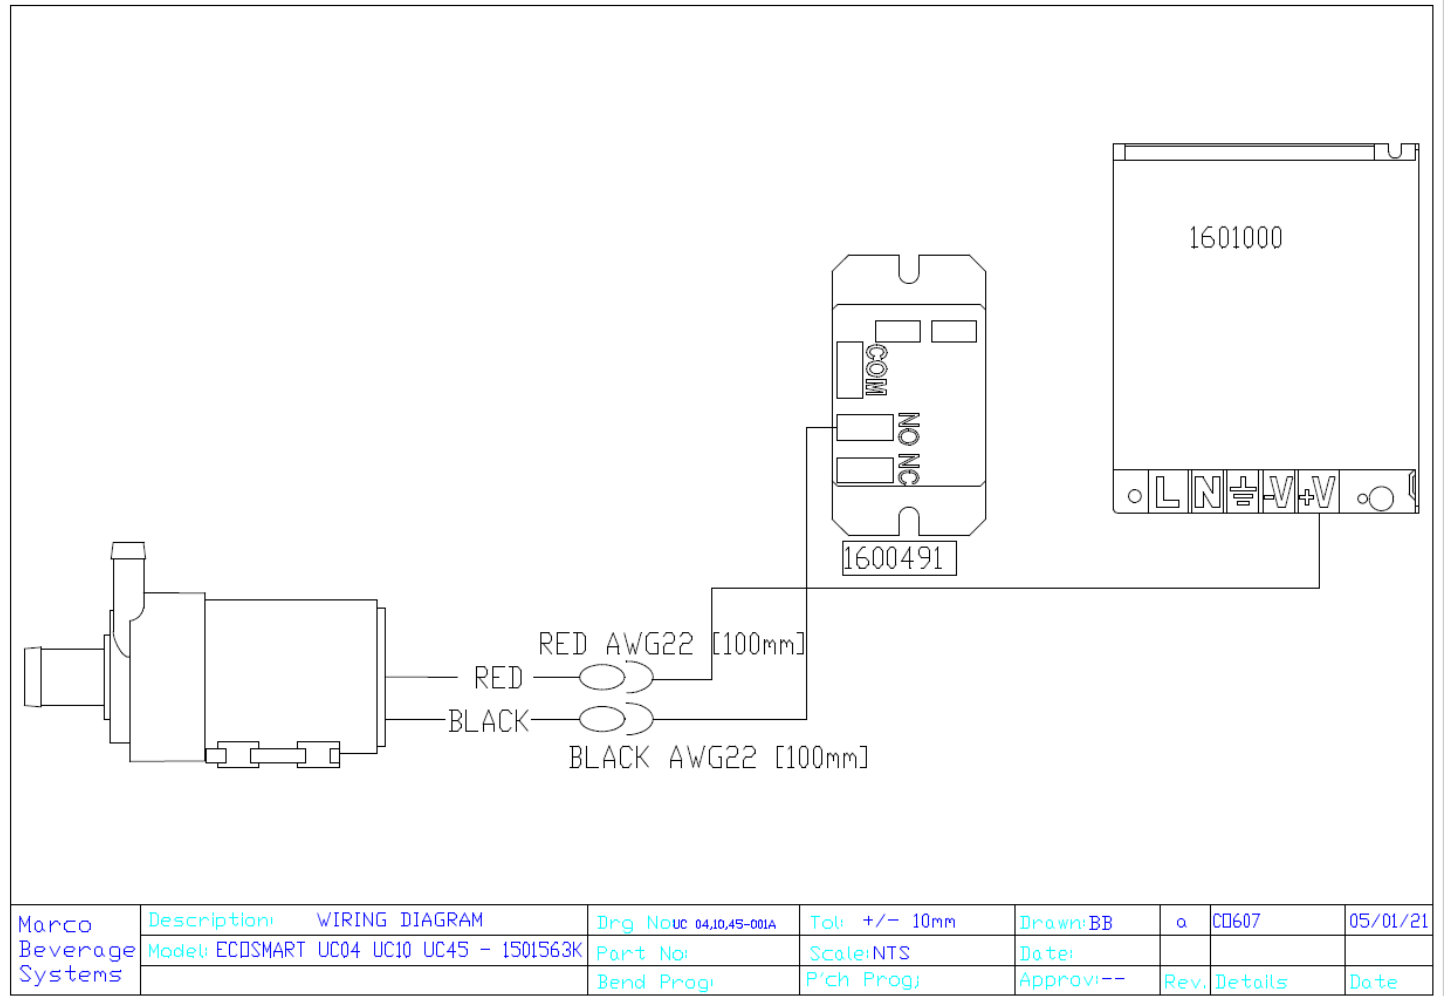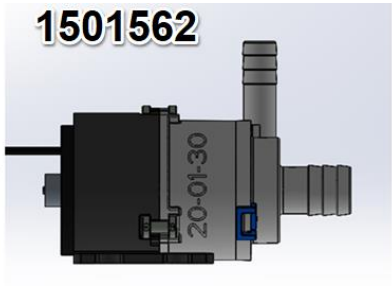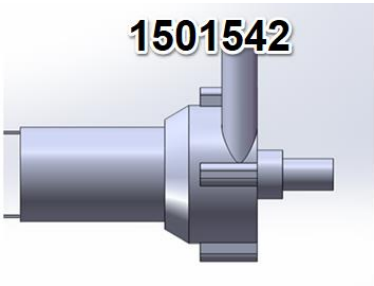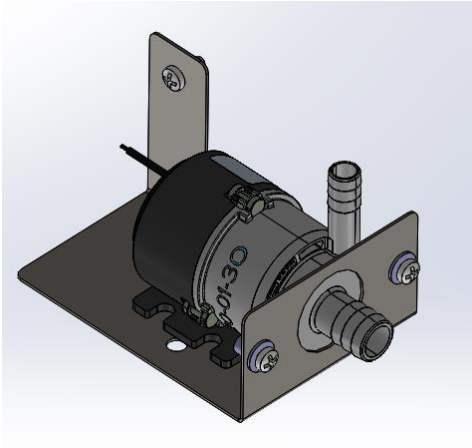

4.13. Spare Parts List

Part Number	Description	Model Variant						
		1000743/A (2.8kW)	1000744/A (5.6kW)	1000745/A (8.4kW)	1000753/A (2.8kW)	1000754/A (5.6kW)	1000755/A (8.4kW)	
1500985	Element 2.8kW 230V	X	X	X	X	X	X	X
1501430	Moulded Plug and cord	X			X			
1501484	Plug Molded NEMA L6-30P							X
1501562	Pump Muller 24V Mini	X	X	X	X	X	X	X
1502075	Thermal Switch Dual Pole 125Deg	X	X	X	X	X	X	X
1502191	Valve Inlet Solenoid 240V - 2L/min	X	X	X	X	X	X	X
1501216	SWITCH POWER ON/OFF	X	X	X	X	X	X	X
1500840	Contacteur B&J 240V AC	X	X	X	X	X	X	X
1502000	1502000	X	X	X	X	X	X	X
1600345	P.C.B. Ecoboiler Control	X	X	X				X
1600354	P.C.B Eco Slave				X	X	X	
1600358	P.C.B. Pump timer	X	X	X	X	X	X	X
1600357K	P.C.B 357 Spares Kit				X	X	X	
1600366	P.C.B 24V DC Pump Supply	X	X	X	X	X	X	X
1600691	Thermistor Assembly	X	X	X	X	X	X	X
1800306	Gasket Inner Ecoboiler	X	X	X	X	X	X	X
2300395	Service Panel UC45 Ecoboiler	X	X	X				X
2300396	Service Panel UC45 Ecosmart				X	X	X	
1900675	Label UC Ecosmart 45L				X	X	X	
1900676	Label UC Ecoboiler 45L	X	X	X				X
2300384	Lid Inner Ecoboiler	X	X	X	X	X	X	X
2301463	Level Probe Assembly	X	X	X	X	X	X	X
8800121	Descale Box – 6 Packs	X	X	X	X	X	X	X

